



Illustrated Parts List

Model Series

10T500

TYPE NUMBERS
0001 through 3840.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	3
Gasket Set - Valve	3
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	7
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.






1058 OPERATOR'S MANUAL









1330 REPAIR MANUAL




1036 EMISSIONS LABEL

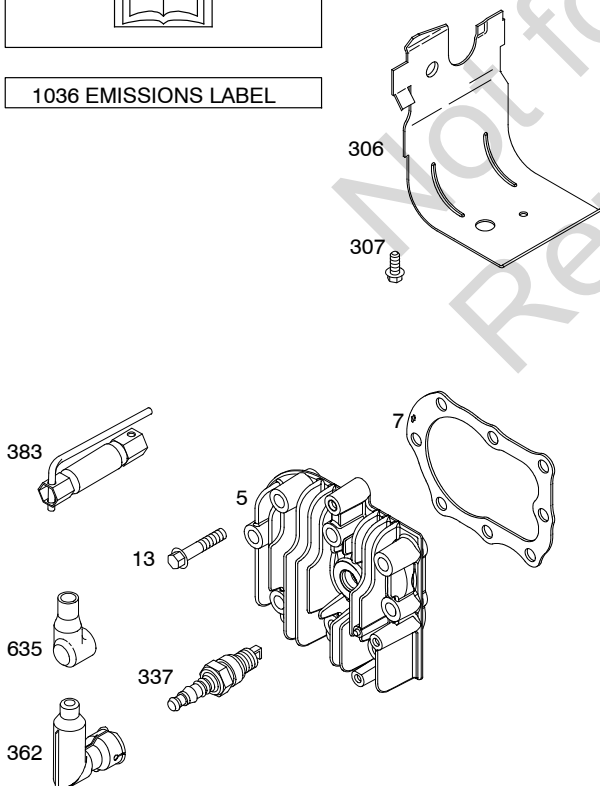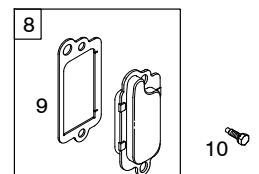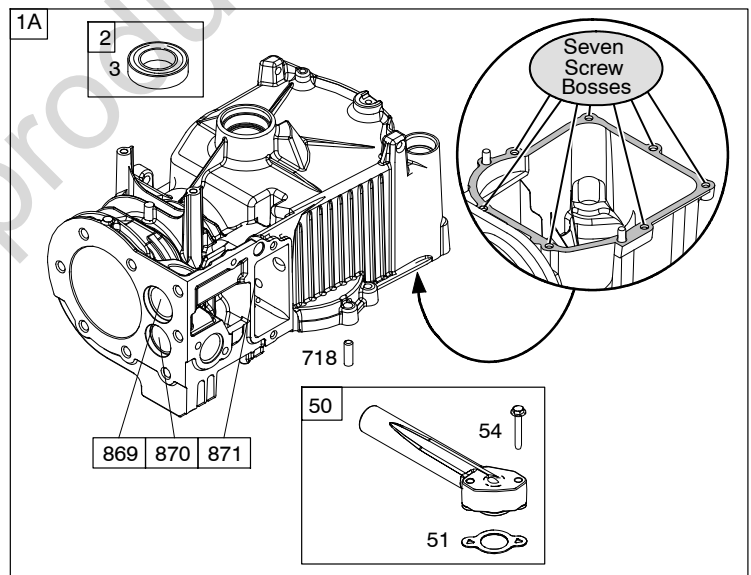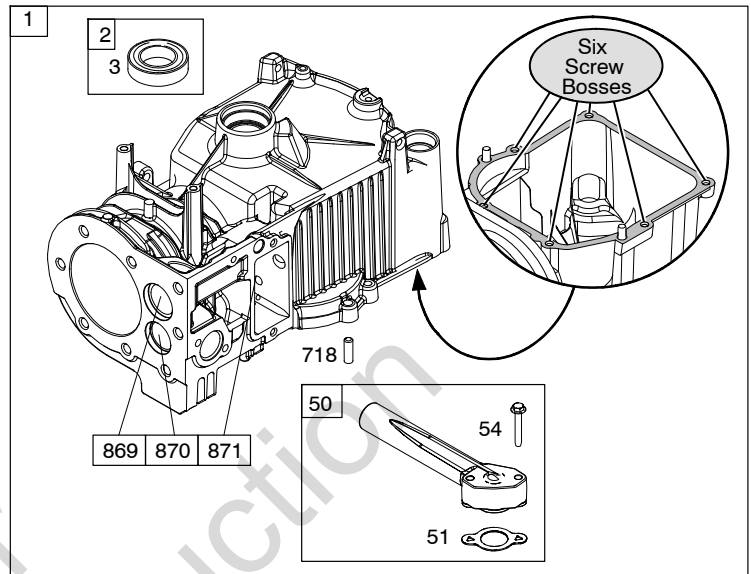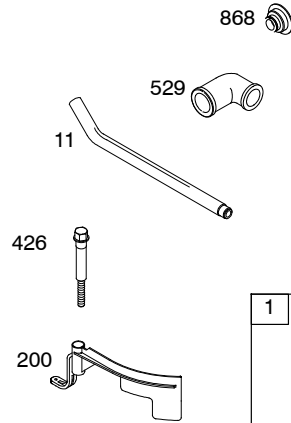


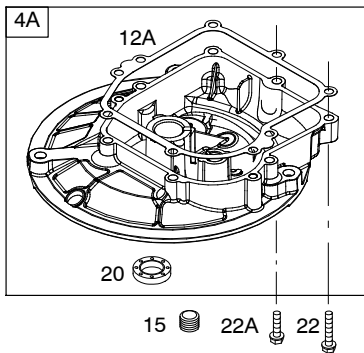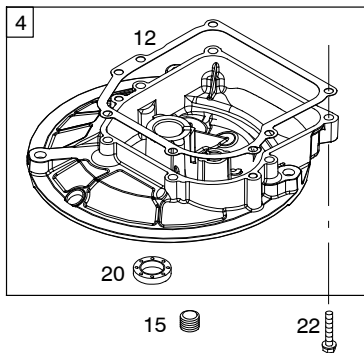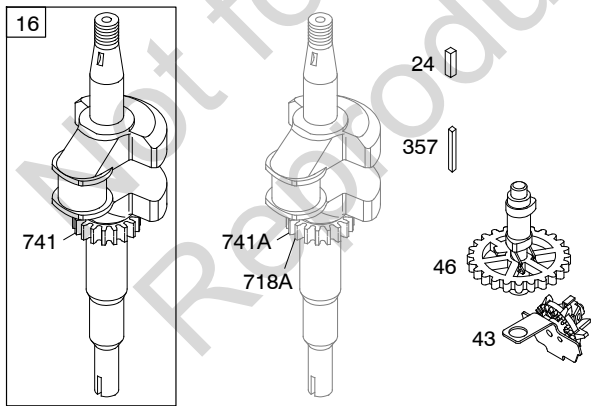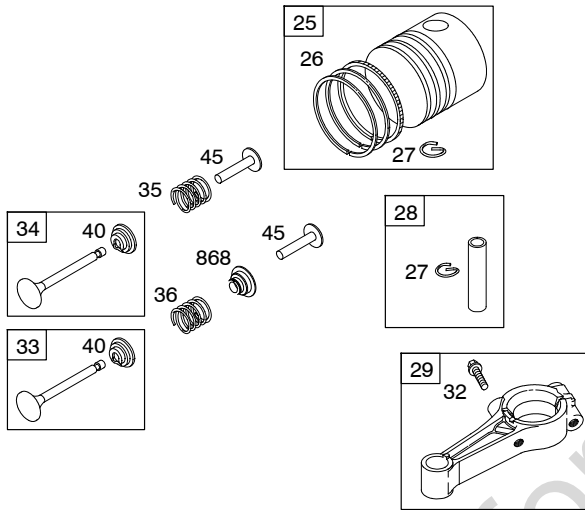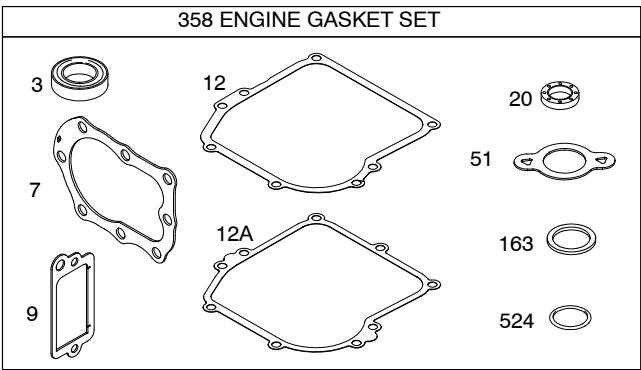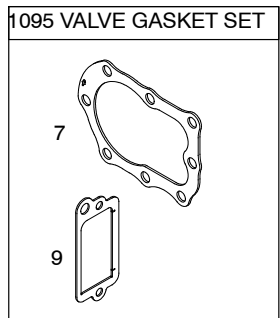


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3718-3 Assemblies include all parts shown in frames.

11/29/2012










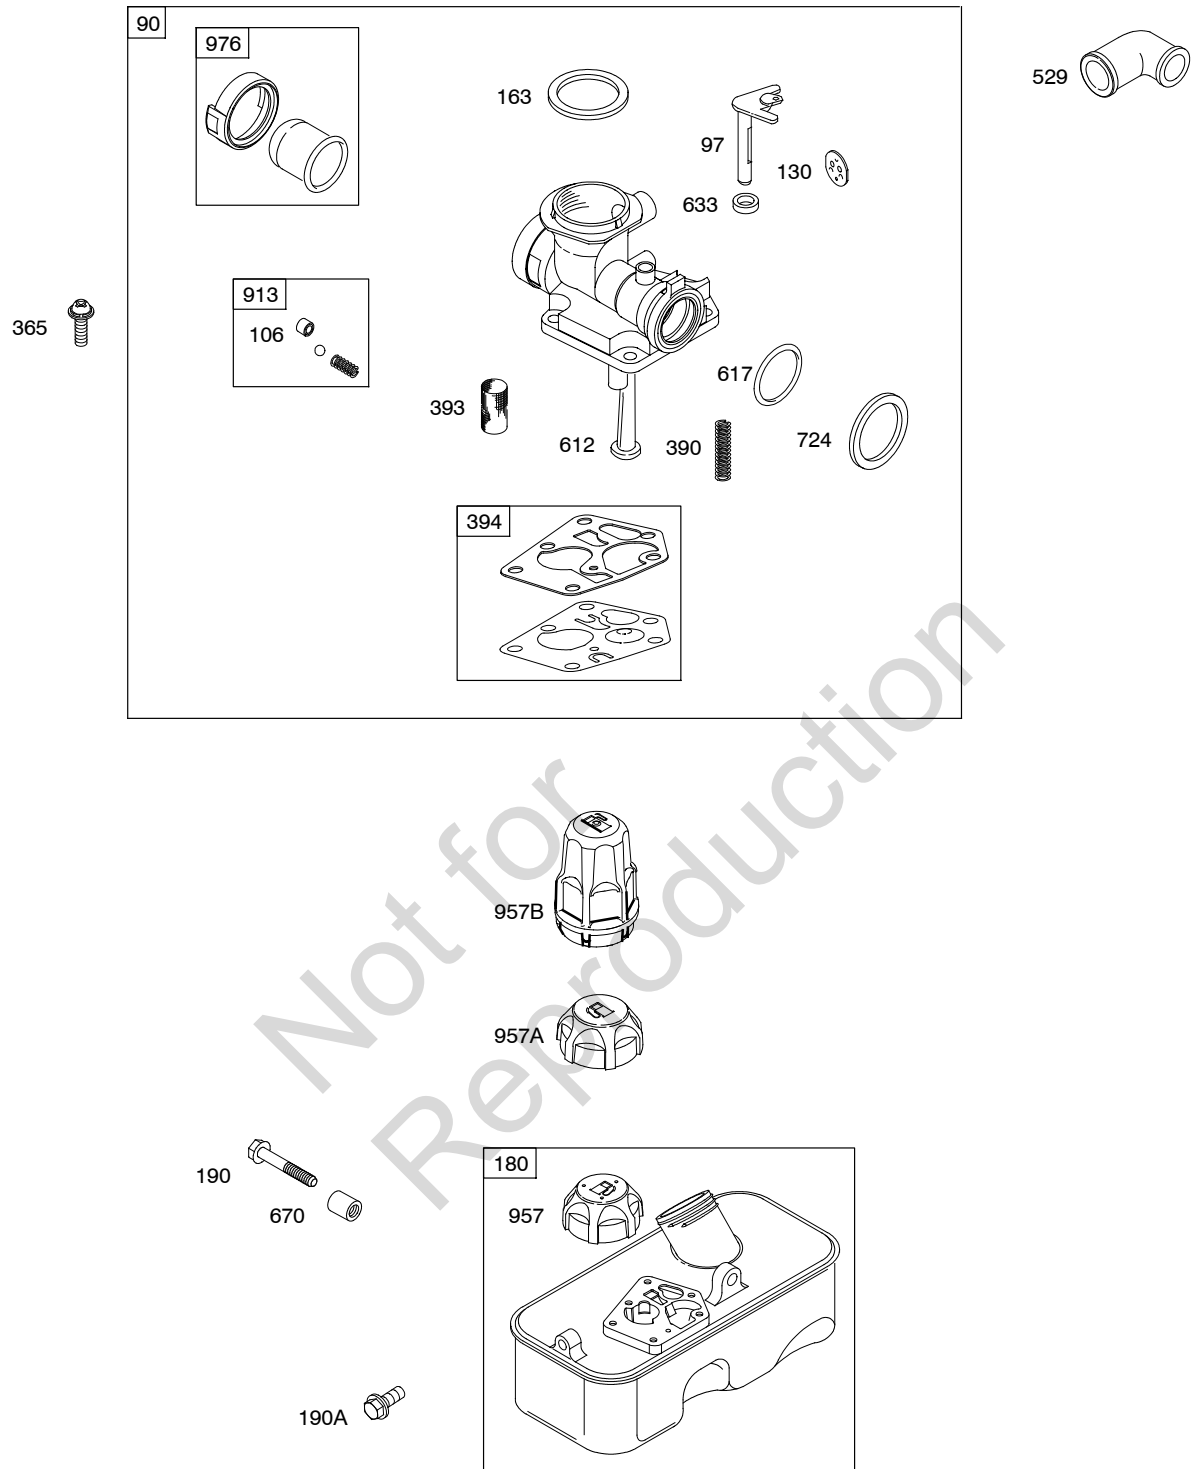


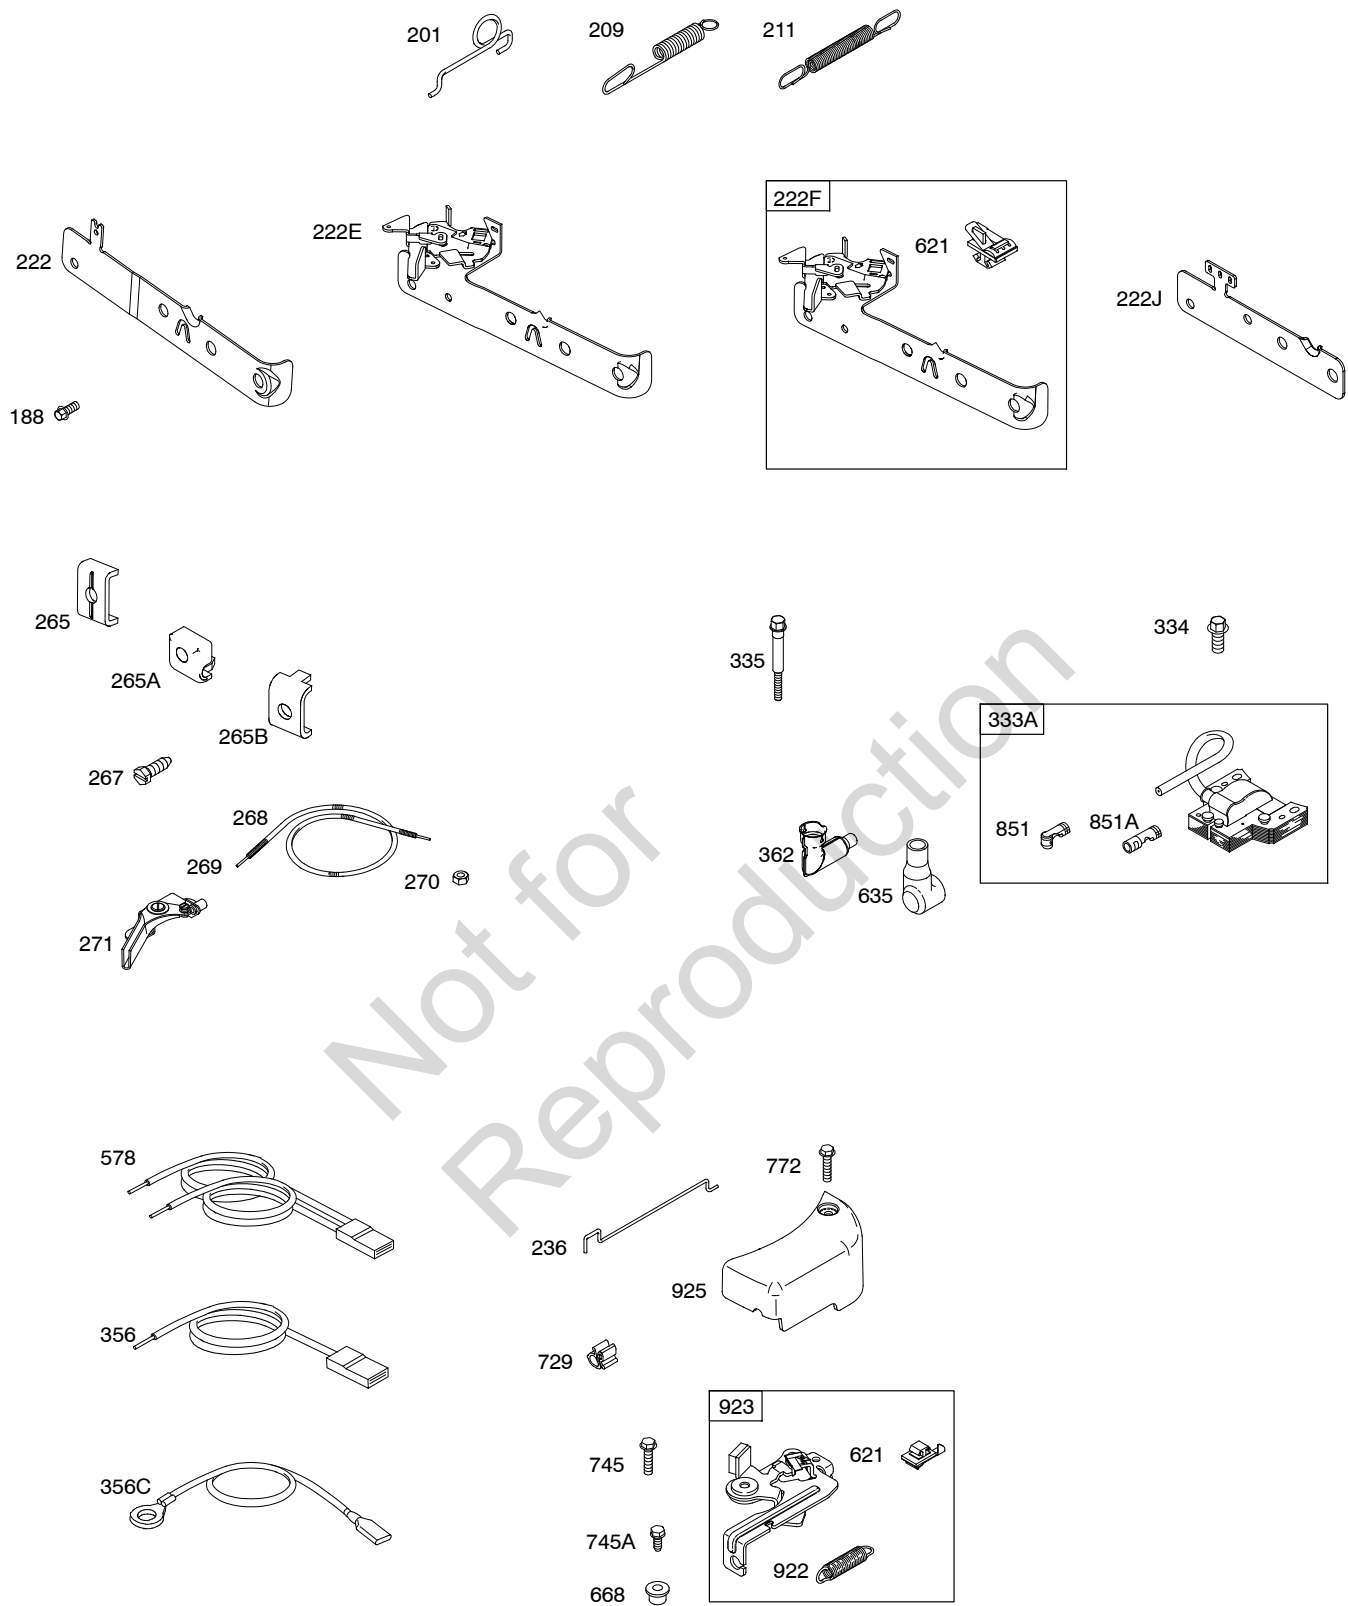

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3718-5 Assemblies include all parts shown in frames. 11/29/2012

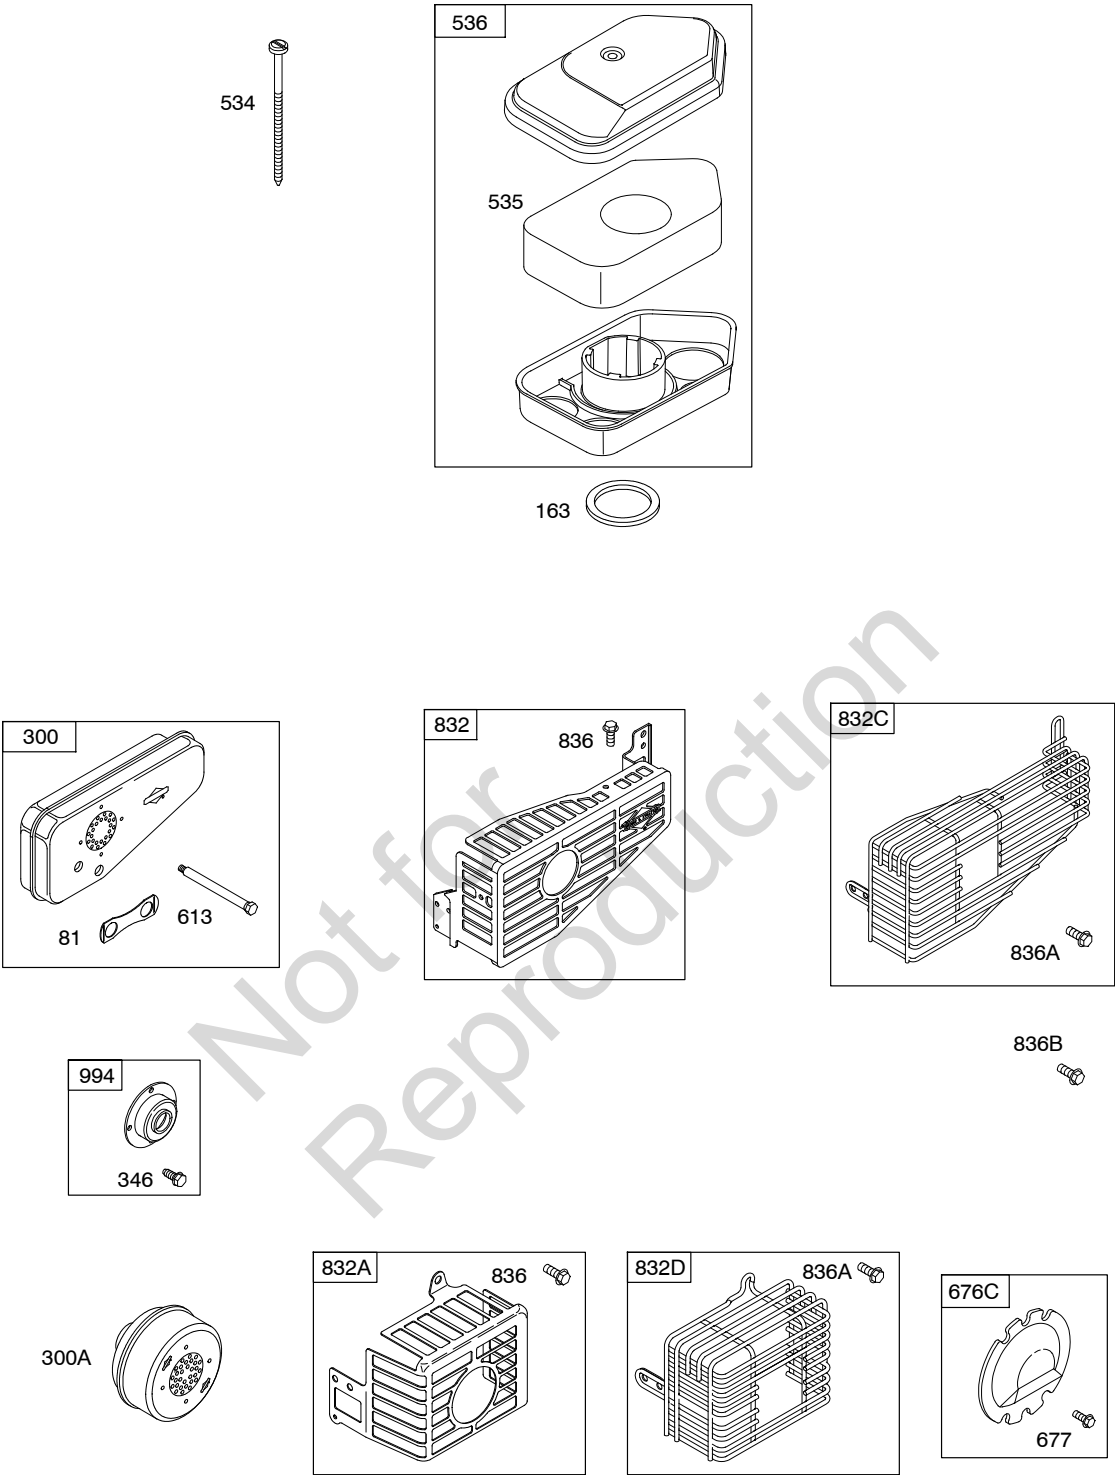

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

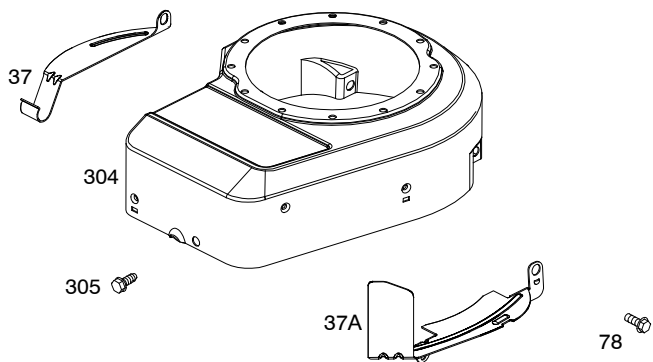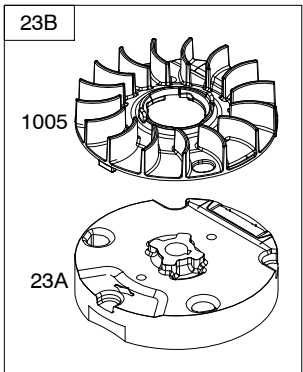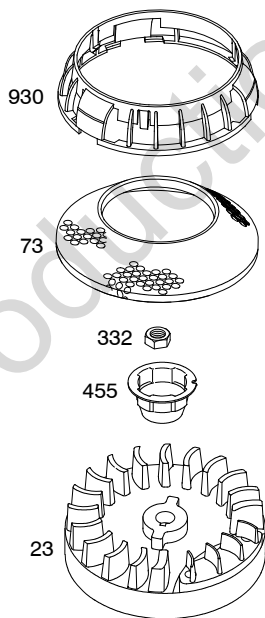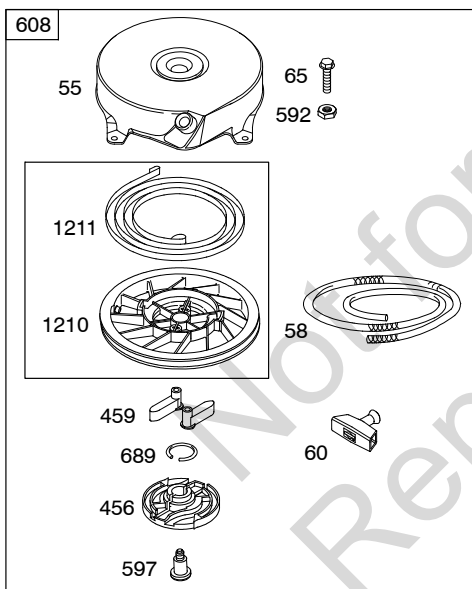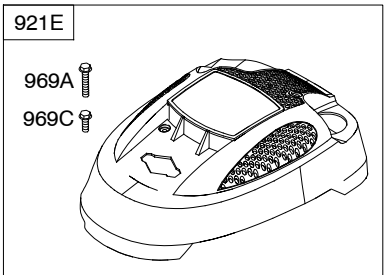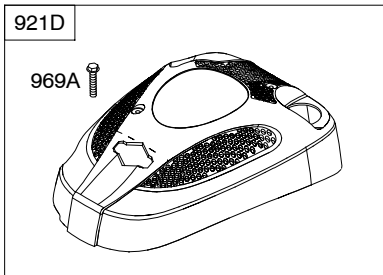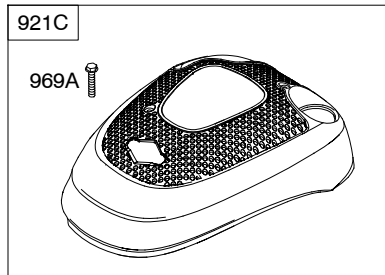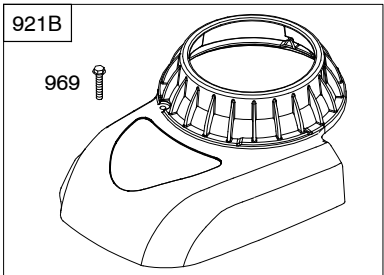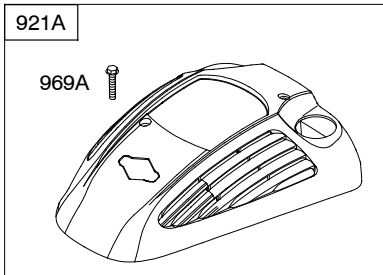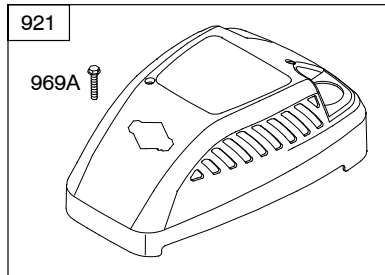

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	699653	Cylinder Assembly (Engines with 6 Sump Screws)	15	691680	Plug-Oil Drain	22	692551	Screw (Crankcase Cover/Sump)	
1A	590772	Cylinder Assembly (Engines with 7 Sump Screws)	16	796217	Crankshaft	22A	590763	Screw (Crankcase Cover/Sump)	
2	796961	Kit-Bushing/Seal (Magneto Side)			----- Note -----	23	799682	Flywheel	
3	299819S	Seal-Oil (Magneto Side)		796216	Crankshaft Used on Type No(s). 0001, 0002, 0100, 0111, 0112, 0113, 0114, 0117, 0120, 0136, 0139, 0141, 0142, 0143, 0144, 0153, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0171, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0183, 0184, 0186, 0187, 0188, 0189, 0195, 0205, 0207, 0208, 0210, 0215, 0217, 0218, 0220, 0224, 0246, 0253, 0254, 0255, 0257, 0259, 0262, 0263, 0267, 1111, 1486, 2110, 3111, 3120, 3139, 3142, 3143, 3144, 3180, 3184, 3210, 3218, 3220, 3224, 3257, 3263.	----- Note -----			Flywheel (For Replacement Flywheel, Order Reference 23B) Used on Type No(s). 0002, 0113, 0116, 0120, 0121, 0123, 0126, 0130, 0133, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0178, 0186, 0195, 0197, 0204, 0206, 0212, 0213, 0214, 0215, 0216, 0217, 0220, 0224, 0254, 0255, 0267, 0550, 3116, 3120, 3133, 3143, 3146, 3212, 3220, 3224.
4	798264	Sump-Engine (Engines with 6 Sump Screws)				23A	592003	Flywheel	
4A	590569	Sump-Engine (Engines with 7 Sump Screws)				23B	592370	Flywheel	
5	790169	Head-Cylinder				24	222698S	Key-Flywheel	
7	698717	Gasket-Cylinder Head				25	795691	Piston Assembly (Standard)	
8	791781	Breather Assembly						----- Note -----	
9	695890	Gasket-Breather						795689 Piston Assembly (.020" Oversize)	
10	691666	Screw (Breather Assembly)				26	795690	Ring Set (Standard)	
11	691245	Tube-Breather						----- Note -----	
12	692218	Gasket-Crankcase (.015" Thick) (Standard) (Engines with 6 Sump Screws)						795688 Ring Set (.020" Oversize)	
		----- Note -----							
		270895 Gasket- Crankcase (.005" Thick) (Engines with 6 Sump Screws)							
		270896 Gasket- Crankcase (.009" Thick) (Engines with 6 Sump Screws)							
12A	799587	Gasket-Crankcase (Engines with 7 Sump Screws)							
13	691640	Screw (Cylinder Head)	20	391483S	Seal-Oil (PTO Side)				

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27	691588	Lock-Piston Pin	55	692144	Housing-Rewind Starter	73	699850	Screen-Rotating
28	699659	Pin-Piston (Standard)	58	697316	Rope-Starter (88 5/8" Long)	78	692198	Screw (Flywheel Guard)
29	699654	Rod-Connecting	----- Note -----			81	691179	Lock-Muffler Screw
32	691664	Screw (Connecting Rod)				90	795477	Carburetor
33	296676	Valve-Exhaust	691921 Rope-Starter (70" Long) Used on Type No(s). 0002, 0113, 0114, 0116, 0123, 0126, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0224, 0254, 0255, 0267, 0550, 3116, 3133, 3143, 3212, 3220, 3224.			97	691931	Shaft-Throttle
34	296677	Valve-Intake				106	691901	Seat-Inlet
35	690520	Spring-Valve (Intake)				130	691190	Valve-Throttle
36	690520	Spring-Valve (Exhaust)				163	271139S	Gasket-Air Cleaner
37	690482	Guard-Flywheel (Carburetor Side)				180	494406	Tank-Fuel
37A	691209	Guard-Flywheel (Muffler Side)				188	692198	Screw (Control Bracket)
40	692194	Retainer-Valve				190	691640	Screw (Fuel Tank) (1 3/4" Long)
43	698690	Slinger-Governor/Oil				190A	691108	Screw (Fuel Tank) (9/16" Long)
45	691762	Tappet-Valve				200	691912	Blade-Governor
46	691998	Camshaft				201	690347	Link-Air Vane
50	699644	Manifold-Intake	60	691915	Grip-Starter Rope			
51	699649	Gasket-Intake	65	690837	Screw (Rewind Starter)			
54	691111	Screw (Intake Manifold)						

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	690254	Spring-Governor ----- Note ----- 690254 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0833, 0998, 1000, 1111. 690254 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0998, 1111. 691297 Spring-Governor Used on Type No(s). 0002, 0100, 0115, 0116, 0126, 0150, 0161, 0162, 0186, 0215, 0222, 0224, 0250, 0255, 0260, 0263, 0457E1, 0495E1, 0500E1, 0501, 0965, 1041, 1264, 1303, 1316, 1414, 1486, 1542, 2028, 3116, 3150, 3224, 3260, 3263, 3414. 691297 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0457B1, 0495B1, 0500B1, 1022, 1023, 1053, 1058, 3764, 3838. 691297 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0457B1, 0495B1, 0500B1.			690251 Spring-Governor Used on Type No(s). 0114, 0117, 0127, 0136, 0139, 0140, 0141, 0142, 0144, 0145, 0177, 0183, 0184, 0199, 0205, 0207, 0208, 0209, 0210, 0256, 0257, 0262, 0265, 0764, 0838, 0840, 1096, 1336, 2034, 3127, 3139, 3140, 3142, 3144, 3145, 3184, 3210, 3257, 3336. 690251 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0869, 0931, 1056, 3840. 690251 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0869, 0931, 1000, 3764, 3838, 3840. 690250 Spring-Governor Used on Type No(s). 0121E1, 0133, 0204, 0213, 3133. 690250 Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0121B1. 690250 Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0121B1.			795160 Spring-Governor (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840. 691862 Spring-Governor Used on Type No(s). 0123, 0130, 0178, 0197, 0206, 0212, 0214, 0216, 0220, 0550, 3212, 3220. 211 691859 Spring-Governed Idle

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222		Bracket-Control (For Replacement Control Bracket, Order Reference 222J) (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.	222F	691445	Bracket-Control Used on Type No(s). 0002, 0113, 0114, 0115, 0116, 0117, 0120, 0123, 0126, 0127, 0130, 0133, 0139, 0140, 0142, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0183, 0184, 0186, 0195, 0197, 0200, 0206, 0210, 0212, 0213, 0214, 0215, 0216, 0217, 0218, 0220, 0222, 0224, 0254, 0255, 0257, 0260, 0262, 0267, 0550, 2028, 2034, 3116, 3118, 3120, 3127, 3133, 3139, 3140, 3142, 3143, 3146, 3147, 3184, 3210, 3212, 3218, 3220, 3224, 3257, 3260.	269	691026	Wire-Control (Cut To Required Length)
222E	691446	Bracket-Control ----- Note ----- 691446 Bracket- Control (Used Before Code Date 07092400). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0869, 0931, 0998, 1000, 1111, 3764, 3838, 3840. 691446 Bracket- Control (Used After Code Date 07111500). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.	222J	798686	Bracket-Control	270	691027	Nut (Control Wire Casing)
			236	591292	Link-Lockout	271	691028	Lever-Control
			265	692179	Clamp-Casing Used on Type No(s). 0002, 0116, 0126, 0142, 0144, 0145, 0166, 0183, 0184, 0224, 3116, 3142, 3144, 3145, 3184, 3224.	287	691002	Screw (Dipstick Tube)
			265A	690798	Clamp-Casing Used on Type No(s). 0100, 0117, 0120, 0132, 0139, 0140, 0150, 0162, 0179, 0195, 0198, 0199, 0200, 0205, 0207, 0208, 0209, 0213, 0215, 0218, 0220, 0256, 0264, 2011, 2028, 3120, 3139, 3140, 3150, 3218, 3220.	300	692307	Muffler (Super Lo Tone)
			265B	691024	Clamp-Casing	300A	394569S	Muffler (Round Lo Tone)
			267	691044	Screw (Casing Clamp)	304	694236	Housing-Blower (Compliance Engines) ----- Note ----- 694051 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0002, 0113, 0114, 0115, 0116, 0117, 0120, 0121, 0123, 0126, 0127, 0130, 0133, 0142, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0183, 0184, 0186, 0195, 0197, 0200, 0204, 0206, 0210, 0212, 0213, 0214, 0215, 0216, 0217, 0218, 0220, 0222, 0224, 0254, 0255, 0257, 0260, 0262, 0267, 0550, 2028, 2034, 3116, 3120, 3127, 3133, 3142, 3143, 3146, 3184, 3210, 3212, 3218, 3220, 3224, 3257, 3260.
			268	691025	Casing-Control Wire (Cut To Required Length)	305	692198	Screw (Blower Housing)
						306	690400	Shield-Cylinder
						307	690345	Screw (Cylinder Shield)
						332	690662	Nut (Flywheel)
						333A	591420	Armature-Magneto
						334	691061	Screw (Magneto Armature) (1" Long)

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
335	691107	Screw (Magneto Armature With Air Vane) (1 15/16" Long)	394	795083	Diaphragm-Carburetor	608	499706	Starter-Rewind (88 5/8" Rope)
337	796112S	Plug-Spark ----- Note ----- 697451 Plug-Spark Used on Type No(s). 0100, 0115, 0117, 0120B1, 0127, 0136, 0141, 0144, 0145, 0150, 0153, 0155, 0157, 0158, 0161, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0183, 0184, 0210, 0246, 0250, 0251, 0252, 0257, 0260, 0262, 0263, 0208, 2034, 2110, 3127, 3144, 3145, 3150, 3184, 3210, 3257, 3260, 3263.	426	691107	Screw (Governor Blade)			----- Note ----- 690101 Starter- Rewind (70" Rope) Used on Type No(s). 0002, 0113, 0114, 0116, 0123, 0126, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0224, 0254, 0255, 0267, 0550, 3116, 3133, 3143, 3212, 3220, 3224.
346	690661	Screw (Spark Arrester) Used on Type No(s). 0222, 0833, 3833.	455	691236	Cup-Flywheel	612	496046S	Tube-Pick Up
356	692390	Wire-Stop	456	692299	Plate-Pawl Friction	613	691413	Screw (Muffler)
356C	793399	Wire-Stop	459	281505S	Pawl-Ratchet	617	270344S	Seal-O Ring (Intake Manifold)
357	692191	Key-Drive Pulley Used on Type No(s). 0197.	523	692040	Dipstick	621	692310	Switch-Stop
358	590777	Gasket Set-Engine	523A	691913	Dipstick Used on Type No(s). 0100, 0113, 0114, 0116, 0121, 0133, 0153, 0155, 0157, 0161, 0162, 0166, 0174, 0176, 0178, 0179, 0189, 0190, 0197, 0198, 0199, 0203, 0204, 0205, 0207, 0208, 0209, 0212, 0213, 0215, 0216, 0217, 0221, 0224, 0246, 0250, 0251, 0254, 0255, 0267, 0457, 0501, 0965, 2027, 2034, 3116, 3133, 3203, 3212, 3224.	633	691321	Seal-Choke/Throttle Shaft (Throttle)
362	793351	Shield-Spark Plug	524	691876	Seal-Dipstick Tube	635	66538S	Boot-Spark Plug
363	19069	Puller-Flywheel	525	691320	Tube-Dipstick	668	692889	Spacer
365	790029	Screw (Carburetor)	529	692189	Grommet	670	691633	Spacer-Fuel Tank
383	89838S	Wrench-Spark Plug	534	691417	Screw (Air Cleaner)	676C	393756	Deflector-Muffler
390	691839	Spring-Choke Diaphragm	535	698369	Filter-Air Cleaner Foam	677	690661	Screw (Muffler Deflector)
393	691837	Screen-Carburetor	536	698472	Cleaner-Air	689	691855	Spring-Friction
			578	398153	Wire Assembly ----- Note ----- 590800 Wire Assembly Used on Type No(s). 3118, 3147.	718	690959	Pin-Locating (Cylinder)
			592	690800	Nut (Rewind Starter)	718A	499047	Pin-Locating (Crankshaft)
			597	691696	Screw (Pawl Friction Plate)	724	697478	Retainer-Seal
						729	690586	Clip-Wire

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
741	796210	Gear-Timing (Plastic)	842	691870	Seal-O Ring (Dipstick Tube)	921C	792273	Cover-Blower Housing Used on Type No(s). 0500, 1023, 1041.
741	691805	Gear-Timing (Metal)	847	691440	Dipstick/Tube Assembly	921D	795397	Cover-Blower Housing Used on Type No(s). 0115, 0147, 0220, 0260, 0265, 3147, 3220, 3260.
745	691146	Screw (Brake) (7/8" Long)	851	493880S	Terminal-Spark Plug	921E	796066	Cover-Blower Housing Used on Type No(s). 0210.
745A	690859	Screw (Brake) (1/2" Long)	851A	692424	Terminal-Spark Plug	922	692135	Spring-Brake
772	691111	Screw (Linkage Cover)	868	697338	Seal-Valve	923	691487	Brake
832	699299	Guard-Muffler (Super Lo Tone) Used on Type No(s). 0100, 0120B1, 0127, 0144, 0145, 0263, 3127, 3144, 3145, 3263.	869	699641	Seat-Valve (Intake)	925	691349	Cover-Linkage
832A	699670	Guard-Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0206, 0216, 0250, 0550.	870	699642	Seat-Valve (Exhaust)	930	691348	Guard-Rewind
832C	790743	Guard-Muffler	871	699643	Bushing-Valve Guide (Exhaust)	957	497929S	Cap-Fuel Tank
832D	790744	Guard-Muffler Used on Type No(s). 0181, 0214, 0222, 0246, 0251, 2008, 2010.	----- Note -----			957A	791129	Cap-Fuel Tank Used on Type No(s). 0121, 0130, 0178, 0186, 0197, 0204, 0212, 0216, 0550, 3212.
836	690664	Screw (Muffler Guard) (13/32" Long)	913	494409	Seat-Check Valve	957B	792878	Cap-Fuel Tank
836A	790745	Screw (Muffler Guard) (1/2" Long)	921	793972	Cover-Blower Housing Used on Type No(s). 0171, 0172, 0175, 0177, 0183, 2010, 2110.	969	799013	Screw (Blower Housing Cover) Used on Type No(s). 0113, 0114, 0150, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0965, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 1486, 1542, 2027, 2028, 2034, 3000, 3150, 3203, 3336, 3414, 3764, 3833, 3840.
836B	691125	Screw (Muffler Guard) (5/8" Long)	921A	793973	Cover-Blower Housing			
			921B	699796	Cover-Blower Housing Used on Type No(s). 0113, 0114, 0150, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0965, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 1486, 1542, 2027, 2028, 2034, 3000, 3150, 3203, 3336, 3414, 3764, 3833, 3840.			

10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
969A	799014	Screw (Blower Housing Cover) ----- Note ----- 799014 Screw (Blower Housing Cover) (Used After Code Date 10061300) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838. 694046 Screw (Blower Housing Cover) (Used Before Code Date 10061400) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0222, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838.	969C	799015	Screw Used on Type No(s). 0210, 3210. 976 694394 Primer-Carburetor 994 792245 Arrester-Spark 1005 592366 Fan-Flywheel 1036 Label-Emissions (Available From A Briggs & Stratton Authorized Dealer) 1058 277038 Operator's Manual 1095 498526 Gasket Set-Valve 1210 499901 Pulley/Spring Assembly (Pulley) 1211 499901 Pulley/Spring Assembly (Spring) 1319 794467 Label-Warning 1319A 797669 Label-Warning 1330 270962 Repair Manual			

Not for
Reproduction

Not for
Reproduction

