

# Ford Focus (1999 – 2007) – fuse box diagram (EU version)

Year of production: 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007


## Passenger junction box.



Fuse	Ampere rating (A)	Circuits protected
37	10	Main beam left-hand side
38	10	Main beam right-hand side
39	20	Cigar lighter, rear auxiliary power socket
40	20	Electric sunroof control module
41	20	Front passenger door module
42	7,5	Heated exterior mirrors
43	10	Heater control, steering column, DPF, remote control receiver, DVD player, alarm
44	10	Not used
45	10	Daytime running lamps (parking lamps)
46	10	Instrument cluster battery supply, on-board diagnostics ***
47	15	Washer pump, heated washer jets
48	20	Daytime running lamps
49	15	Lighting control battery supply ***
50	20	Windscreen wipers
51	15	Fuel pump
52	25	Heated rear window
53	7,5	Parking lamps, side lamps, tail lamps (left-hand side)
54	7,5	Parking lamps, side lamps, tail lamps (right-hand side)
55	20	Central locking, driver door module
56	20	Key free system
57	10	Battery backup sounder
58	15	Audio modules battery supply
59	20	Trailer tow module, luggage compartment auxiliary power socket
60	15	Dipped beam, right-hand side
61	15	Dipped beam, left-hand side

62	20	Driver's electric seat
63	25	Electric windows
64	20	Not used
65	10	Airbag module
66	7,5	Lighting control ignition supply
67	10	Instrument cluster ignition supply, engine immobiliser
68	7,5	Accessory to cluster (audio and navigation unit)
69	20	Fog lamps
70	10	Electronic modules ignition supply
71	10	Daytime running lamps ignition supply to lighting control switch
72	25	Not used
73	7,5	Number plate lamps
74	15	Brake lamps
75	10	Powertrain control module, accelerator pedal, automatic transmission
76	7,5	Electric parking brake
77	25	Central locking relays
78	15	Rear window wiper
79	15	Electric folding mirror
80	10	Battery saver, interior lamps
81	20	Door module, right-hand rear
82	20	Door module, left-hand rear
83	10	Audio modules (high level)
84	10	Reversing lamp, electric mirrors
85	10	Cooling unit
86	20	Heated front seats

# Engine junction box.

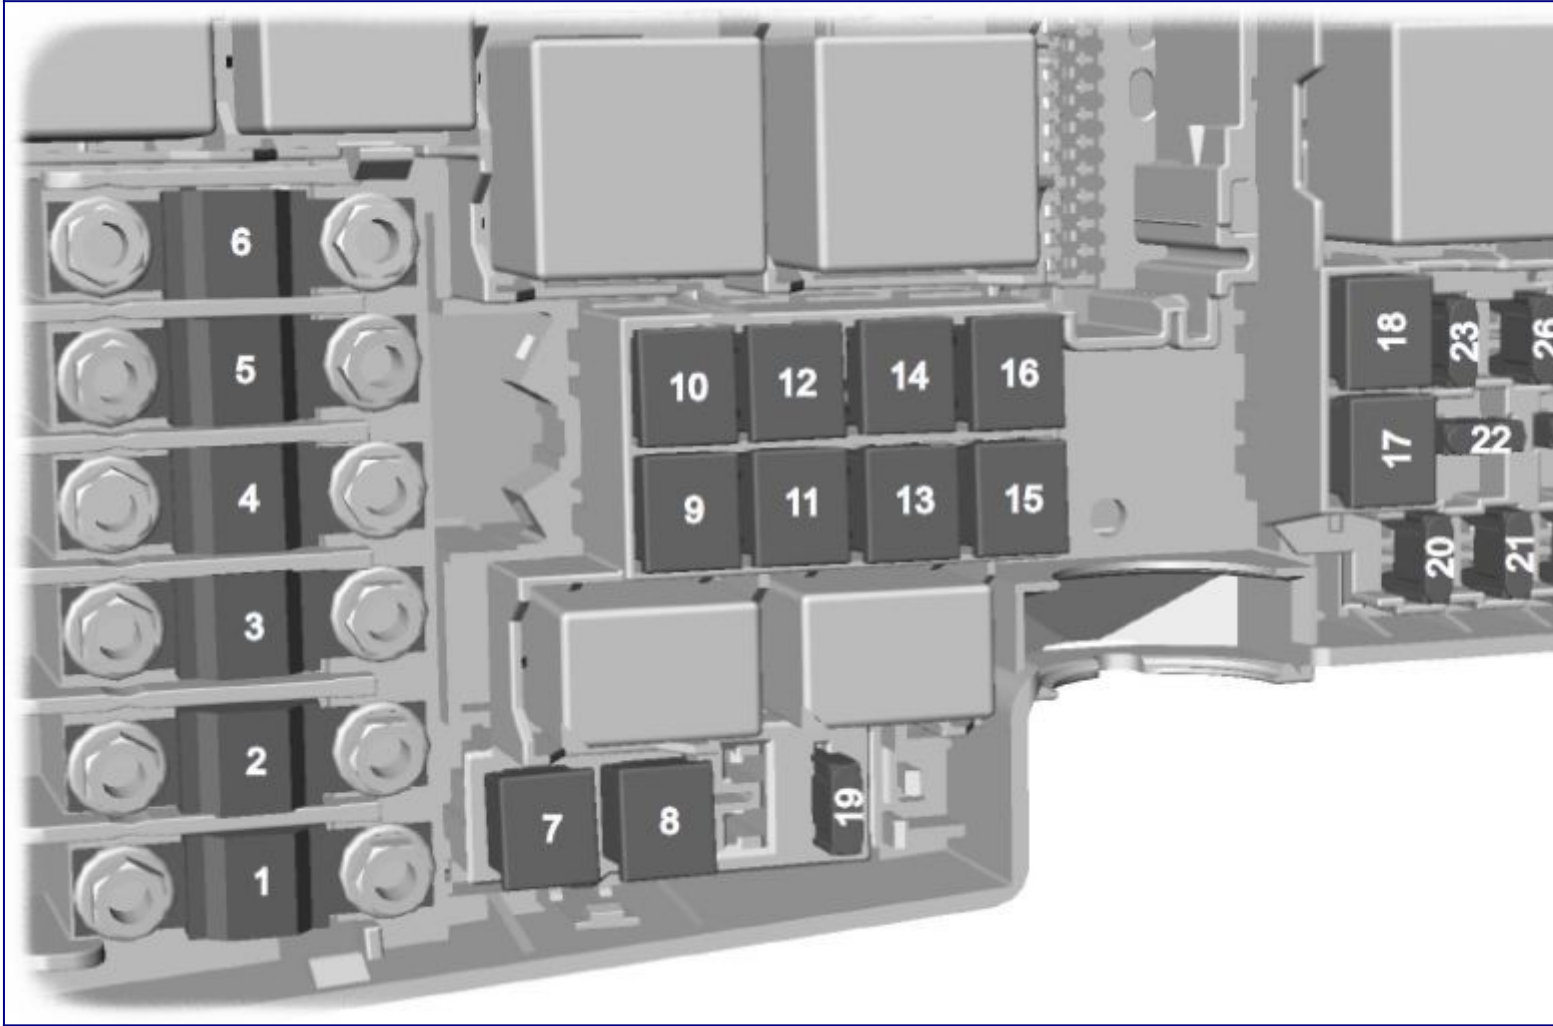

Fuse	Ampere rating (A)	Circuits protected
1	50	Cooling fan
2	80	Power steering
3	60	Passenger junction box supply 1
4	60	Passenger junction box supply 2
5	80	Climate control
6	60	Auxiliary heater (diesel only)
7	30	Dodatkowa nagrzewnica (disel only)
8	20	ABS, stability control pump
9	20	Powertrain control module (all except FocusST)
9	30	Powertrain control module (FocusST only)
10	30	Climate control blower
11	20	Ignition switch
12	40	Ignition relay 15l
13	20	Starter solenoid
14	40	Heated windscreen, right-hand side
15	30	Cooling fan relay
16	40	Heated windscreen, left-hand side
17	30	Electric parking brake (all except convertible)
17	30	Roof control module (convertible only)
18	—	Not used
19	10	ABS module

20	15	Horn
21	20	Auxiliary heater
22	10	Power steering module
23	30	Headlamp washer
24	15	Auxiliary heater (diesel only)
25	10	Ignition, relays
26	10	Automatic transmission
27	10	Air conditioning clutch
28	10	Glow plug monitoring (diesel only)
29	10	Dual zone climate control
30	10	Powertrain control module, automatic transmission
31	10	Battery sensor smart charging ***
32	10	Automatic transmission
32	10	Fuel injector power supply (FocusST only)
33	10	Heated oxygen sensors (petrol only)
33	10	Intercooler bypass valve (diesel only)
33	20	Heated oxygen sensor (FocusST only)
34	10	njectors, ignition transformers
35	10	Powertrain control module, valves, solenoids (all except Focus ST)
35	15	Powertrain control module, valves, solenoids, crank heater element (FocusST only)
36	10	Powertrain control module