

# Lambda Sensors


## Installation

The sensor should be mounted as shown in the diagram. A new soft washer should be used every time the sensor is fitted. The washer is available as an accessory. Please refer to the relevant Product Summary for the order code.

- Mounting torque 45Nm max
- Spanner 22 A/F

## Operation

The sensor must be powered up when the engine is running, so that the heater will maintain the minimum operating temperature limit. If the operational temperature is exceeded, sensor function will be impaired, causing large calibration errors as well as possible heater element damage. The UEGO sensor is not resistant to temperature shocks, so it should not be subjected to cold-fluid cooling, etc.

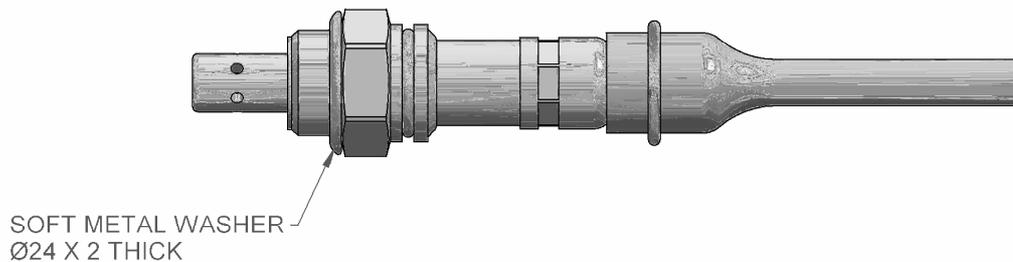

## Recommended Installation