



Bentley Continental (3W) Tire Pressure Monitoring

From Ross-Tech Wiki

Coding

Special Procedures

Initialization

[Select]

[65 - Tire Pressure Monitoring]

[Measuring Blocks - 08]

Group 019

[Go!]

Check Field 1, it should show the Initialization Status.

If the Initialization has already been performed, skip the following Steps and directly start with driving the Vehicle. If it hasn't been performed, proceed with the Security Access followed by the Adaptation.

[Done, Go Back]

[Security Access - 16]

Enter 10896, to enable the Initilization.

[Do it!]

[Adaptation - 10]

Adaptation Channel 001

[Read]

Enter 0 as new Value.

[Save]

- Check the Tire Pressure for all 4/5 wheels and if necessary correct it.

Adaptation Channel 004

[Read]

Enter 1 as new Value.

[Save]

[Done, Go Back]

[Measuring Blocks - 08]

Group 019

[Go!]

Check Field 1, it should show the Initialization Status.

[Done, Go Back]

[Close Controller, Go Back - 06]

- Now drive the vehicle until all Wheel Pressure Sensors report plausible Values (either in the Infotainment System or the Instrument Cluster).
- If the Sensors do not report proper values after a 30 Minute drive there may be a Problem with the Antennas, in such a case you should perform an Antenna Diagnosis.

Retrieved from "[http://wiki.ross-tech.com/wiki/index.php/Bentley_Continental_\(3W\)_Tire_Pressure_Monitoring](http://wiki.ross-tech.com/wiki/index.php/Bentley_Continental_(3W)_Tire_Pressure_Monitoring)"

Unless otherwise noted, all content on this site is Copyright © 2000-2010 by Ross-Tech LLC. All rights reserved.

"VCDS" is a Registered Trademark of Ross-Tech, LLC.

Ross-Tech is not affiliated with the Volkswagen Group in any way.