

- 21 Not connected
- 22 Not connected
- 23 Not connected
- 24 Not connected
- 25 Not connected
- 26 Air conditioning engagement request
- 27 Not connected
- 28 Not connected
- 29 Key-on and ignition-controlled power supply (15/54)
- 30 Not connected
- 31 Not connected
- 32 Not connected
- 33 Cruise Control management (optional)
- 34 Brake pedal switch
- 35 Brake pedal switch
- 36 Two-way CAN line (LOW)
- 37 Not connected
- 38 Not connected
- 39 Not connected
- 40 Potentiometer signal 2 accelerator pedal
- 41 Cruise Control management (optional)
- 42 Potentiometer signal 1 accelerator pedal
- 43 Not connected
- 44 Not connected
- 45 Not connected
- 46, Accelerator pedal 1 sensor earth
- 47 Not connected
- 48 Not connected
- 49 Not connected
- 50 Clutch pedal switch signal
- 51 Two-way CAN line (HIGH)
- 52 Two-way CAN line (HIGH)
- 53 Not connected
- 54 Not connected
- 55 Low speed fan engagement
- 56 Not connected
- 57 Not connected
- 58 System failure signal output
- 59 High speed fan engagement
- 60 Not connected
- 61 Not connected
- 62 Injection system relay feed
- 63 Not connected
- 64 Air conditioning engagement