

(B) CONNECTOR FOR ENGINE SIDE WIRING

- 1 Coil 4 control
- 2 Not connected
- 3 Coil 3 control
- 4 Not connected
- 5 Engine block earth
- 6 Engine block earth
- 7 Absolute pressure and timing sensors earth
- 8 Not connected
- 9 Rpm/TDC sensor positive
- 10 Not connected
- 11 Not connected
- 12 Not connected
- 13 Absolute pressure and timing sensors power supply (+5V)
- 14 Not connected
- 15 DBW power supply (motorized throttle) (+5V)
- 16 Not connected
- 17 Coil 1 control
- 18 Not connected
- 19 Coil 2 control
- 20 Not connected
- 21 Engine block earth
- 22 Engine block earth
- 23 Rpm/TDC sensor negative
- 24 Timing sensor signal
- 25 Not connected
- 26 Not connected
- 27 Not connected
- 28 Not connected
- 29 Not connected
- 30 Motorized throttle 2 sensor signal
- 31 Absolute pressure sensor signal
- 32 Upstream Lambda heater control