

- 33 Cylinder 4 injector control
- 34 Cylinder 2 injector control
- 35 Motorized throttle 1 sensor earth
- 36 Coolant temperature sensor earth
- 37 Not connected
- 38 Not connected
- 39 Not connected
- 40 Not connected
- 41 Detonation sensor positive
- 42 Downstream Lambda sensor signal (+)
- 43 Upstream Lambda sensor signal (+)
- 44 Motorized throttle 1 sensor signal
- 45 Coolant temperature signal
- 46 Not connected
- 47 Not connected
- 48 Detonation sensor negative
- 49 Cylinder 3 injector control
- 50 Cylinder 1 injector control
- 51 Fuel vapour recovery solenoid valve control
- 52 DBW motor negative control (motorized throttle)
- 53 Not connected
- 54 Not connected
- 55 Not connected
- 56 Not connected
- 57 DBW motor positive control (motorized throttle)
- 58 Downstream Lambda sensor signal (-)
- 59 Not connected
- 60 Upstream Lambda sensor signal (-)
- 61 Not connected
- 62 Not connected
- 63 Air temperature signal
- 64 Downstream Lambda heater control