



About.com
 10 Things You Should Know
 About Arthritis

[LEARN MORE](#)

About.com Auto Repair

[Share](#)

[Print](#)

OBD-II Codes P0700 - P0799

P0700	Transmission Control System Malfunction
P0701	Transmission Control System Range/Performance
P0702	Transmission Control System Electrical
P0703	Torque Converter/Brake Switch B Circuit Malfunction
P0704	Clutch Switch Input Circuit Malfunction
P0705	Transmission Range Sensor Circuit malfunction (PRNDL Input)
P0706	Transmission Range Sensor Circuit Range/Performance
P0707	Transmission Range Sensor Circuit Low Input
P0708	Transmission Range Sensor Circuit High Input
P0709	Transmission Range Sensor Circuit Intermittent
P0710	Transmission Fluid Temperature Sensor Circuit Malfunction
P0711	Transmission Fluid Temperature Sensor Circuit Range/Performance
P0712	Transmission Fluid Temperature Sensor Circuit Low Input
P0713	Transmission Fluid Temperature Sensor Circuit High Input
P0714	Transmission Fluid Temperature Sensor Circuit Intermittent
P0715	Input/Turbine Speed Sensor Circuit Malfunction
P0716	Input/Turbine Speed Sensor Circuit Range/Performance
P0717	Input/Turbine Speed Sensor Circuit No Signal
P0718	Input/Turbine Speed Sensor Circuit Intermittent
P0719	Torque Converter/Brake Switch B Circuit Low
P0720	Output Speed Sensor Circuit Malfunction
P0721	Output Speed Sensor Range/Performance
P0722	Output Speed Sensor No Signal
P0723	Output Speed Sensor Intermittent
P0724	Torque Converter/Brake Switch B Circuit High
P0725	Engine Speed input Circuit Malfunction
P0726	Engine Speed Input Circuit Range/Performance
P0727	Engine Speed Input Circuit No Signal
P0728	Engine Speed Input Circuit Intermittent
P0730	Incorrect Gear Ratio
P0731	Gear 1 Incorrect ratio
P0732	Gear 2 Incorrect ratio
P0733	Gear 3 Incorrect ratio
P0734	Gear 4 Incorrect ratio
P0735	Gear 5 Incorrect ratio
P0736	Reverse incorrect gear ratio
P0740	Torque Converter Clutch Circuit Malfunction
P0741	Torque Converter Clutch Circuit Performance or Stuck Off

P0748	Pressure Control Solenoid Electrical
P0749	Pressure Control Solenoid Intermittent
P0750	Shift Solenoid A Malfunction
P0751	Shift Solenoid A Performance or Stuck Off
P0752	Shift Solenoid A Stuck On
P0753	Shift Solenoid A Electrical
P0754	Shift Solenoid A Intermittent
P0755	Shift Solenoid B Malfunction
P0756	Shift Solenoid B Performance or Stuck Off
P0757	Shift Solenoid B Stuck On
P0758	Shift Solenoid B Electrical
P0759	Shift Solenoid B Intermittent
P0760	Shift Solenoid C Malfunction
P0761	Shift Solenoid C Performance or Stuck Off
P0762	Shift Solenoid C Stuck On
P0763	Shift Solenoid C Electrical
P0764	Shift Solenoid C Intermittent
P0765	Shift Solenoid D Malfunction
P0766	Shift Solenoid D Performance or Stuck Off
P0767	Shift Solenoid D Stuck On
P0768	Shift Solenoid D Electrical
P0769	Shift Solenoid D Intermittent
P0770	Shift Solenoid E Malfunction
P0771	Shift Solenoid E Performance or Stuck Off
P0772	Shift Solenoid E Stuck On
P0773	Shift Solenoid E Electrical
P0774	Shift Solenoid E Intermittent
P0780	Shift Malfunction
P0781	1-2 Shift Malfunction
P0782	2-3 Shift Malfunction
P0783	3-4 Shift Malfunction
P0784	4-5 Shift Malfunction
P0785	Shift/Timing Solenoid Malfunction
P0786	Shift/Timing Solenoid Range/Performance
P0787	Shift/Timing Solenoid Low
P0788	Shift/Timing Solenoid High
P0789	Shift/Timing Solenoid Intermittent
P0790	Normal/Performance Switch Circuit Malfunction

[Back To Index](#)