


Audi A4

Current Flow Diagram

No. 117 / 15

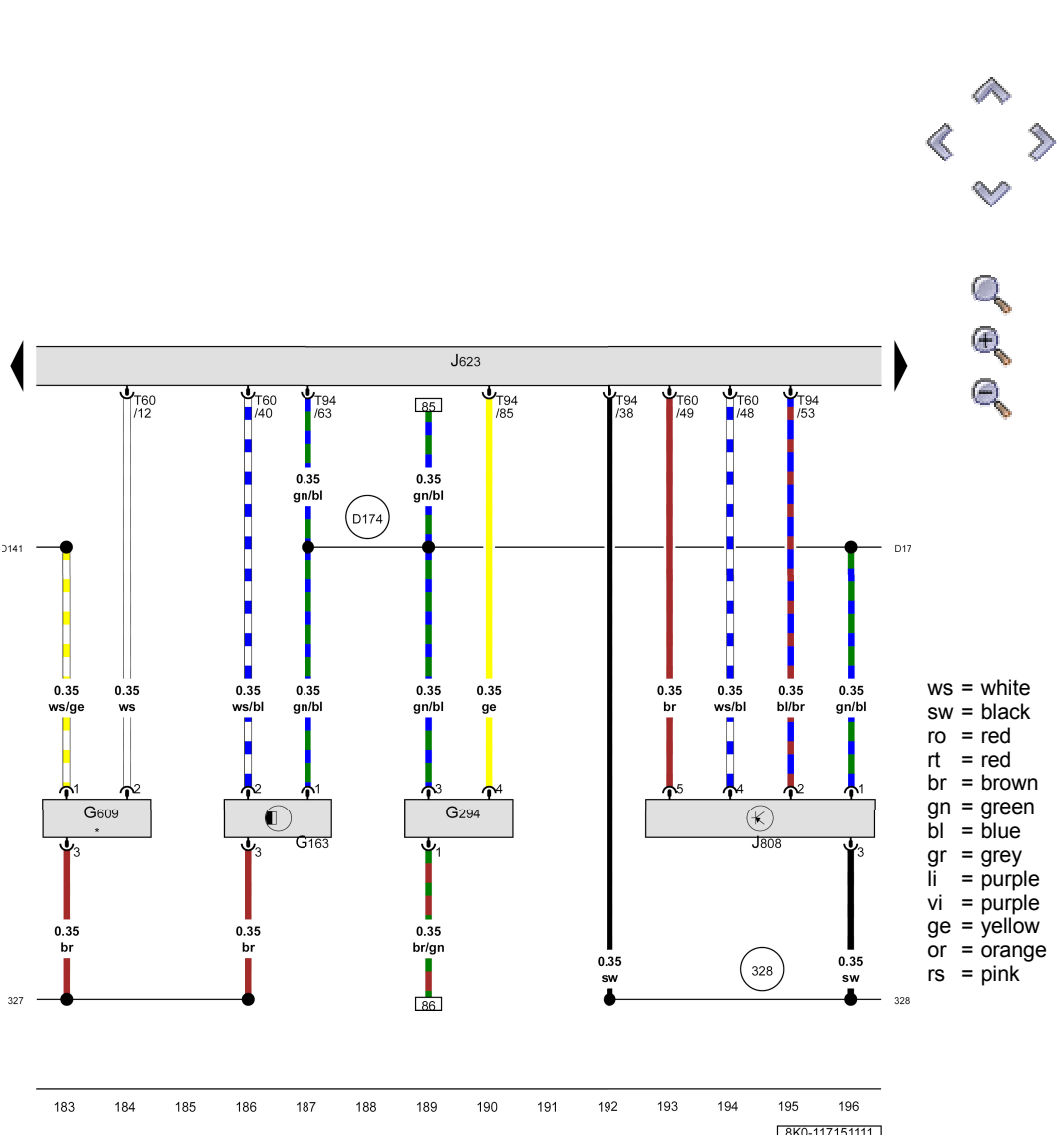

- Hall sender 2, Brake servo pressure sensor, Regulating flap control unit**
- G163** - Hall sender 2
 - G294** - Brake servo pressure sensor
 - G609** - Sender 1 for secondary air pressure
 - J623** - Engine control unit
 - J808** - Regulating flap control unit
 - T60** - 60-pin connector
 - T94** - 94-pin connector
 - 327** - Earth connection (sender earth), in engine compartment wiring harness
 - 328** - Earth connection 2 (sender earth), in engine compartment wiring harness
 - D141** - Connection (5V) in engine prewiring harness
 - D174** - Connection 2 (5V) in engine prewiring harness
 - *** - Only models with US equipment

Audi A4

Current Flow Diagram

No. 117 / 16