



Engine speed sender, Hall sender, Coolant temperature sender, Fuel pressure sender, Throttle valve module

- G28** - Engine speed sender
- G40** - Hall sender
- G42** - Intake air temperature sender
- G62** - Coolant temperature sender
- G71** - Intake manifold pressure sender
- G186** - Throttle valve drive for electric throttle
- G187** - Throttle valve drive angle sender 1 for electric throttle
- G188** - Throttle valve drive angle sender 2 for electric throttle
- G247** - Fuel pressure sender
- G410** - Fuel pressure sender for low-pressure
- J338** - Throttle valve module
- J623** - Engine control unit
- T14e** - 14-pin connector, on left in engine compartment
- T60** - 60-pin connector
- 220** - Earth connection (sender earth), in engine wiring harness
- 327** - Earth connection (sender earth), in engine compartment wiring harness
- D117** - Connection 15 in engine compartment wiring harness
- D141** - Connection (5V) in engine prewiring harness