

Audi A8


Current Flow Diagram

No. 52 / 34

Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert

- G - Fuel gauge sender
- G1 - Fuel gauge
- G169 - Fuel gauge sender 2
- G237 - Fuel gauge sender 3
- J285 - Control unit in dash panel insert
- T3y - 3-pin connector
- T6i - 6-pin connector
- T10g - 10-pin connector, on rear right on vehicle floor
- T17i - 17-pin connector, in coupling point in interior, left
- T17k - 17-pin connector, in right A-pillar coupling station
- T32 - 32-pin connector
- Y24 - Display in dash panel insert
- 372 - Earth connection 7, in main wiring harness

- A204 - Connection (dash panel insert CAN bus, high), in dash panel wiring harness
- A205 - Connection (dash panel insert CAN bus, low), in dash panel wiring harness

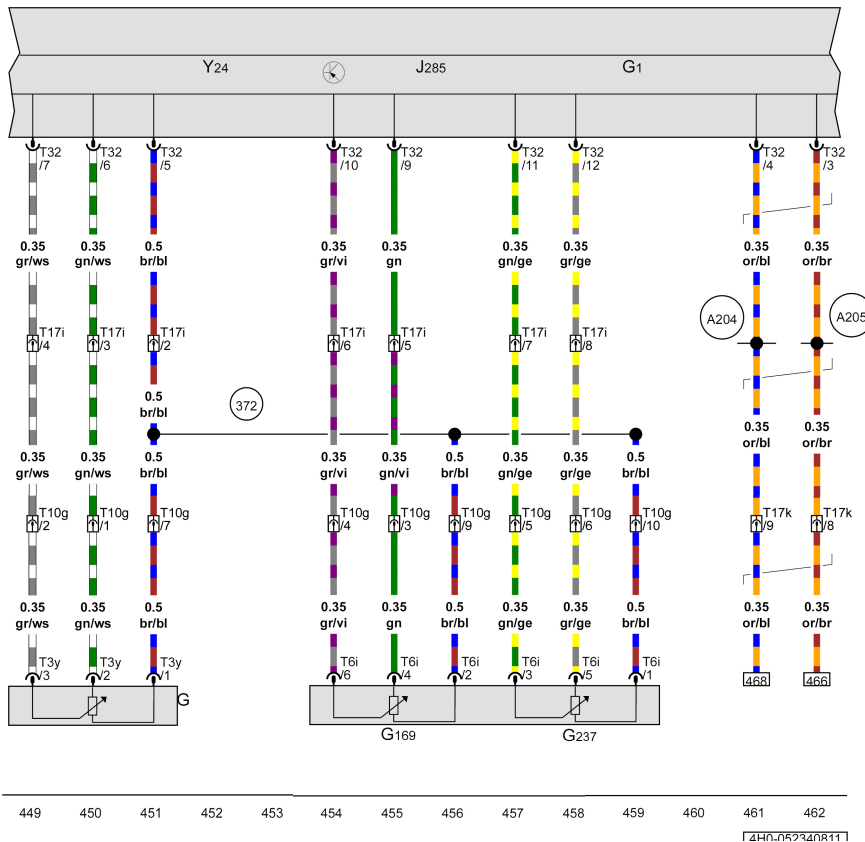

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Audi A8

Current Flow Diagram

No. 52 / 35