



## FuseAndRelay.com

all fuse and relay box with diagram

MENU

# Citroen C3 – fuse and relay

Citroen   Comments: 5

**Citroen C3** is a compact passenger car, produced in various modifications. The first generation was delivered to the market in 2002, 2003, 2004, 2005, 2006, 2007, 2008 and 2009. During this time, she received a restyling. Since 2010, the 2nd generation C3 has gone into production. It was produced in 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020. We will describe the Citroen C3 fuse and relay box diagrams with a detailed decoding of all elements for both generations.



**Citroen C3 has two main fuse boxes.**

**The first** is located in the engine compartment near the battery on the left side, under the protective cover.





**The second** is in the cabin under the dashboard (on the left side).




### Contents

- 1 1st generation
  - 1.1 Engine compartment
  - 1.2 Passenger compartment
- 2 2nd generation
  - 2.1 Engine compartment
  - 2.2 Passenger compartment

## 1st generation



## Citroen C3 (up to 2010)

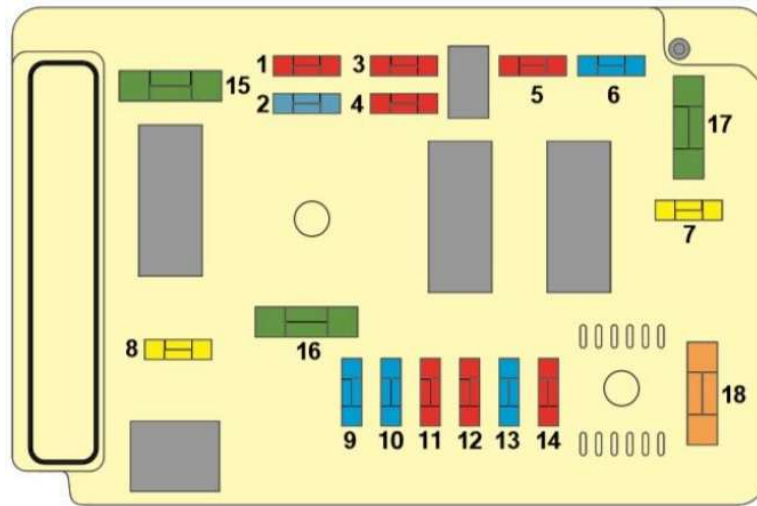**Engine compartment****Diagram****Assignment**


- » F1 10A Diesel engine preheating unit – Water in diesel fuel sensor – Speed sensor – Reversing lights – ECU (automatic transmission, SensoDrive type gearbox)
- » F2 15A Fuel pump
- » F3 10A Electronic control units (ECU) (ABS system, ESP system)
- » F4 10A ECU (fuel injection system, power steering systems) – Sensors (diesel engine coolant level, cruise control system, brake lights, clutch) – SensoDrive gearbox and automatic transmission relay – Additional heating system unit
- » F6 15A Fog lights
- » F7 20A Glass headlight washer
- » F8 20A Engine control relay – Fuel injection computer
- » F9 15A Left low beam headlamp
- » F10 15A Right low beam headlamp
- » F11 10A Left high beam headlamp
- » F12 10A Right high beam headlamp
- » F13 15A Sound warning signal
- » F14 10A Glass washer
- » F15 15A Engine monitoring devices (ignition coil, solenoid valve, oxygen sensor, fuel injection system) – Fuel sump – Diesel fuel heater
- » F16 30A Air pump
- » F17 30A Windshield wiper



- » F18 30A / 40 A Electric fan

## Passenger compartment

### Diagram

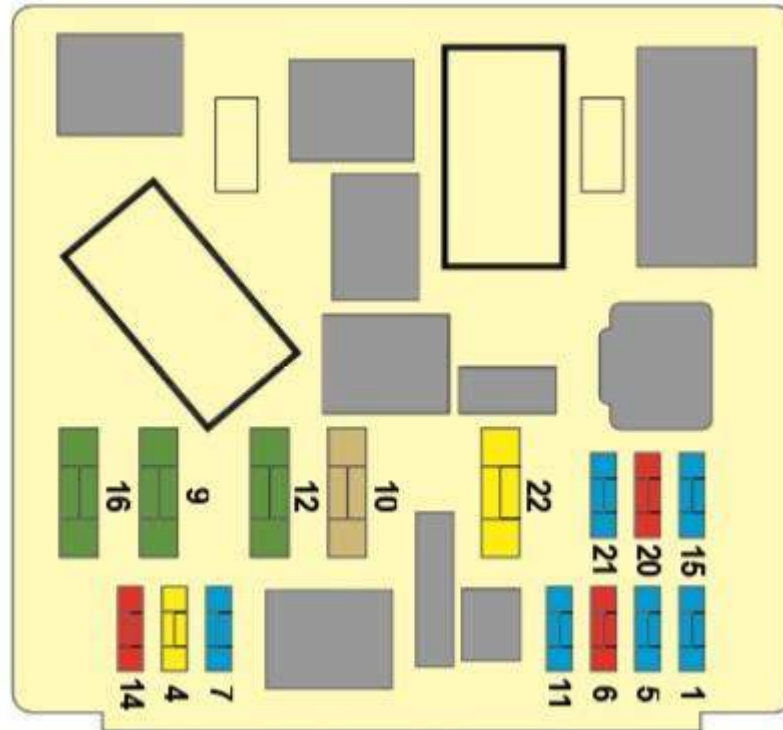

### Designation

- » F1 15A Diagnostic socket supply circuit – Tow hitch + Navigation system
- » F4 20 A Electronic control unit (ECU) for automatic transmission – Steering column switch – Clock – Display – Navigation system – Electronic anti-theft alarm unit – Car radio
- » F5 15A Anti-theft alarm siren
- » F6 10 A Diagnostic connector – Flywheel angular position sensor
- » F7 15 A Rain sensor – Light sensor – Anti-theft alarm electronics
- » F10 40 A Heated rear window – Heated outside rearview mirrors
- » F11 15A Rear window wiper
- » F12 30A Power sliding sunroof power supply – Front door power windows
- » F14 10 A Under the steering switches – Airbag ECU – Engine compartment fuse box
- » F15 15 A Instrument cluster – Display – Navigation system – Air conditioning – Parking sensors – Car radio
- » F16 30A Central locking – Super locking system
- » F20 10 A Rear right brake light
- » F21 15 A Rear left brake light – Additional brake light



- » F22 20 A 12 V power socket – Citroen c3 cigarette lighter fuse – Interior lighting – Adjusting and folding power outside mirrors – Car radio connection – Illumination of the mirror integrated in the sun visor – License plate light

”


Please note that the fuse number 22 for 20A is responsible for the cigarette lighter.

## 2nd generation

Citroen C3 (from 2010)

### Engine compartment

#### Diagram

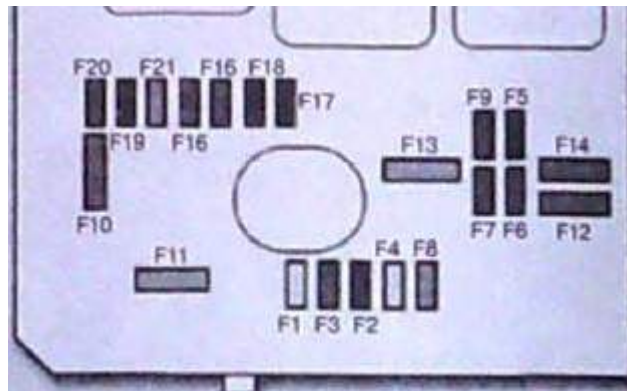

#### Protected components

1. 20 – Power supply to the engine ECU, control of the electric fan, the main relay of the multifunction engine processor
2. 15 – Sound signal
3. 10 – Washer of front and rear windows
4. 20 – Daylight
5. 15 – Diesel fuel heater (on diesel versions), fuel pump (on gasoline versions)
6. 10 – Processor of ABS / ESP systems, relay of disconnection of ABS / ESP systems, redundant contactor of brake lights
7. 10 – Electric power steering
8. 25 – the Starter switch
9. 10 – Switching and protection unit (on diesel versions)



10. 30 – High pressure fuel pump solenoid valve (on diesel versions), injectors and ignition coils (on gasoline versions)
11. 40 – Electric fan of the air conditioning system
12. 30 – Low / high speed of the windshield wiper
13. 40 – Power supply of the intelligent switching unit (+ from the ignition lock)
14. 30 – Power supply of the VALVETRONIC valve (petrol engine)
15. 10 – Right high beam headlamp
16. 10 – the Left headlamp of a high beam
17. 15 – the Left headlamp of a low beam
18. 15 – the Right headlamp of a passing beam
19. 15 – Power supply to the multifunctional engine processor (on petrol versions), solenoid valves of the charge air cooling system (on diesel versions)
20. 10 – Power supply to the multifunctional engine processor (on petrol versions), a solenoid valve for the turbocharging pressure control system (on diesel versions), a coolant level sensor (on diesel versions)
21. 5 – Power supply of the cooling system fan, relay of the APC systems, ABS / ESP


#### List of large fuses

- » MF1 – 60 – Electric cooling fan
- » MF2 – 30 – ABS / ESP Processor
- » MF3 – 30 – ABS / ESP Processor
- » MF4 – 60 – Power supply to the intelligent breakout box
- » MF5 – 60 – Power supply to the intelligent breakout box
- » MF6 – Not used
- » MF7 – Passenger compartment fuse box
- » MF8 – Not used

## Passenger compartment

### Diagram



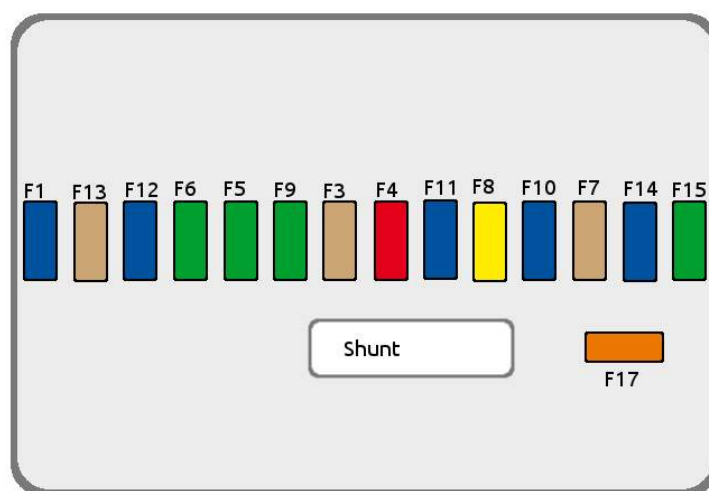

## Assignment

### List of fuses

- » FH36 – 5 – Trailer switch box
- » FH37 – 15 – Power supply for the electrical connector for connecting additional equipment of the caravan
- » FH38 – 20 – Navigation system
- » FH39 – 20 – Heated seats
- » FH40 – 30 – Trailer switch box

F1 – 15 – Rear window wiper

F2 – Not used

F3 – 5 – Airbag and pyrotechnic pretensioner ECU

F4 – 10 – Steering angle sensor, air conditioning, clutch contactor, diesel particulate filter additive pump, diagnostic socket, air flow sensor

F5 – 30 – Power window control panel, passenger power window control, front power window motor

F6 – 30 – Rear window lift motor and driver's door power window motor

F7 – 5 – Lights, front light, glove box light, portable lamp, rear lights

F8 – 20 – Multifunction display, car radio, navigation system

F9 – 30 – Car radio (optional), 12 V socket

F10 – 15 – Steering column switches

F11 – 15 – Ignition switch, diagnostic socket

F12 – 15 – Rain / light sensor, electronics box trailer

F13 – 5 – Brake light main contactor, engine switch box

F14 – 15 – Parking aid computer, seat belt warning lamp, airbag computer, dashboard, air conditioning, USB Box

F15 – 30 – Locking

F16 – Not used

F17 – 40 – Heated rear window and outside mirrors

SH – Shunt PARC



”

The fuse number 9 is responsible for the cigarette lighter.

If you have any questions – ask in comment.

## Related Posts:

1. **Citroen ds4 fuse and relay**
2. **Citroen Jumper 3 – Fuse and Relay**
3. **Citroen Nemo (2007 – 2018) fuse and relay**
4. **Citroen DS5 – fuses and relays**

## Comments

5



**John** 14.08.2022 at 14:31

Hi I have a 2017 Citroen C3 1.2 Puretech feel 82hp the driver side window switch is not working all the other door switches are working ok have checked the voltage at the drivers door switch and it shows only 1,7 v i want to check the relay but not sure how to get to the fuse board behind the glove compartment

[REPLY](#)

**Kathryn Botchett** 06.11.2022 at 18:19

What fuse number is responsible for interior lights?

[REPLY](#)

**Madison brooks** 03.12.2022 at 01:36

Hi there  
I have a 2012 (62) c3 e-hdi , that the heater blower motor has stopped working have checked the motor itself and the resistor , to no joy so need to locate the relay next , where will I find this please

[REPLY](#)

**GW** 20.12.2022 at 12:55





Had the same in my '63' exclusive. Took it to all my regular mechanics but unfortunately had to take to a citroen service as others couldn't do it. It was a big job, dashboard taken out etc, cost over £500. Hope yours is not this.

[REPLY](#)

**Phil** 23.11.2023 at 16:17

Hello. Could anyone tell me if there is a fuse for the courtesy light in the boot of my second gen c3 please (which number is it?) Thank you. Phil

[REPLY](#)

## Leave a Reply

Your email address will not be published. Required fields are marked \*

Message

Your Name

Your E-mail

Your Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

FuseAndRelay.com © 2023

[Privacy Policy](#)

All data only for informational purposes



