


Four-Speed Automatic Transmissions

Design and Operation



Self-Study Program
Course Number 851303

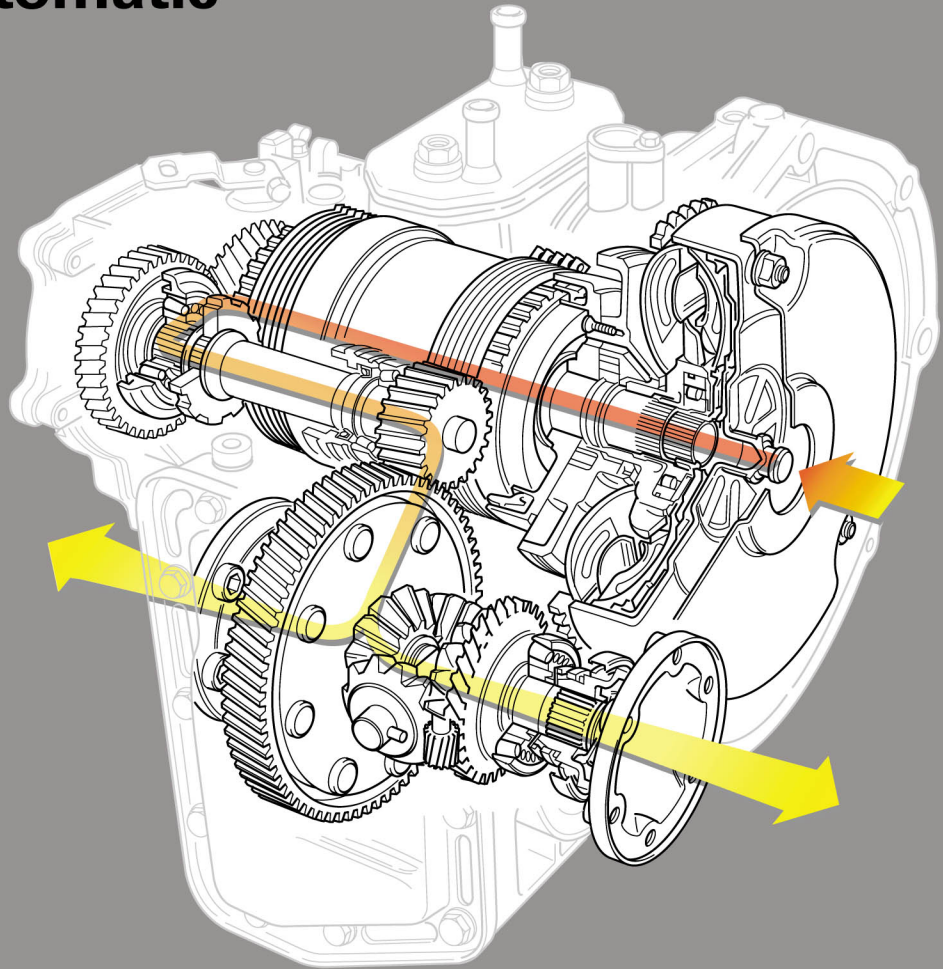

Volkswagen of America, Inc.
Service Training
Printed in U.S.A.
Printed 10/2003
Course Number 851303

©2003 Volkswagen of America, Inc.

All rights reserved. All information contained in this manual is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, nor may these materials be modified or reposted to other sites without the prior expressed written permission of the publisher.

All requests for permission to copy and redistribute information should be referred to Volkswagen of America, Inc.

Always check Technical Bulletins and the Volkswagen Worldwide Repair Information System for information that may supersede any information included in this booklet.

Trademarks: All brand names and product names used in this manual are trade names, service marks, trademarks, or registered trademarks; and are the property of their respective owners.


Table of Contents

Course Goals	ii
Overview	1
Introduction, Evolution, Transmission Identification	
Mechanicals/Hydraulics	7
Hydraulic Torque Converter, Torque Converter Lockup, Torque Converter Clutch (TCC), Clutches and Brakes, Power Flow: Phase 0 and Phase 1, Phase 2 and Phase 2 ETA	
Electronic Controls	36
Component Identification, Transmission Control Module (TCM) J217, Determining the Shift Point, Fuzzy logic	
Sensors	42
Throttle Position (TP) Sensors, Transmission Vehicle Speed Sensor (VSS) G38, Vehicle Speed Sensor G68, Transmission Fluid Temperature Sender G93, Engine Speed Sensor G28, Kick Down Switch F8, Motronic Kick Down Strategy, Multi-function Transmission Range (TR) Switch F125, Brake Light Switch F, Cold Neutral Control (CNC)	
Actuators	52
Solenoid Valves N88 to N94, Clutch and Brake Apply Charts, Solenoid Apply Charts, Cruise Control System, Shift Lock Solenoid N110, Park/Neutral Position (PNP) Relay J226, Selector Lever Display	
Function Diagram	60
On-Board Diagnosis	62
VAS 5051/5052, Function 04, Basic Settings Display Group 0, Function 08, Reading Measured Value Blocks	
Knowledge Assessment	67

The Self-Study Program provides you with information regarding designs and functions.

The Self-Study Program is not a Repair Manual.

For maintenance and repair work, always refer to the current technical literature.

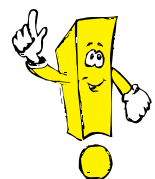

New!



Important! / Note!

Course Goals

Course Goals

This course will enable you to:


- Discuss the history of the four-speed automatic transmission
- Locate the four-speed automatic transmission components
- Discuss the purpose of the four-speed automatic transmission components

Introduction

The four-speed automatic transmission has received many upgrades since it was first introduced in 1990. Changes have been made to the way range shifts are controlled, the method used to mechanically bypass the torque converter, to the internal gear ratios, and to many other systems, all the while maintaining the basic external appearance of the original.

These changes resulted in different versions (phases) of the transmission; the first of which is referred to as 'Phase 0' (zero).

The four-speed automatic transmission utilizes just one planetary gearset. Combined with three clutches (K1, K2, and K3), two brakes (B1 and B2), and one freewheeling clutch (F), this Ravigneaux gearset produces four forward and one reverse range, plus Manual Low.

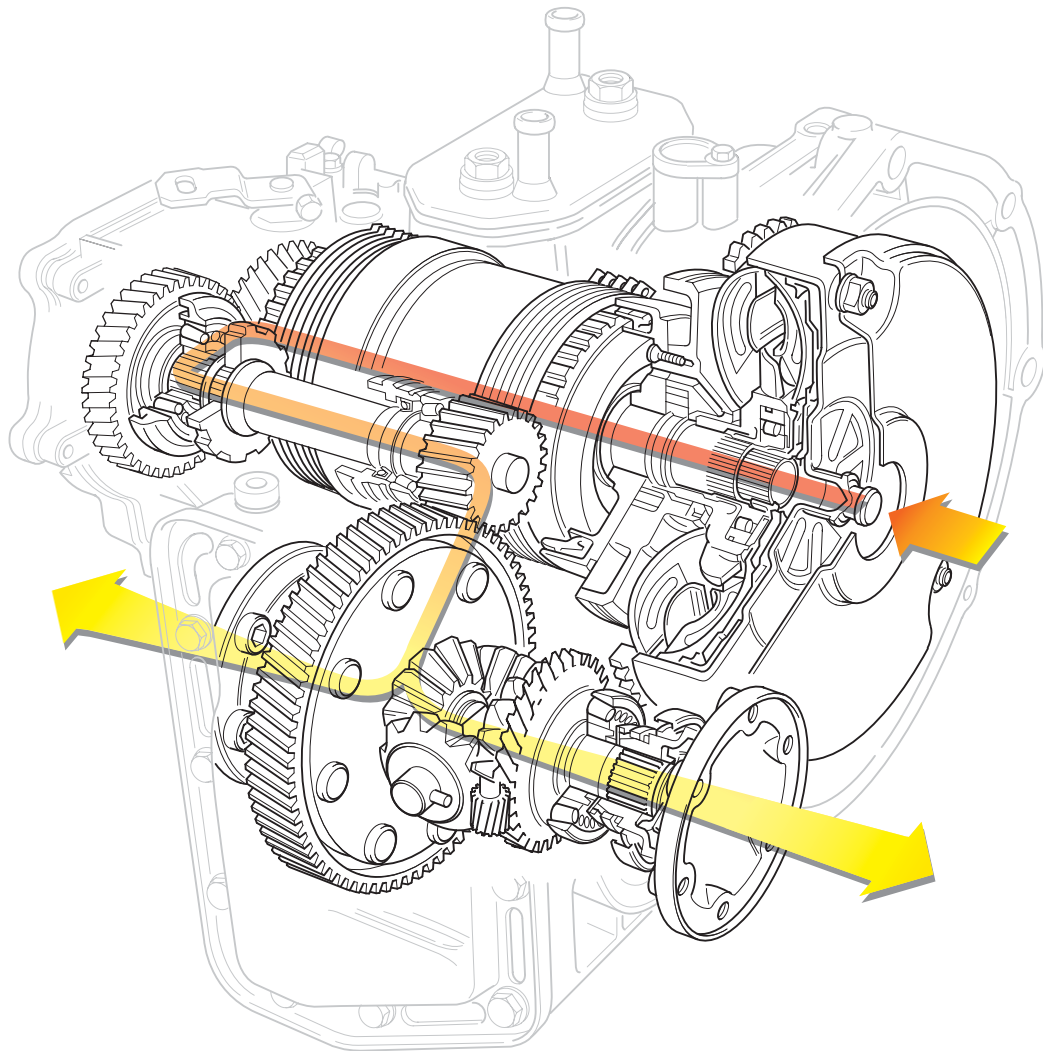

Overview

Evolution

The main differences from one version to the next are the shift patterns and how the transmission applies the converter clutch.

Currently, there are four main versions of the four-speed automatic transmission:

Phase 0

This is the first phase of the four-speed automatic transmission. Phase 0 includes these units:

- 096 – Golf, Jetta, Passat, and Corrado
- 098 – Eurovan

The main characteristics of the Phase 0 unit are:

- It uses an ECO/SPORT switch to control the transmission shift pattern
- The K3 clutch pack controls the torque converter lockup
- The basic shift pattern* is 1H, 2H, 3H, 3M, 4M. It provides an additional range, 3LT2, during downshift
- There is no speed sensor for the sun shell
- The transmission is equipped with a fluid level dipstick

Phase 1

This is the second version of the four-speed automatic transmission. Phase 1 includes these units:

- 096 – Golf, Jetta, Passat, and Corrado
- 098 – Eurovan

The main characteristics of the Phase 1 unit are:

- The ECO/SPORT switch is no longer in use
 - The transmission computer develops this signal internally, based on vehicle operating conditions
- The K3 clutch pack still controls converter lockup
- The basic shift pattern* is 1H, 2H, 3H, 4M
- There is no speed sensor for the sun shell
- The transmission is equipped with a fluid level dipstick

The only way to tell the difference between the Phase 0 and Phase 1 externally is by looking at the connector on the multi-function switch.

1993 – 096 installed in the Golf III and Jetta III

1990 – Four-speed automatic transmission introduced as the 096 in the Passat and Corrado


1992 – 098 installed in the Eurovan

1995 – 01M installed in the Passat, Golf III, Jetta III, and Cabrio

1990 – Phase 0: ECO/SPORT switch

1993 – Phase 1: ECO/SPORT switch eliminated, shift programs selected electronically

1995 – Phase 2: ECO/SPORT programs replaced with "Fuzzy Logic"; lockup clutch moved to torque converter, dipstick eliminated, new, "yellowish" color, synthetic ATF

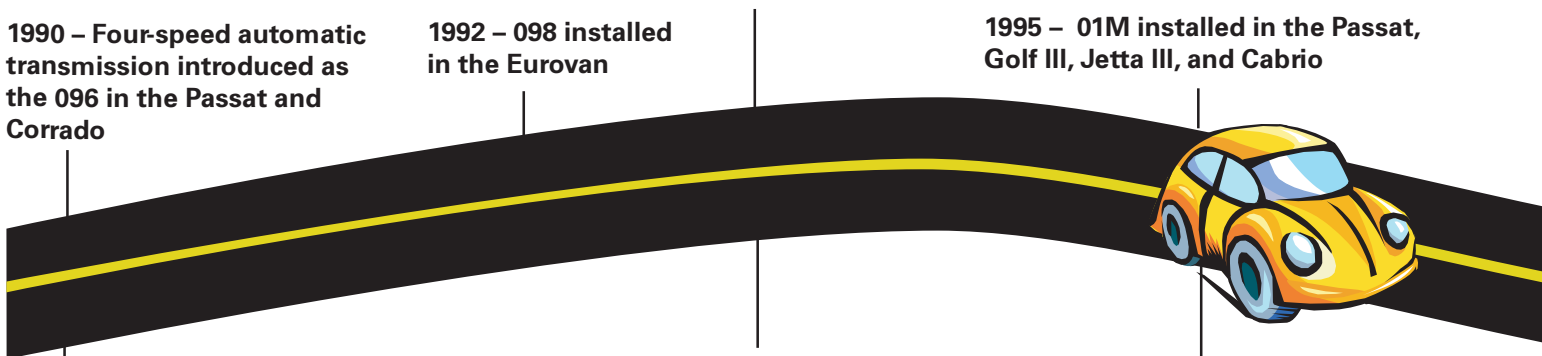

Phase 2

This is the third version of the four-speed automatic transmission. Phase 2 includes these units:

- 01M – Golf, Jetta, and New Beetle
- 01P – Eurovan

The main characteristics of the Phase 2 unit are:

- The converter now has a built-in clutch for lockup; the K3 clutch is used for third and fourth gear operation
- The basic shift pattern* is 1H, 1M, 2H, 2M, 3H, 3M, 4H, 4M
- A speed sensor was added to the top of the transmission case to monitor the sun shell operation
- Phase 2 transmissions no longer include a dipstick for checking the fluid level


Phase 2 ETA

This is the fourth and current version of the four-speed automatic transmission. Phase 2 ETA includes these units:

- 01M – Golf, Jetta, and New Beetle
- 01P – Eurovan

The main characteristics of the Phase 2 ETA unit are:

- The B2 brake is new, utilizing “wavy” clutch disks to provide less drag when the brake is disengaged
- A new fixture is used to set the clearances on the B2 brake
 - This fixture is now used to set the B2 brake on all previous phases
- The basic shift pattern remains unchanged
- The operation of valves in the valve body is modified

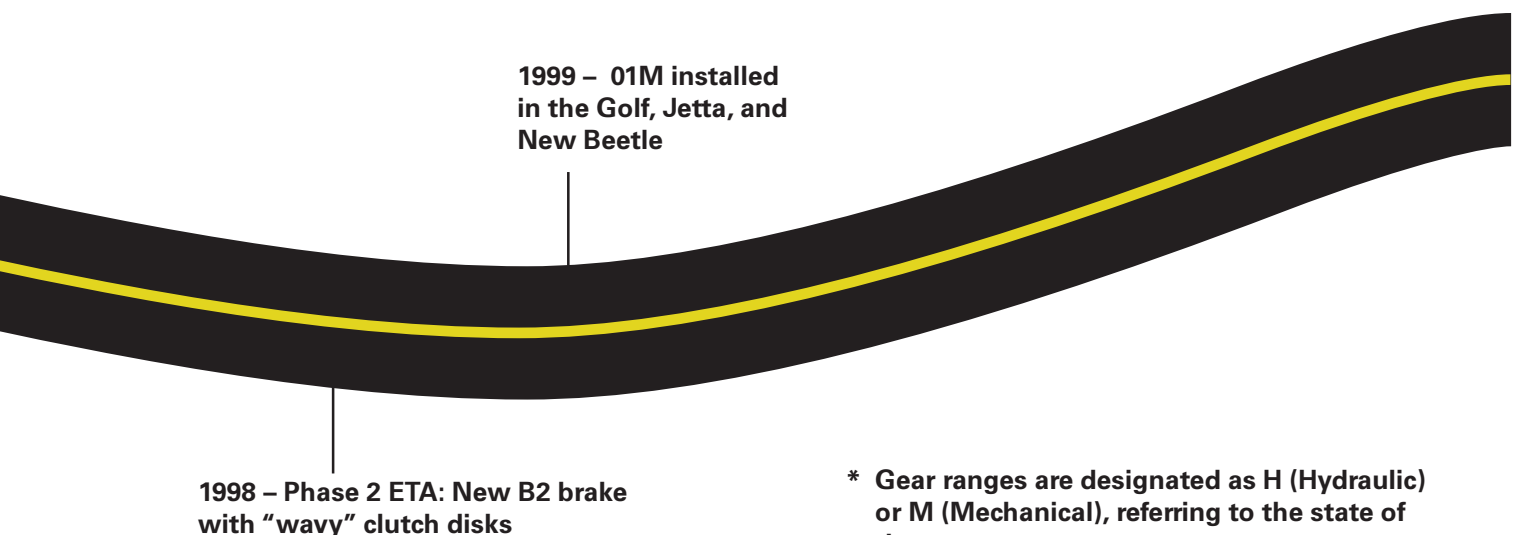

* Gear ranges are designated as H (Hydraulic) or M (Mechanical), referring to the state of the torque converter.

Overview

Transmission Identification

Depending on the year and model of the vehicle, the transmission could have one of a few different designations, including 096, 01M, 01P, etc. While not identical, all of these units are part of the four-speed automatic transmission family.

By phase, we mean that this transmission has undergone several modifications since it first appeared in Volkswagen vehicles.

While each phase is similar, there are specific differences. More importantly, these different phase transmissions are not interchangeable; you must use parts and components for the transmission phase that came with the vehicle. Crossing components from one phase to another will cause problems – some of which **will damage** the transmission.

Identify the transmission from its serial number to ensure you are using the right components for the vehicle you are working on. The serial numbers and data tags are in different locations, based on the phase.

Phase 0 and 1 transmissions are identified by the date of manufacture (location 1) and type (096, location 2).


For example, CFF 03 01 4:

CFF Transmission code letters



03 Day (3rd)

01 Month (January)

4 Year (1994)

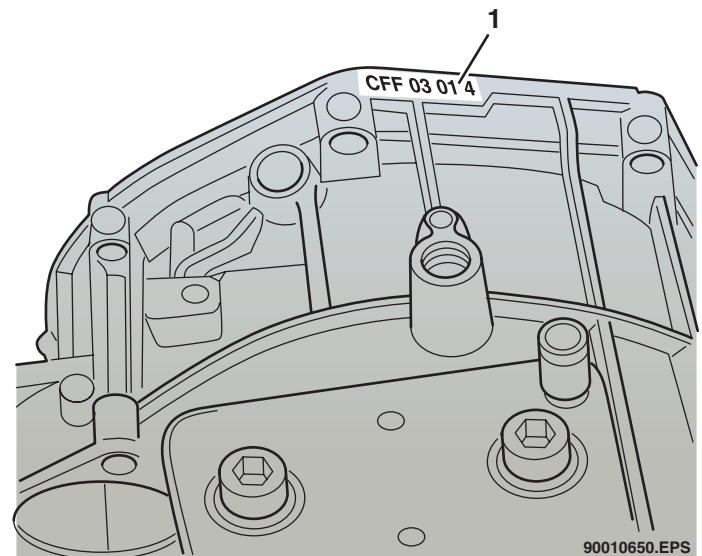

Phase 0 and Phase 1 Tag Locations

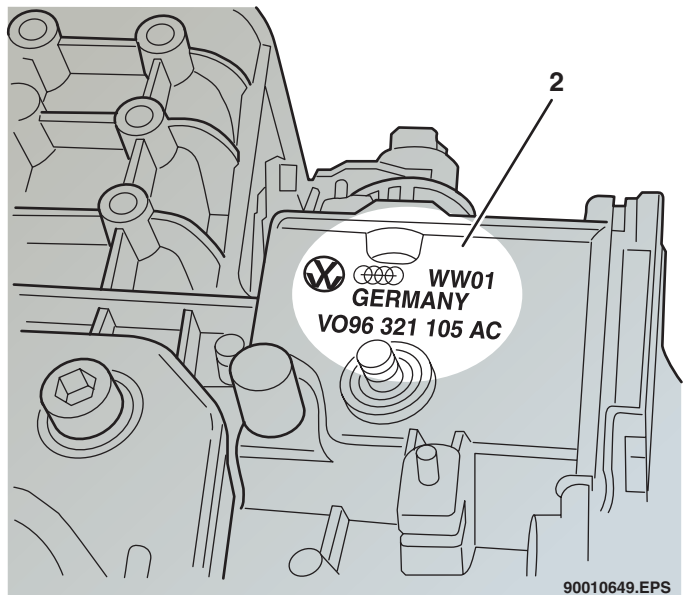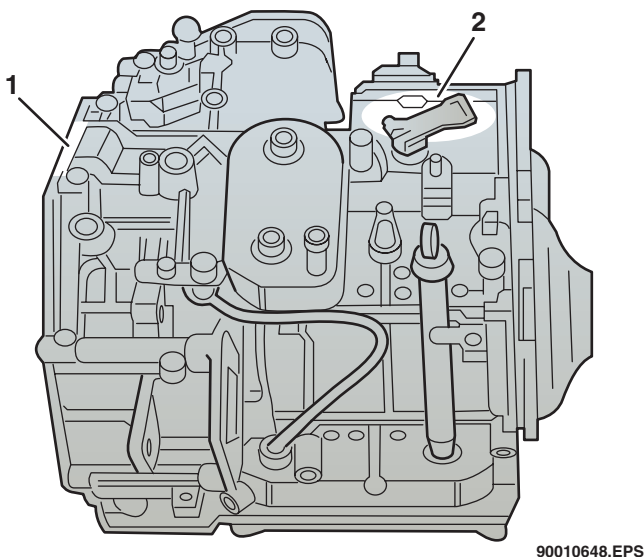

Phase 2 and Phase 2 ETA codes are deciphered in the same way as the Phase 0 and 1 codes.

For example, CKX03015:


CKX Transmission code letters

03 Day (3rd)

01 Month (January)


5 Year (1995)

The type, 01M, is shown in location 2.

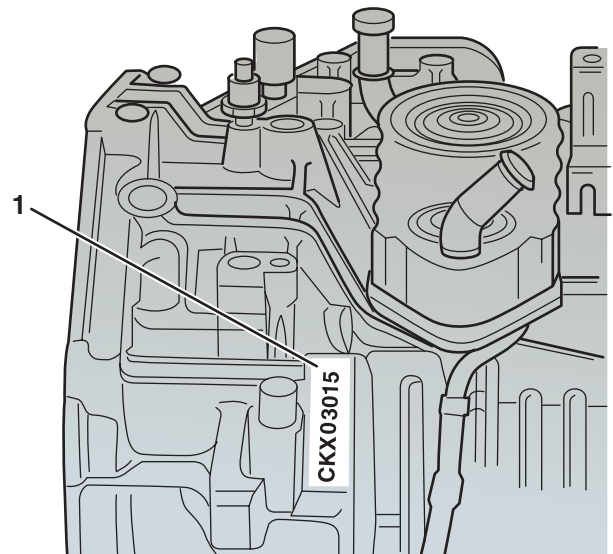


90010653.EPS

Phase 2 and Phase 2 ETA Tag Locations

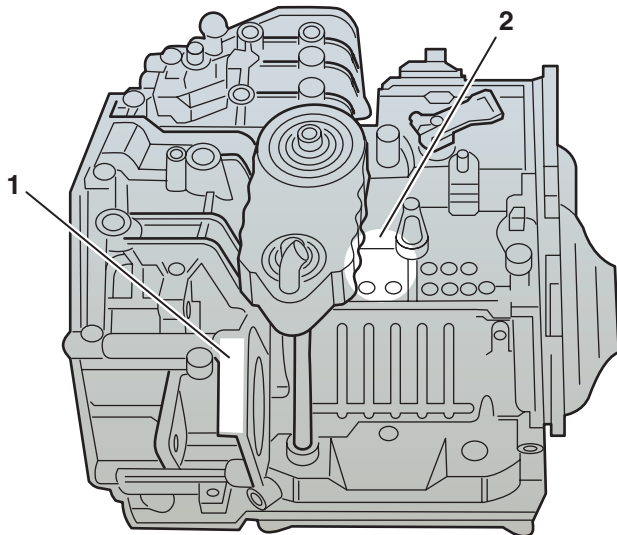


90010651.EPS

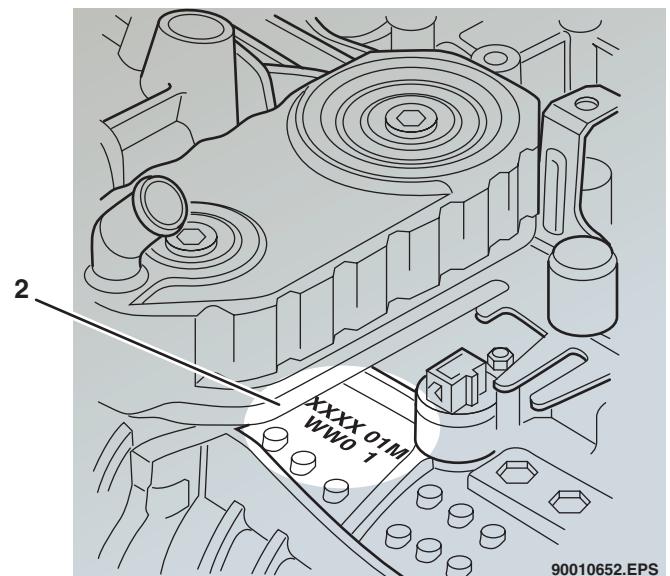

90010652.EPS

Overview

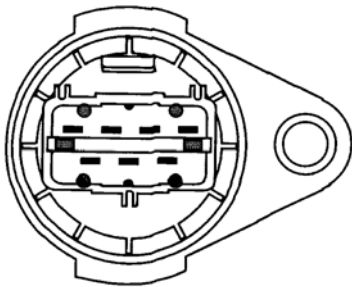


90010426.EPS

Phase 0 Multi-function Switch

Shortly after the introduction of the Phase 2 transmission, the Hall Effect-style multi-function switch was introduced. This switch is a direct replacement for the Phase 1 and Phase 2 design switch. The signals on the VAS 5051 will be the same with this switch as they were with the older design, but the test procedure for the switch will be different. Refer to current service information for the test procedures for this multi-function switch.




Determining the transmission version is critical to obtaining the correct parts and specifications. Always identify the transmission from its serial number.

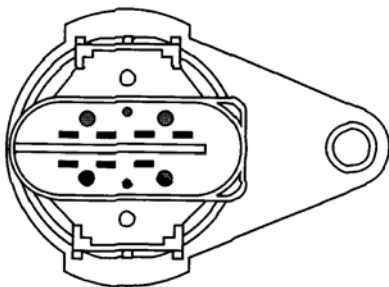

90010427.EPS

Phase 1 and 2 Multi-function Switch

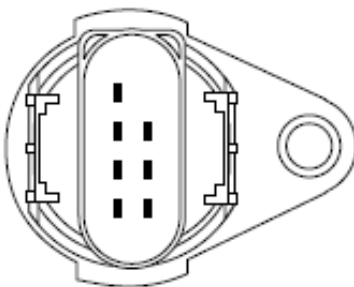

90010428.EPS

Hall Effect Style Multi-function Switch

Hydraulic Torque Converter

The torque converter transfers power from the engine to the transmission. This is done hydraulically, allowing the vehicle to come to a full stop without shifting into neutral or releasing a clutch.

The basic torque converter consists of the:

- Impeller or pump
- Turbine
- Stator


The impeller mounts to the converter housing, which bolts to the flywheel. The turbine is splined to the transmission input shaft.

When the engine is running, the impeller slings the oil in the converter into the fins on the turbine. The pressure of the oil being thrown against the turbine transfers the torque to the transmission input shaft. From there, the torque is passed through the gearset to drive the vehicle.

However, once the oil leaves the turbine, it is moving in the opposite direction of the impeller blades. The stator changes this condition. It is mounted between the turbine and the impeller and redirects the oil so it is moving in the same direction as the impeller. By changing the direction of the oil as it leaves the turbine, the stator actually increases the overall torque in the system. This process is called torque multiplication.

When the engine is applying power to the torque converter assembly, the stator is locked against its one-way clutch. The stator will unlock and begin to rotate slowly when the impeller and turbine have reached similar speeds.

The torque converter has the ability to multiply the torque of the engine up to 2 1/2 times.

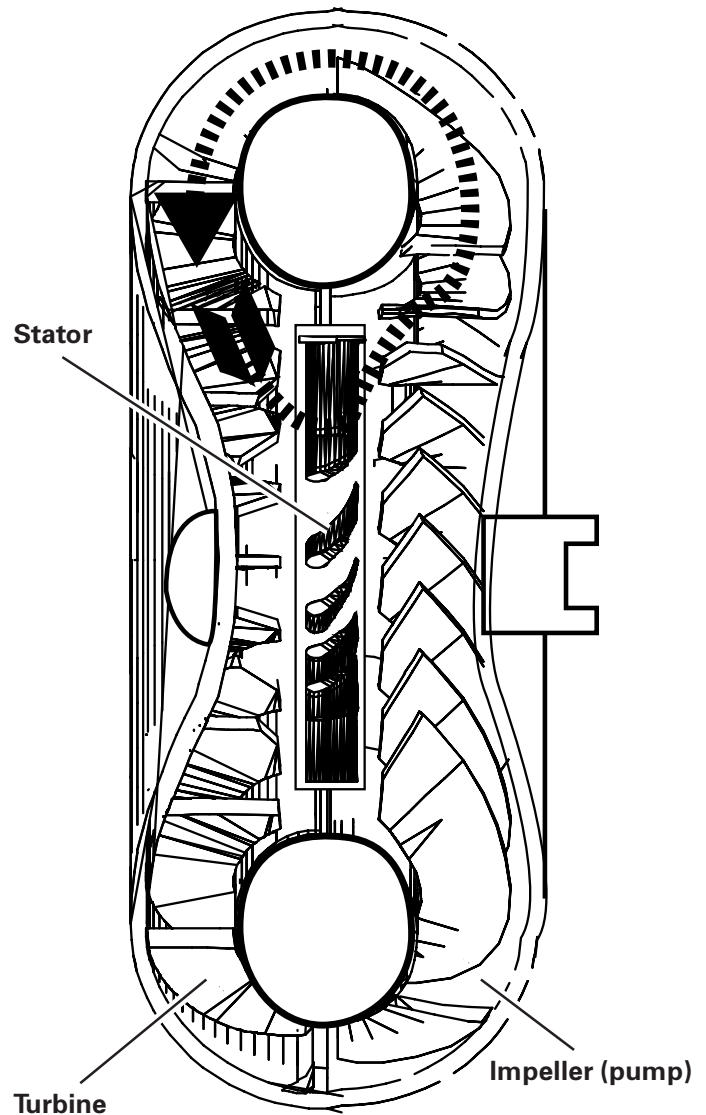

90010612.EPS


Mechanicals/Hydraulics

Torque Converter Lockup

Due to the slippage between the turbine and impeller, a torque converter can only transfer about 85 percent of engine power through to the transmission at cruising speeds. To increase fuel economy, reduce emissions, and reduce heat buildup, a means of mechanically connecting the transmission to the engine was needed.


In the Phase 0 and Phase 1 units, this was accomplished by connecting a shaft to a damper welded to the torque converter housing. The other end of this impeller shaft is connected to the K3 clutch.

When the clutch is applied, power is transmitted directly to the planetary gearset, 'bridging' the torque converter.

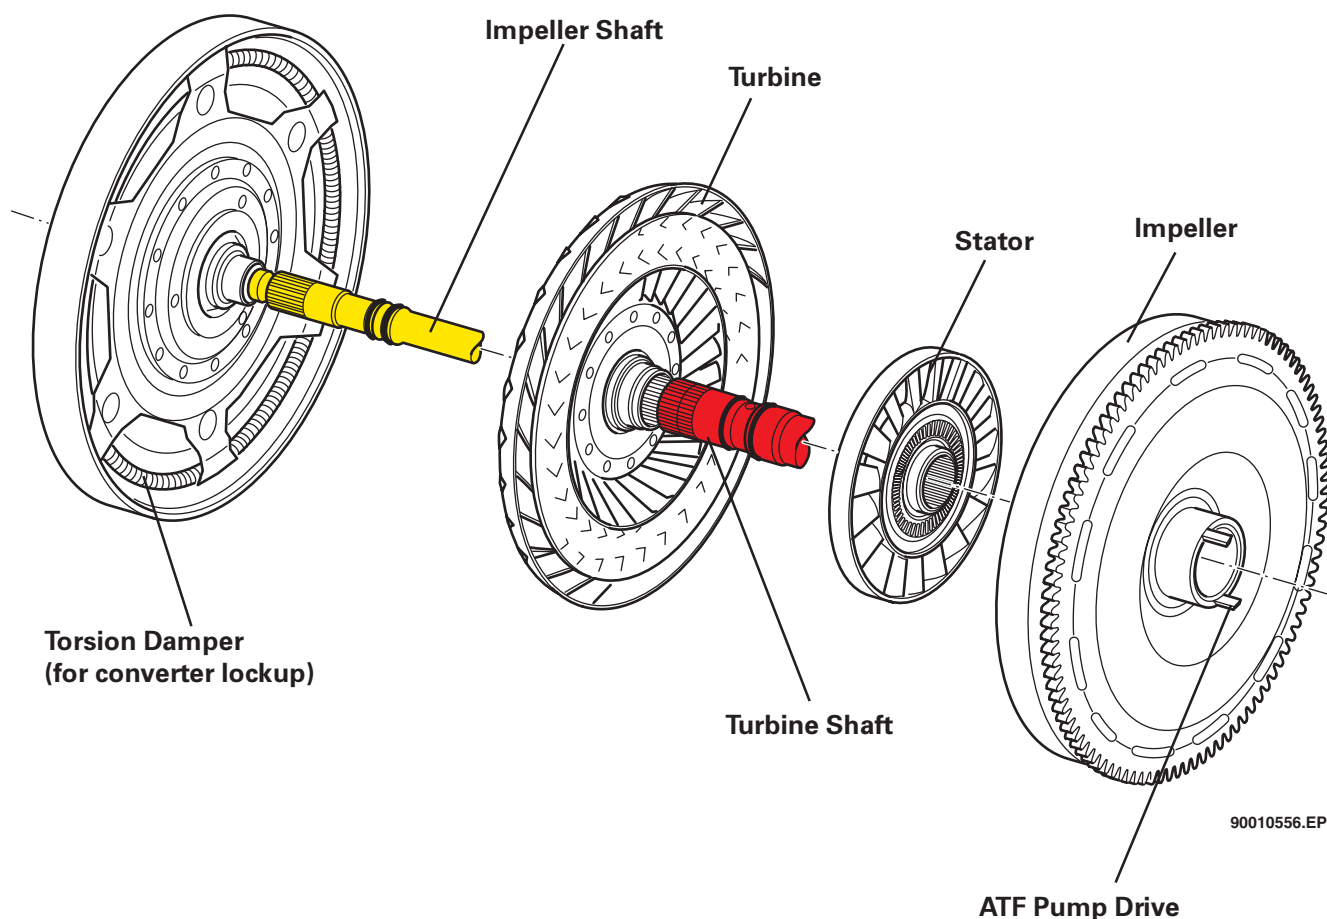


Mechanicals/Hydraulics

Phase 0 and Phase 1 Hydraulic Operation (K3 Clutch Not Applied)

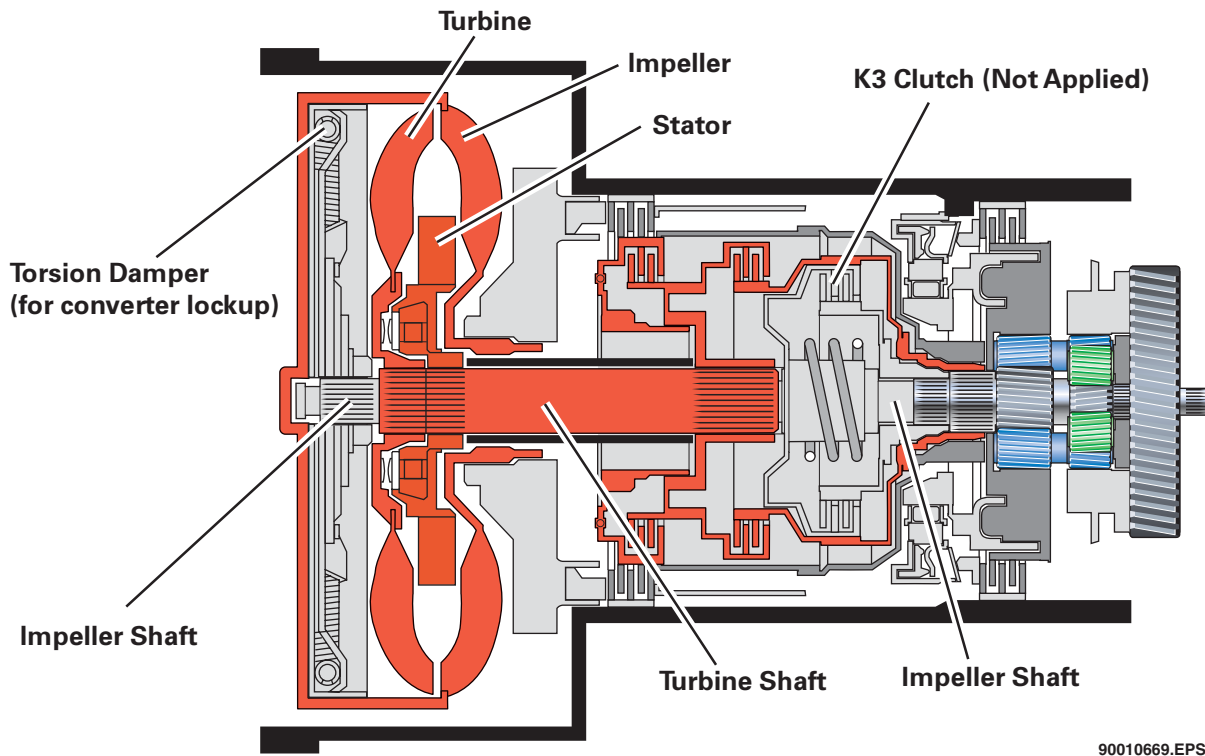

Phase 0 and Phase 1 Mechanical Operation (K3 Clutch Applied)

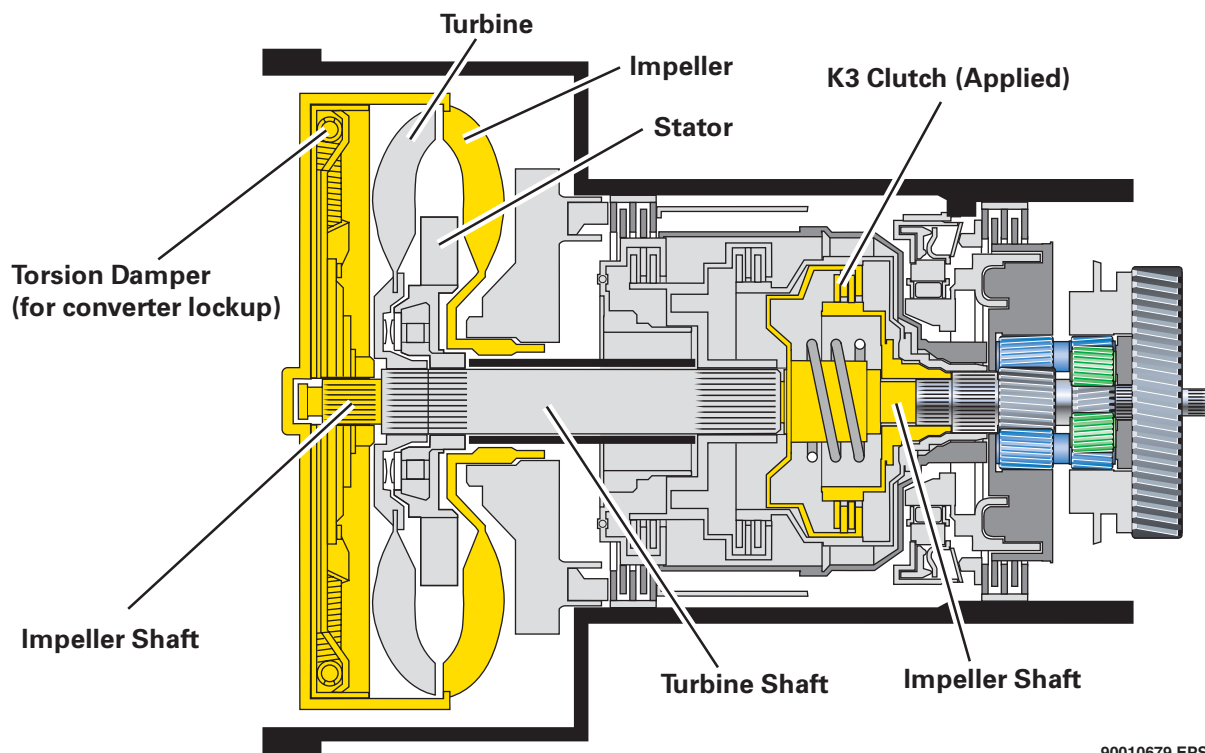

Mechanicals/Hydraulics

Torque Converter Clutch (TCC)

Beginning with the Phase 2 units, the lockup clutch was moved inside the torque converter and renamed the Torque Converter Clutch (TCC). The TCC performs the same function as the combination of the K3 clutch and impeller shaft, but with fewer parts and less weight.

The TCC locks the transmission input shaft directly to the housing of the torque converter, eliminating the fluid coupling and driving the transmission directly from the crankshaft. This eliminates all slip from the torque converter. Since the torque converter produces most of the heat in the transmission, the application of the TCC greatly reduces heat production in the converter.

The TCC in the Phase 2 and Phase 2 ETA has three stages of operation: not applied, control, and applied. These stages can be viewed through the VAS 5051 under the Read Data Block function.


The TCC is inactive during the not applied stage. This is normally in the lower gears under high load.

The TCC is applying, but not fully, during the control stage. This usually happens in the lower gears and under heavy throttle.

The TCC is fully applied during the applied stage. This condition occurs in the higher gears and at light throttle. This also may happen in the lower gears in mountainous regions to increase the engine braking effect on the vehicle.

The torsion damper at the TCC reduces the transfer of the engine's torsional vibrations through the transmission.


Components of the TCC

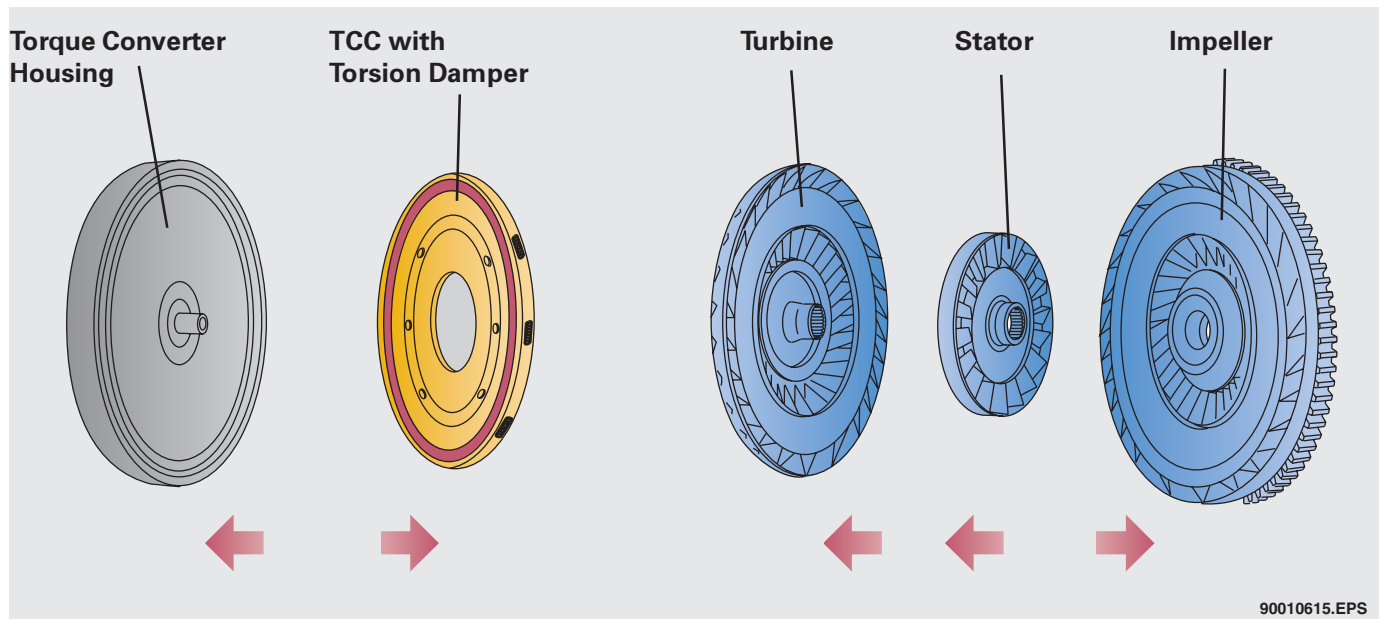

Operating Principle of the TCC

There are three ports in the turbine shaft that carry oil to and from the torque converter. Port B supplies oil to the planetary gearset, while ports A and C are pressurized alternately to open and close the TCC.

The TCC is operated by a modulation valve in the valve body. If the Transmission Control Module (TCM) decides, based on engine speed and torque, that it would be more economical to apply the TCC, it activates valve N91. Because N91 is a modulation valve, it is possible to specifically increase and/or reduce the pressure when closing and opening the TCC, allowing for smooth, comfortable operation.

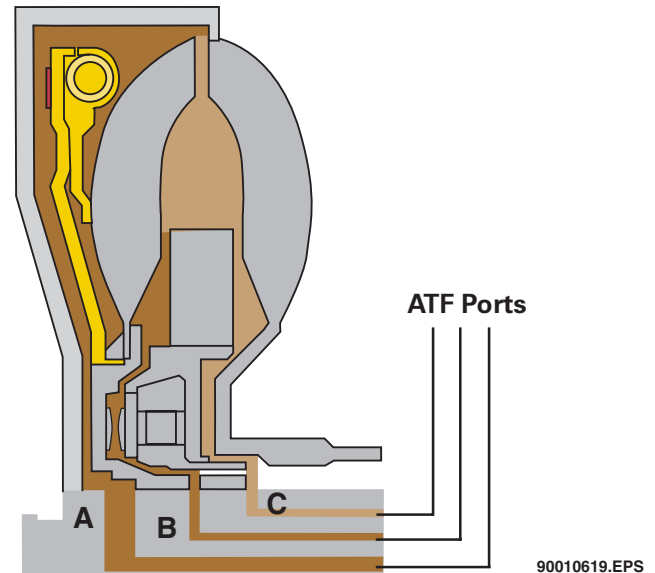


The TCC is Not Applied

The TCC is held open by a diaphragm-type spring. The Automatic Transmission Fluid (ATF) flows through ports A and B. Port C is closed. Pressure on both sides of the TCC is equal, thus pressure from the diaphragm spring holds the TCC open.


The TCC is Applied

ATF is fed through port C while port A is opened. As a result, the oil pressure on the rear of the TCC is higher than on the front, overcoming the spring pressure. The friction lining moves against the torque converter housing and creates a positive connection from the engine to the transmission.

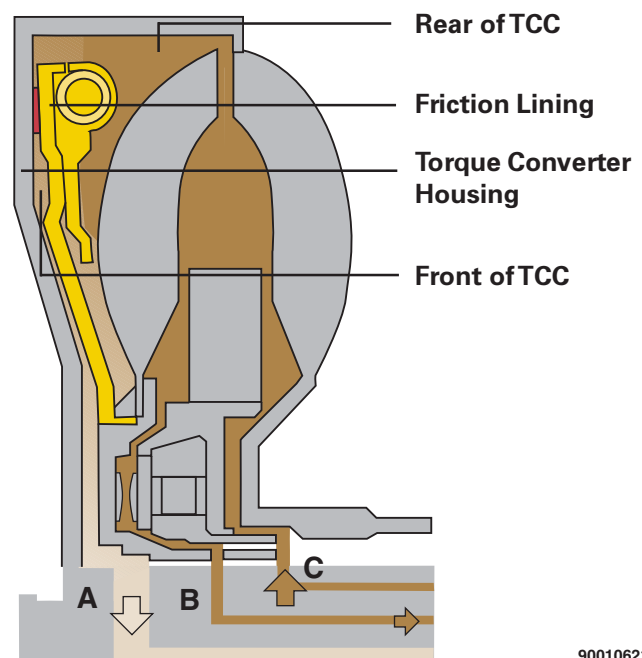


Mechanicals/Hydraulics

Phase 2 and Phase 2 ETA Hydraulic Power Flow (TCC Not Applied)

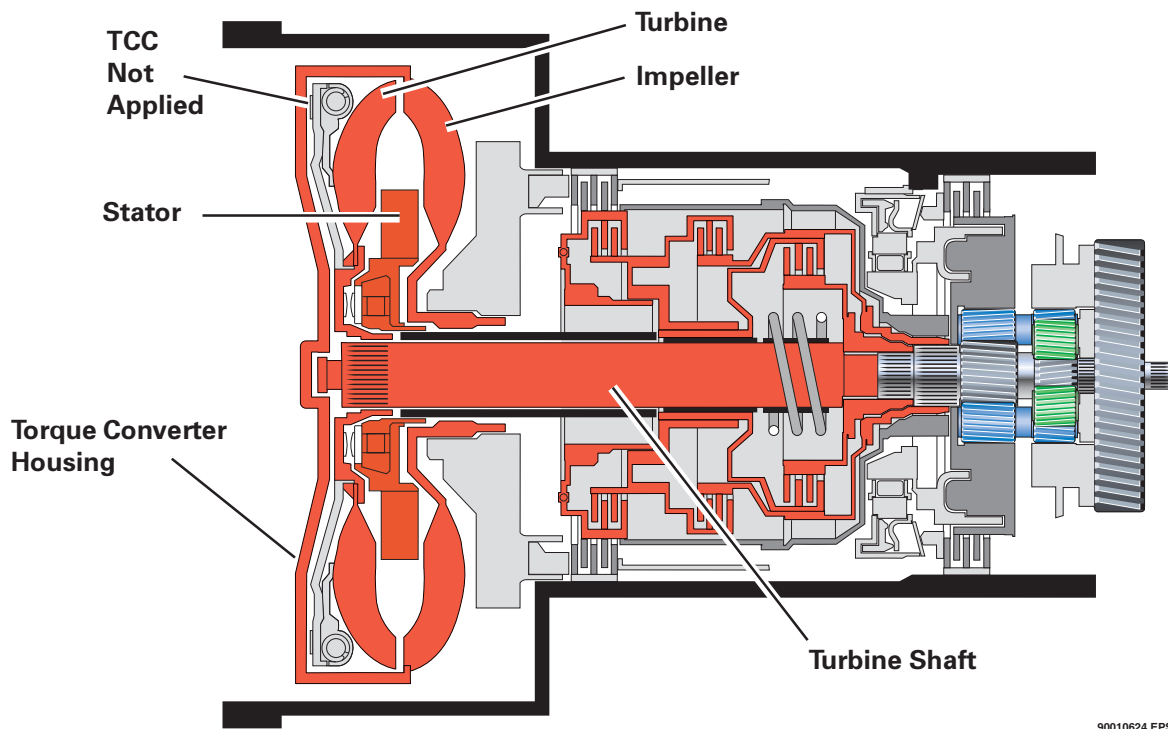

Phase 2 and Phase 2 ETA Mechanical Power Flow (TCC Applied)

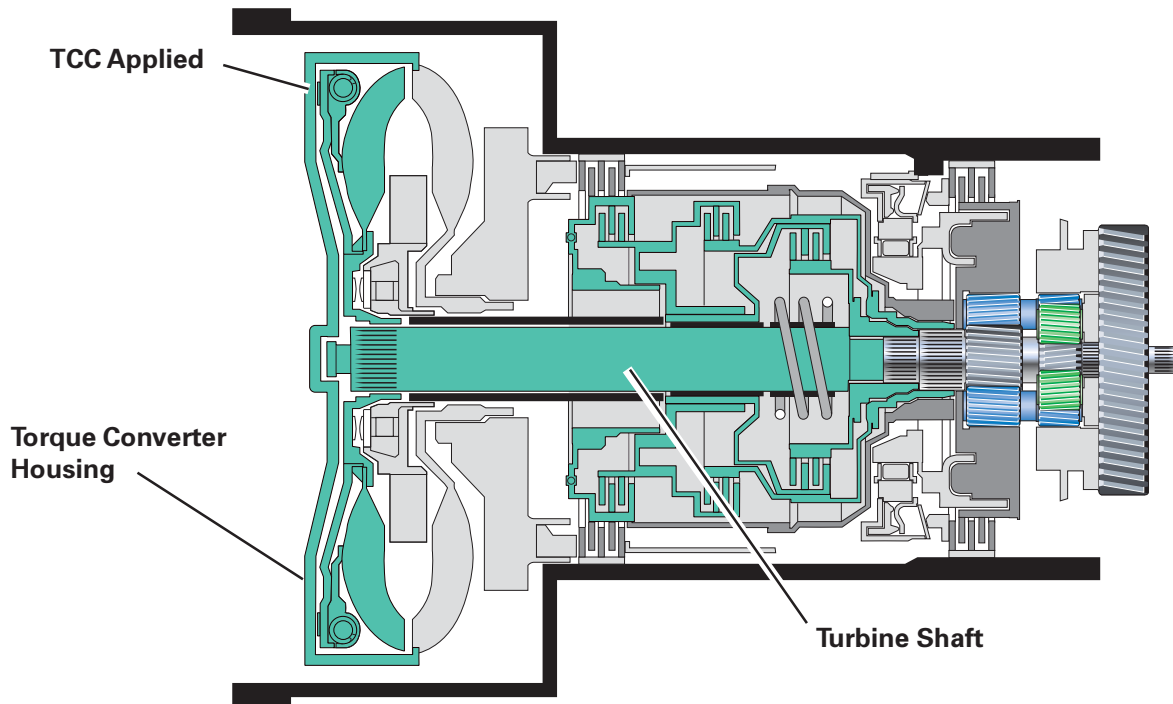


Clutches and Brakes

Volkswagen uses three different methods to hold or turn the different geartrain components:

- Clutches
- Brakes
- Freewheeling Clutches; also known as one-way clutches, or overrunning clutches. Volkswagen uses one-way roller clutches for its freewheeling clutches

The multi-plate clutches and brakes in the four-speed automatic transmission are operated by the ATF forcing a piston against spring pressure to apply the clutch. Clutches and brakes operate in the same manner; the only difference is their function. Clutches couple two components together, while brakes prevent rotation by holding components to the transmission case.

Effective with Phase 1, the multi-plate clutches K1 and K3 are balanced in respect to the centrifugal force. This enables the gearshifts to be performed smoothly and softly with a uniform quality.

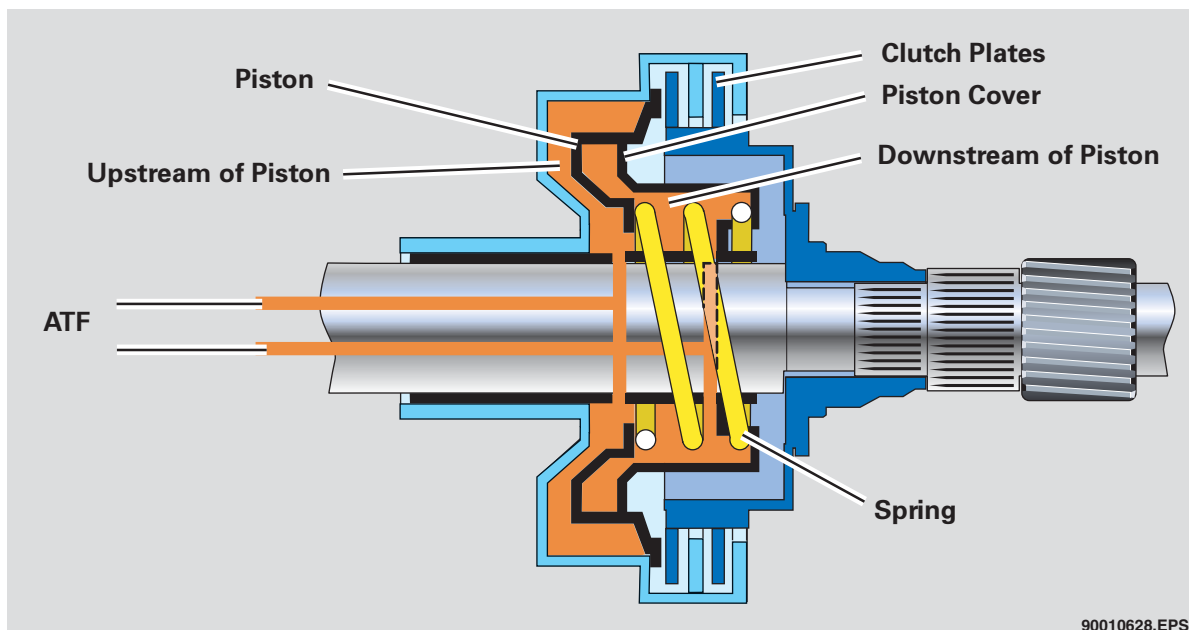

The Clutch is Not Applied


The spring holds the clutch open, regardless of engine speed. The ATF upstream and downstream of the piston does not have pressure. The redesigned piston cover in the Phase 1 and later transmissions prevents centrifugal force from compressing ATF into the clutch disks, creating drag. Preventing this pressure results in uniformly smooth gearshifts.

Mechanicals/Hydraulics

The Clutch is Applied


ATF is forced under pressure into the chamber upstream of the piston to apply the clutch. The ATF pressure overcomes the spring tension and compresses the clutch plates.

Power is now transmitted through the clutch plates.

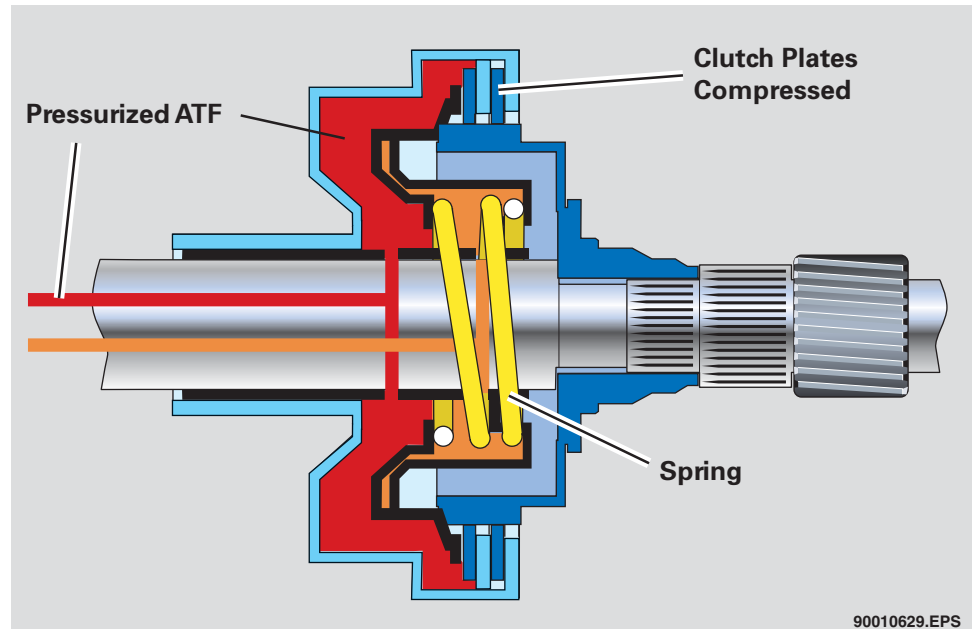

Freewheeling Clutch


The third type of clutch used in the four-speed automatic transmission is the freewheeling clutch. This type of clutch permits rotation in one direction only, through the use of rollers under spring tension.

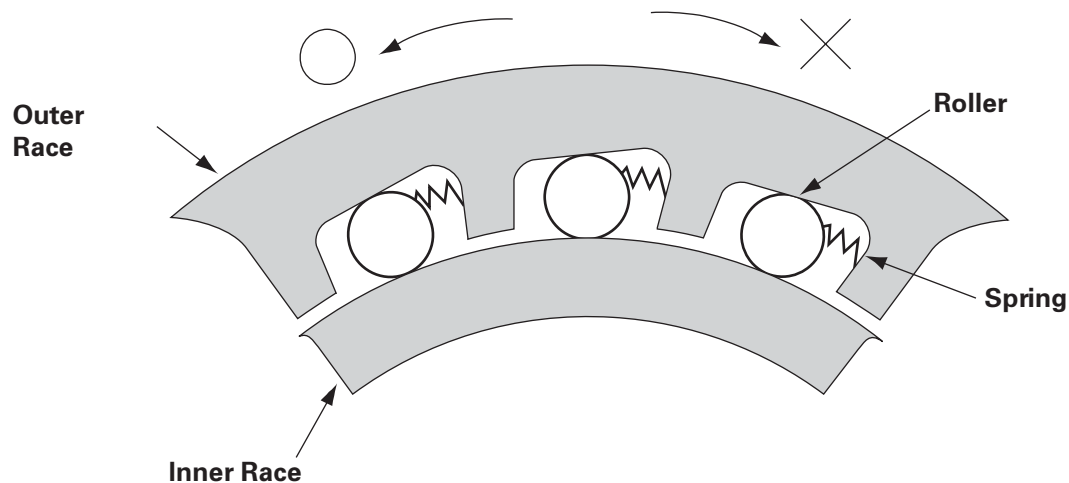

Power Flow

Power flow in the four-speed automatic transmission varies with the different phases. The earlier versions (Phase 0 and Phase 1) use a separate shaft, engaged by the application of clutch K3 (solenoid valve N90), to provide a direct, mechanical connection between the engine and transmission.

Beginning with Phase 2 and continuing with Phase 2 ETA, this mechanical connection is achieved with a TCC inside the torque converter. The TCC is controlled by modulation valve N91.

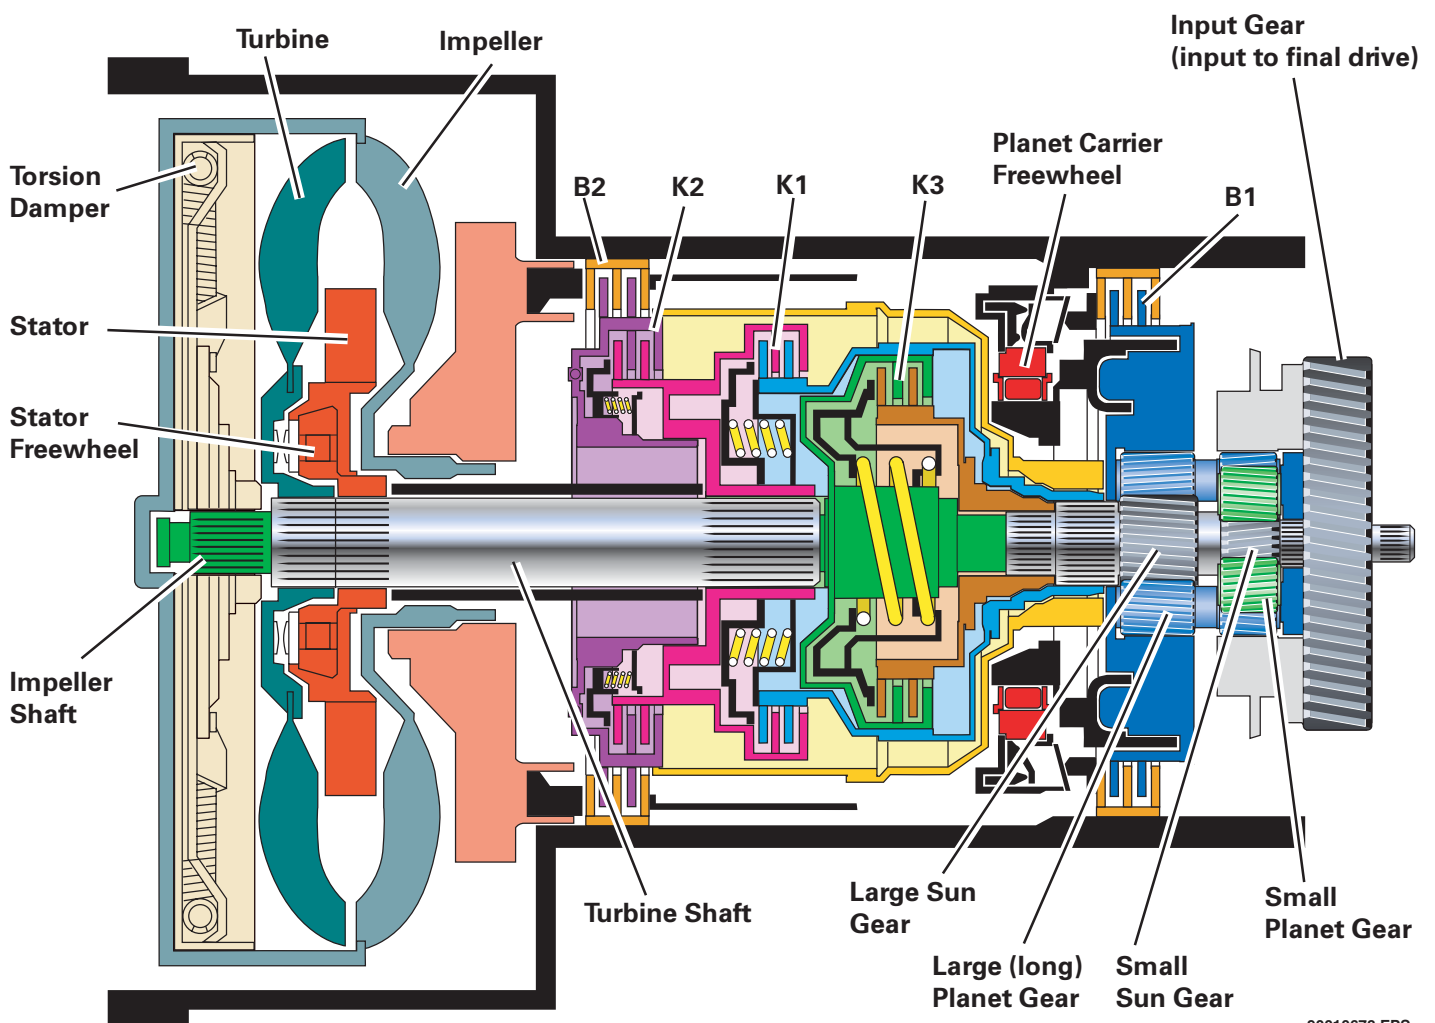

Mechanicals/Hydraulics


Phase 0 and Phase 1

Power flow is illustrated on the following pages using schematics similar to the example below.

Only the active components are 'called out' in the schematics.




Gear ratios are given as examples only. Actual ratios vary with application. Always refer to current service information for the most accurate specifications.

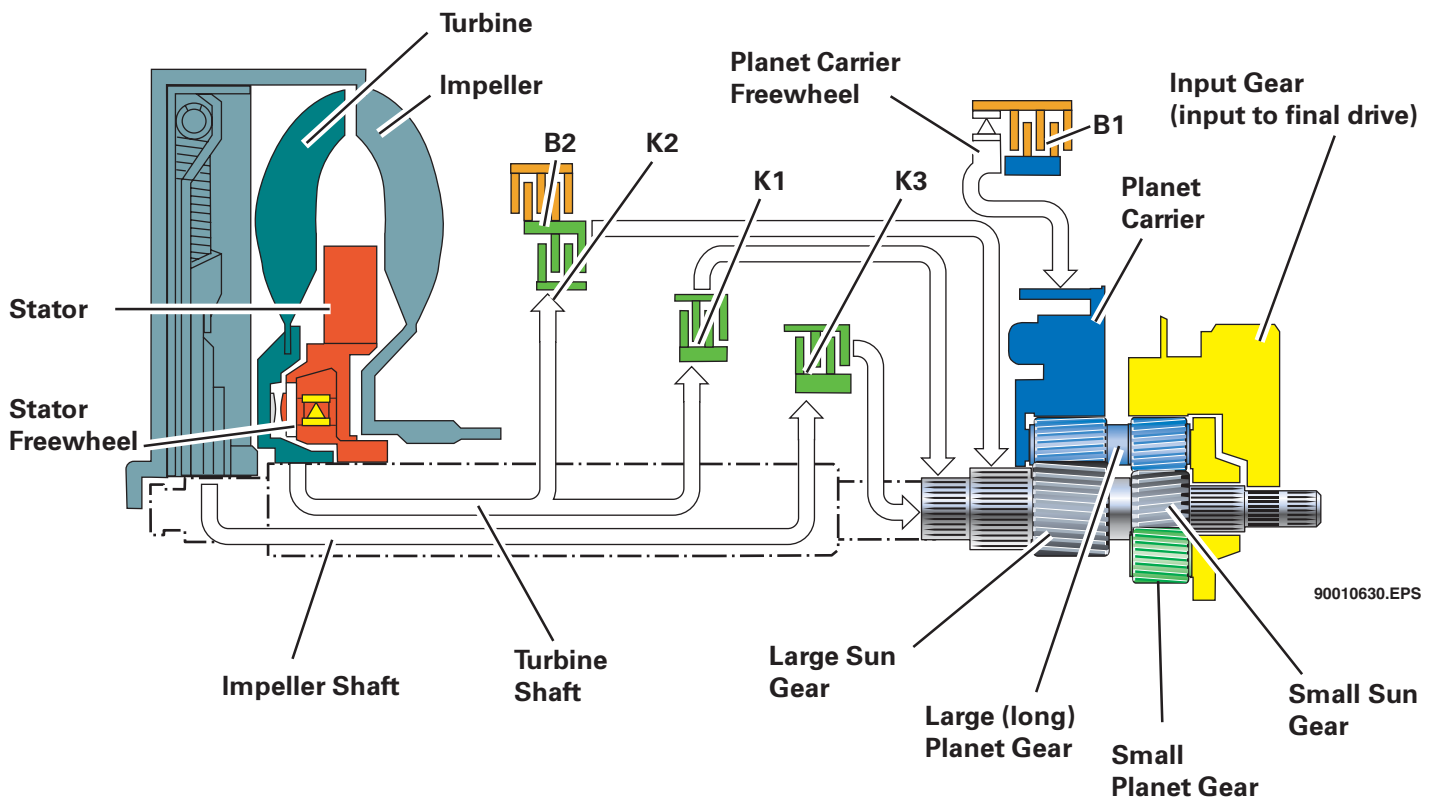


Mechanicals/Hydraulics

1st Gear Hydraulic, Phase 0 and 1 Selector Position "D"

Transmission ratio of 1st gear is 2.714:1
(example only).

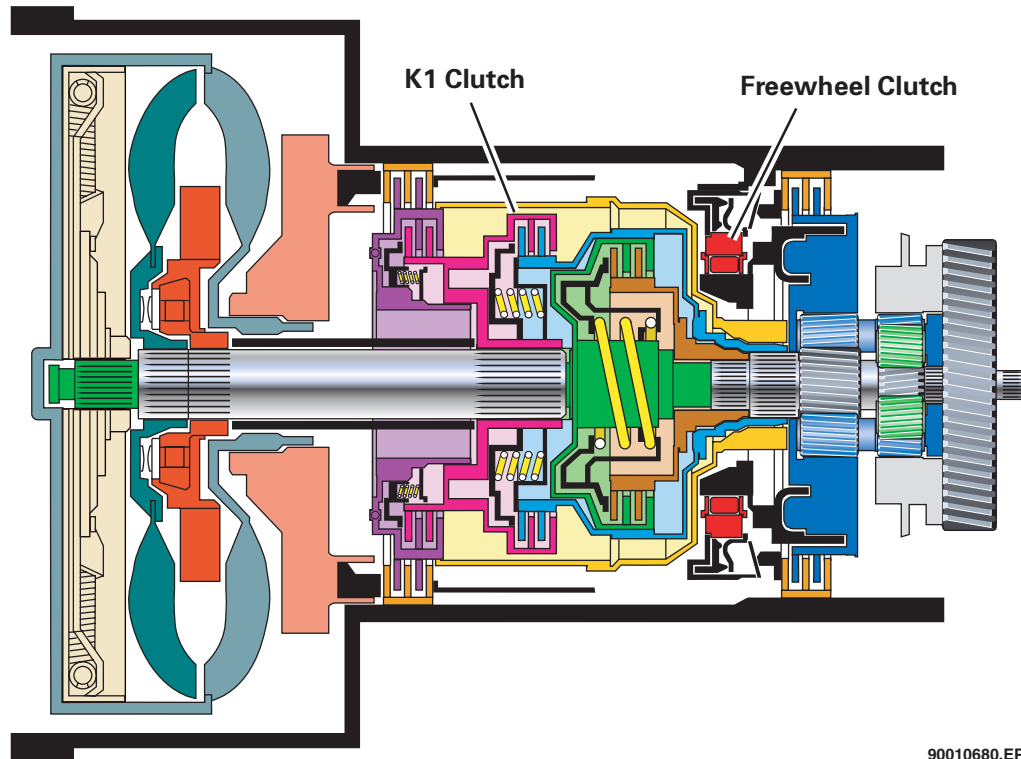

90010680.EPS

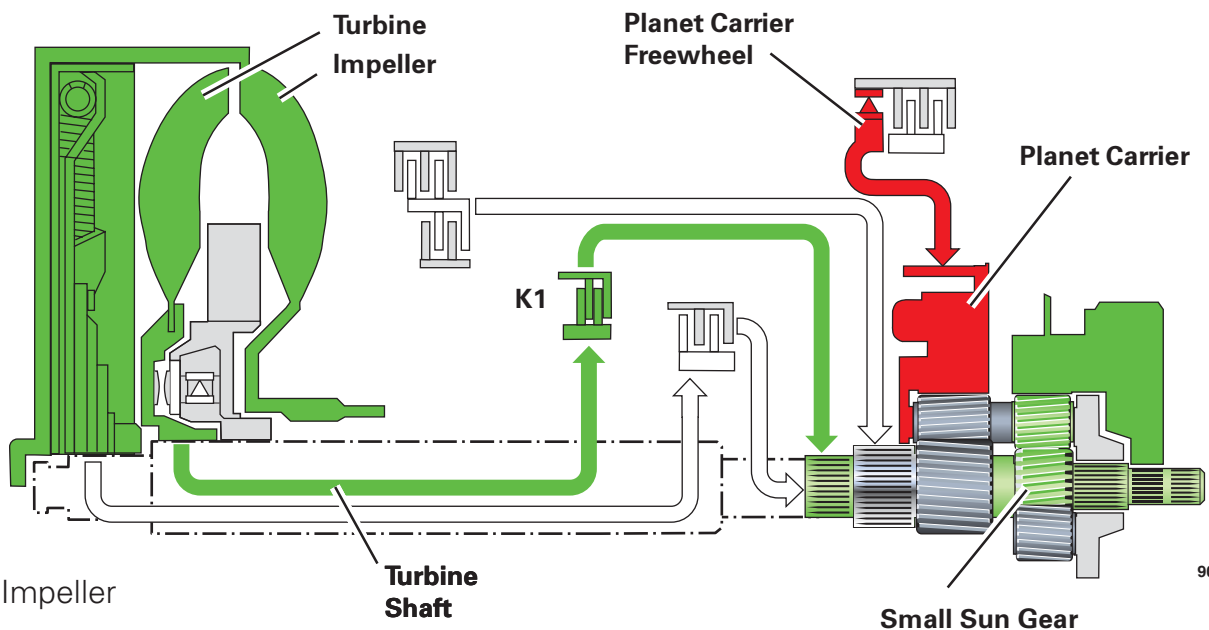



90010632.EPS

- Impeller
- Turbine
- Clutch K1 (solenoid valve N88) drives the small sun gear
- Planet carrier is held by the freewheel

Mechanicals/Hydraulics

2nd Gear Hydraulic, Phase 0 and 1 Selector Position "D"

Transmission ratio of 2nd gear is 1.551:1
(example only).

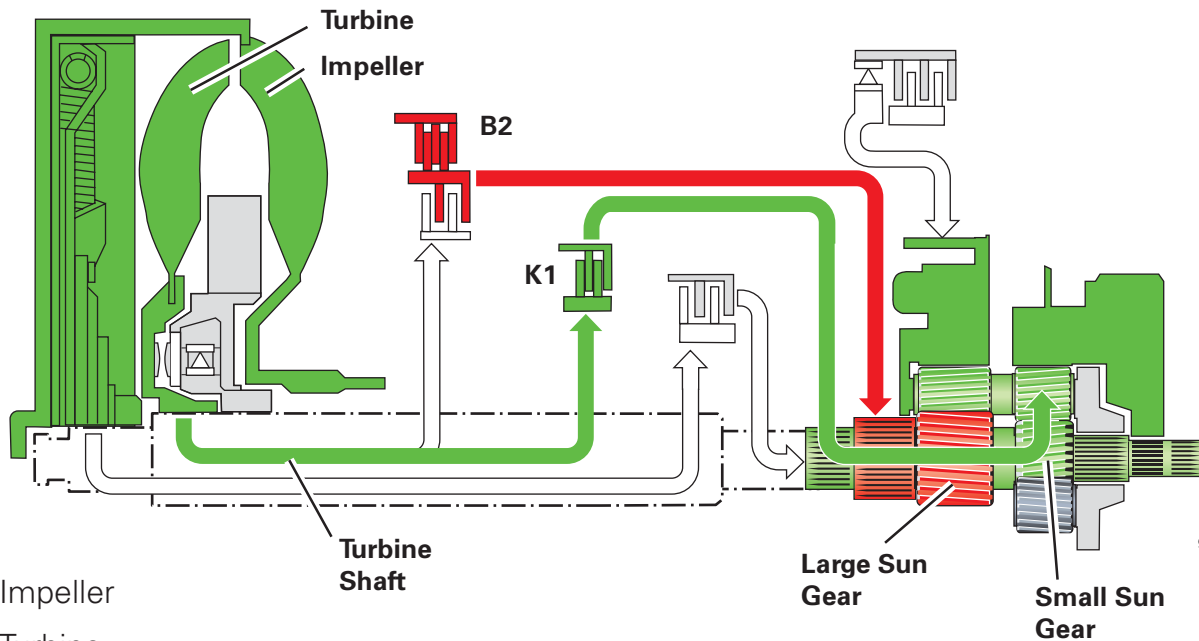
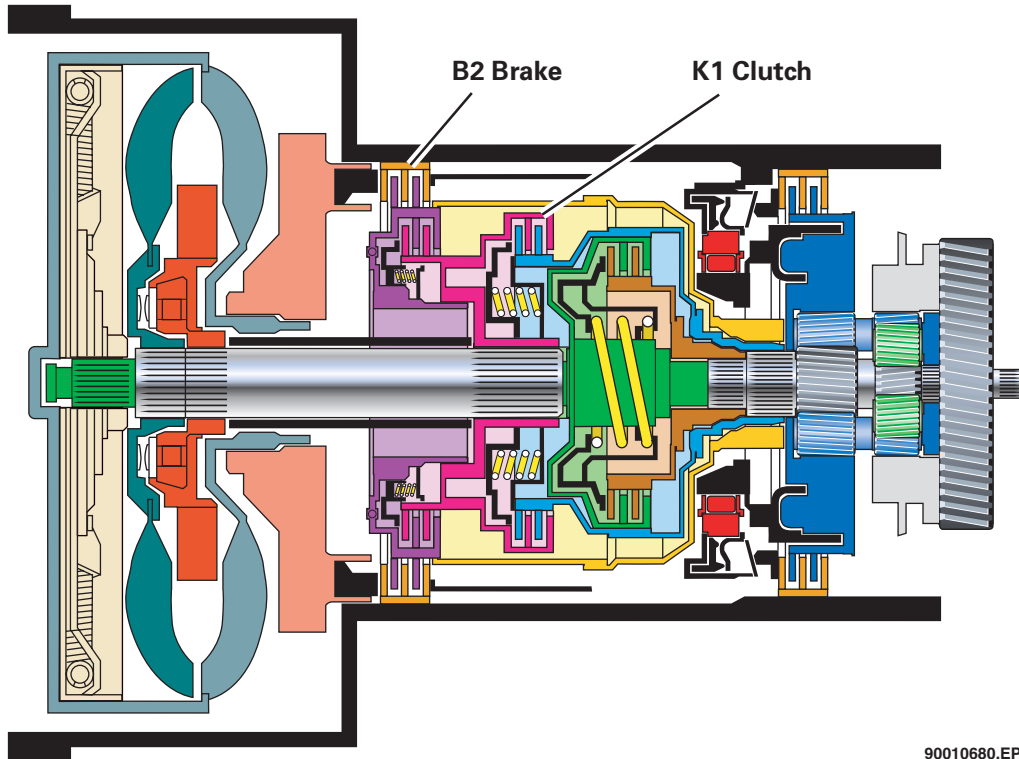


- Impeller
- Turbine
- Clutch K1 (solenoid valve N88) drives the small sun gear
- Brake B2 (solenoid valve N89) holds the large sun gear

Mechanicals/Hydraulics

3rd Gear Hydraulic, Phase 0 and 1 Selector Position "D"

Transmission ratio of 3rd gear is 1.00:1
(example only).

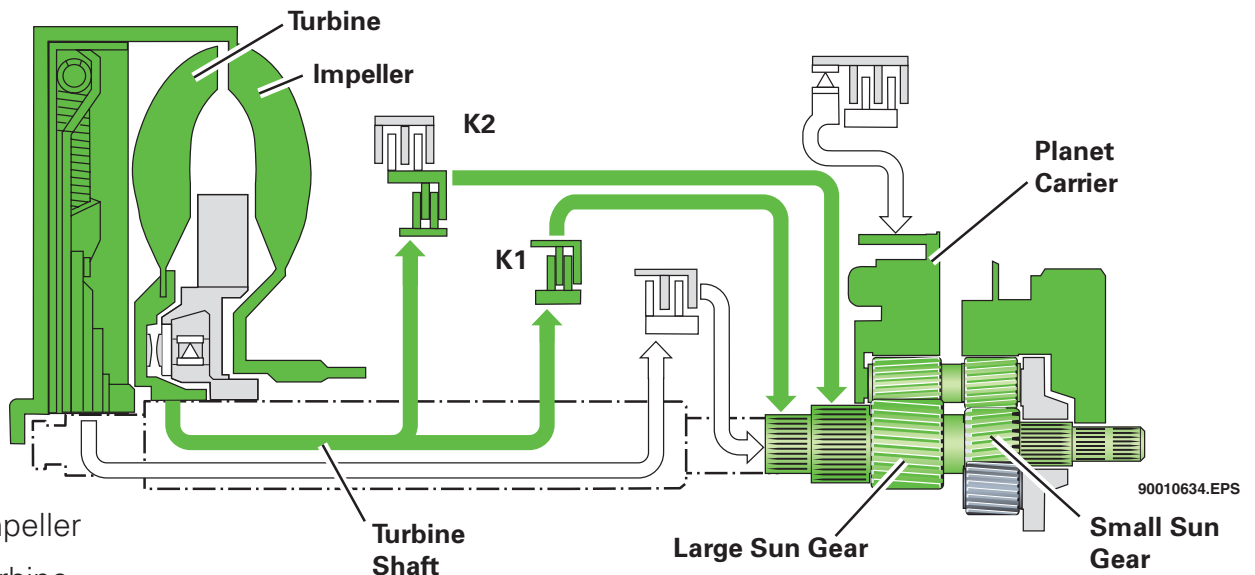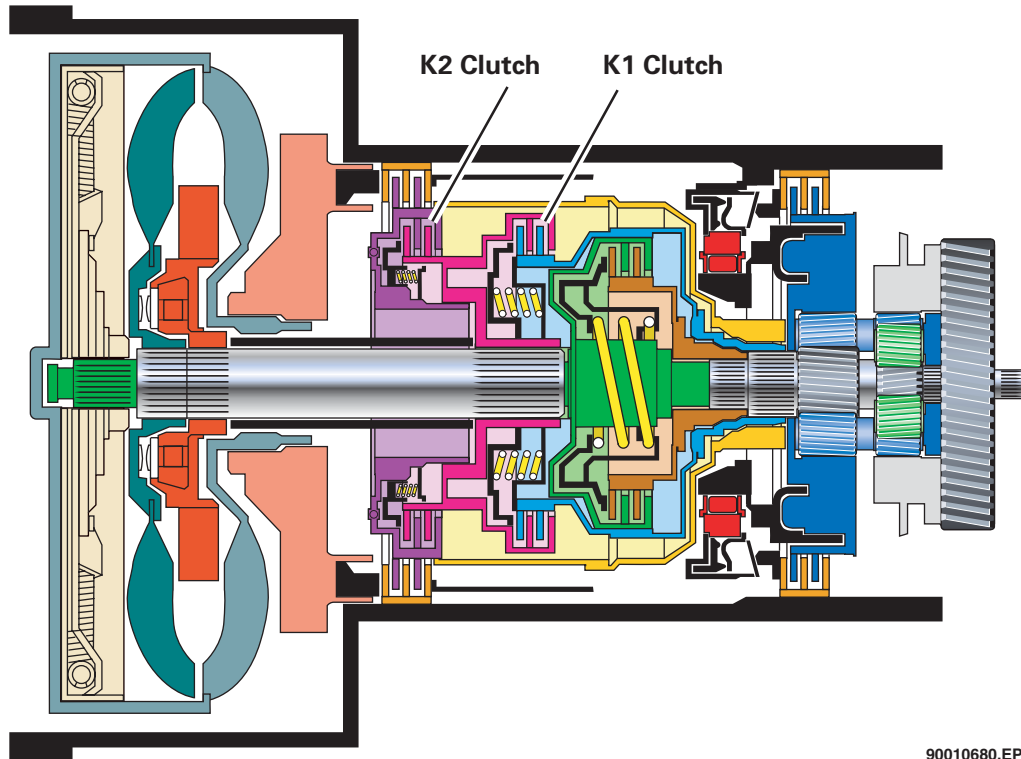



- Impeller
- Turbine
- Clutch K1 (solenoid valve N88) drives the small sun gear
- Clutch K2 is closed by the selector lever and drives the large sun gear
- Planet carrier

As the small sun gear and the large sun gear are driven, the entire planetary gearset rotates.

Mechanicals/Hydraulics

3rd Gear Mechanical, Phase 0 Only Selector Position "D"

Transmission ratio of 3rd gear is 1.00:1
(example only).

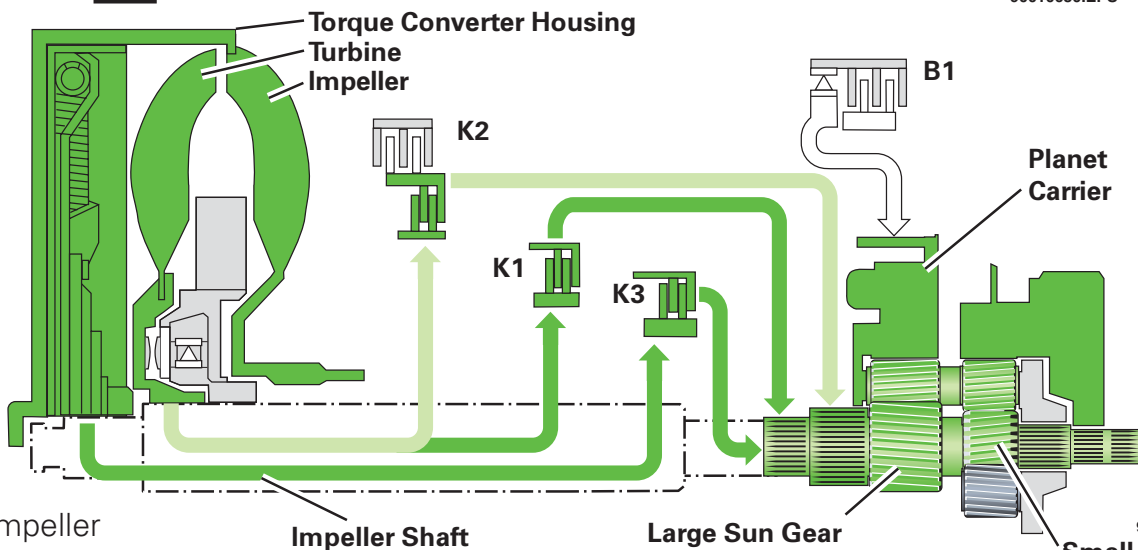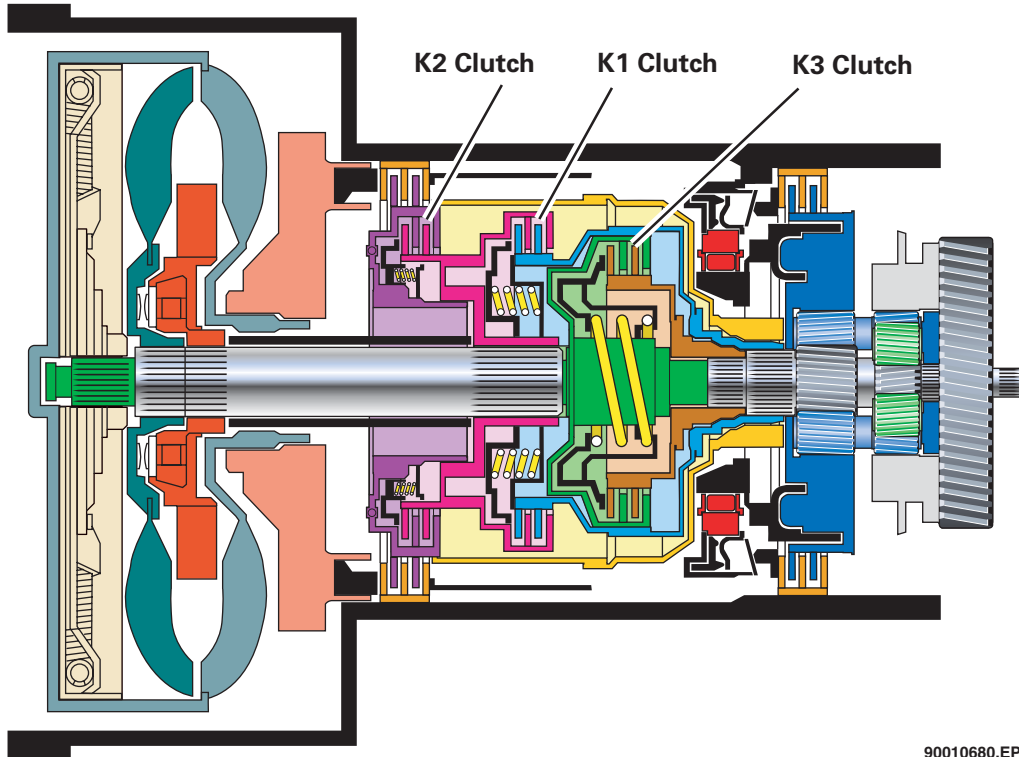

- Impeller
- Turbine
- Clutch K1 (solenoid valve N88) drives the small sun gear
- Clutch K2 is closed by the selector lever and drives the large sun gear
- Planet carrier



Clutch K3 (solenoid valve N90) locks the planet carrier to the torque converter housing through the impeller shaft.

As the small sun gear and the large sun gear are driven, the entire planetary gearset rotates.

Mechanicals/Hydraulics

4th Gear Mechanical, Phase 0 and 1 Selector Position "D"

Transmission ratio of 4th gear is 0.697:1
(example only).

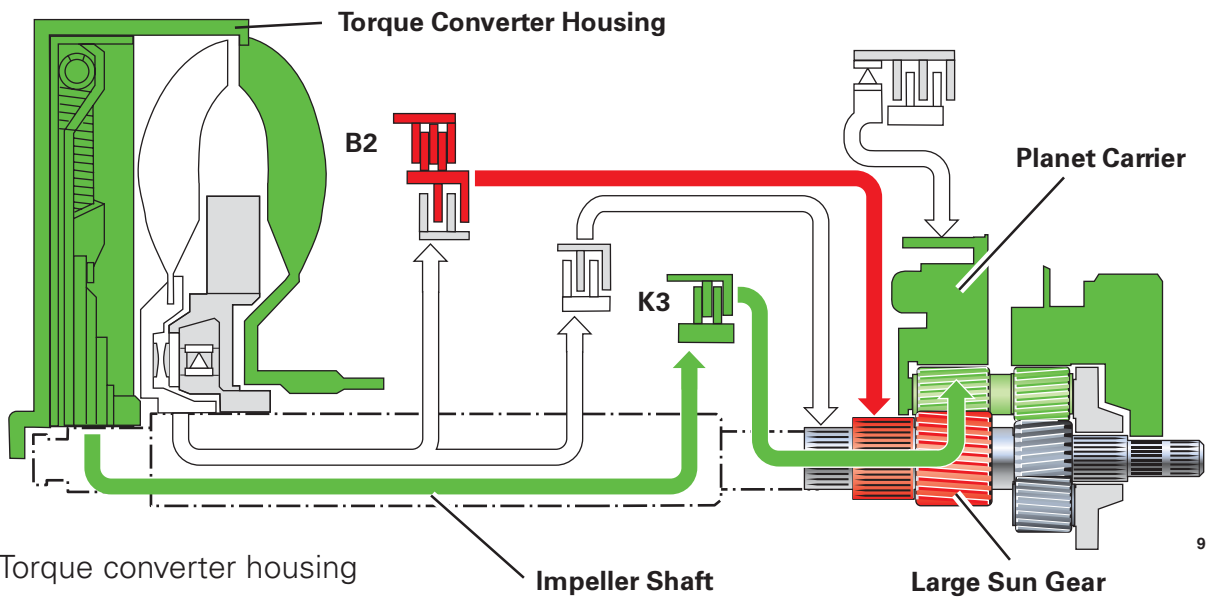
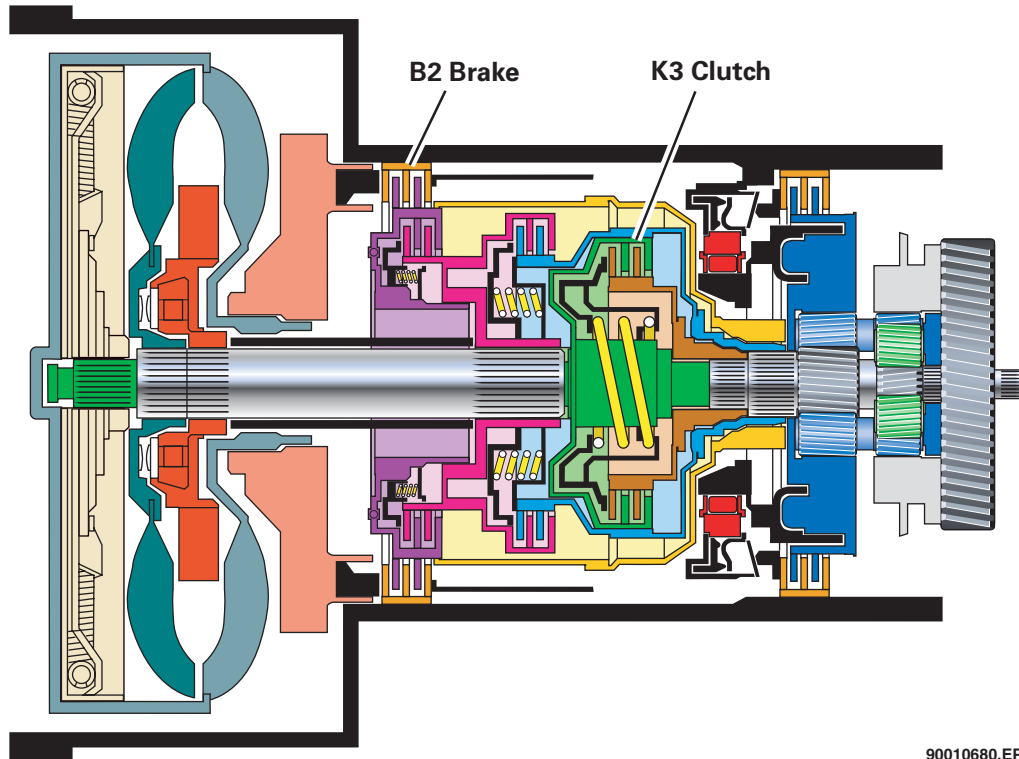


- Torque converter housing
- Impeller shaft
- Clutch K3 (solenoid valve N90) drives the planet carrier
- Brake B2 (solenoid valve N89) holds the large sun gear
- The planetary gearset orbits around the large sun gear

Mechanicals/Hydraulics

Reverse Gear Hydraulic, Phase 0 and 1 Selector Position "R"

Transmission ratio of Reverse is 2.111:1
(example only).

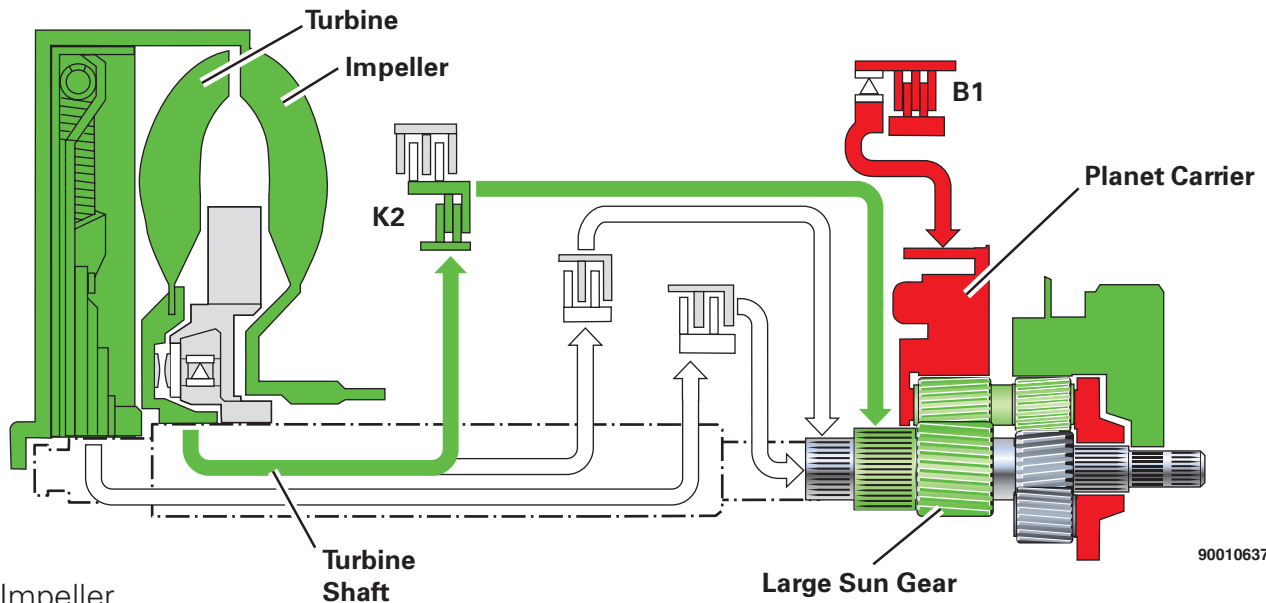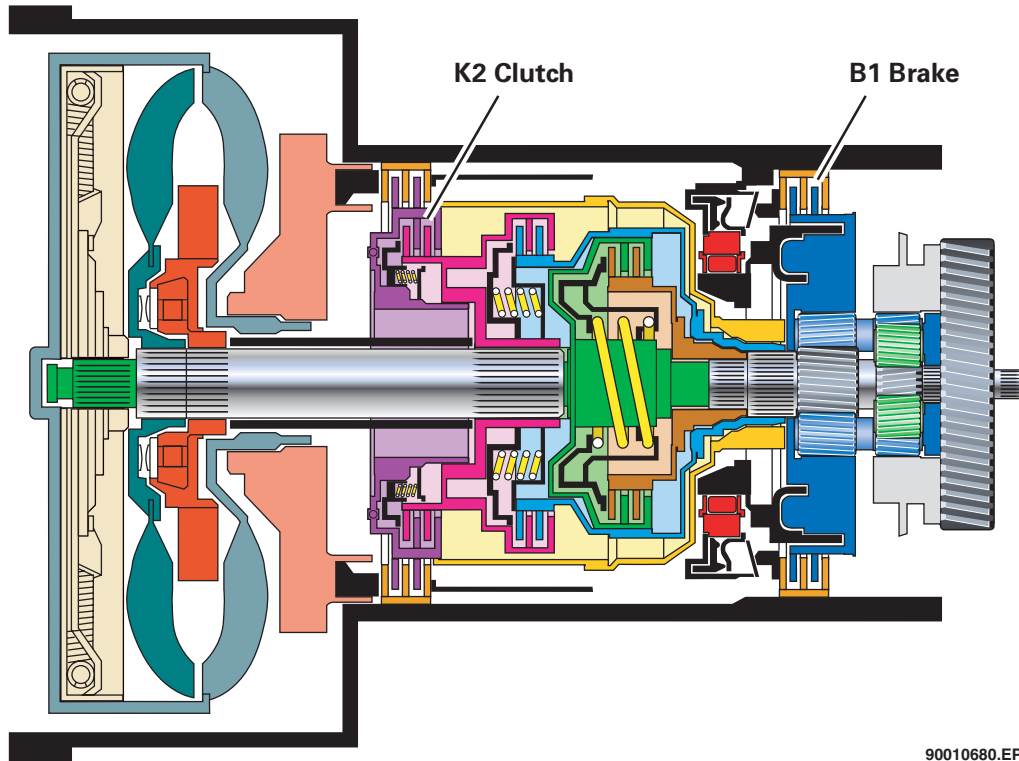


- Impeller
- Turbine
- Brake B1 (solenoid valve N92) holds the planet carrier
- Clutch K2 is closed by the selector lever and drives the large sun gear


Mechanicals/Hydraulics

1st Gear Hydraulic, Phase 0 and 1 Selector Position Manual Low

Transmission ratio of 1st gear is 2.71:1
(example only).

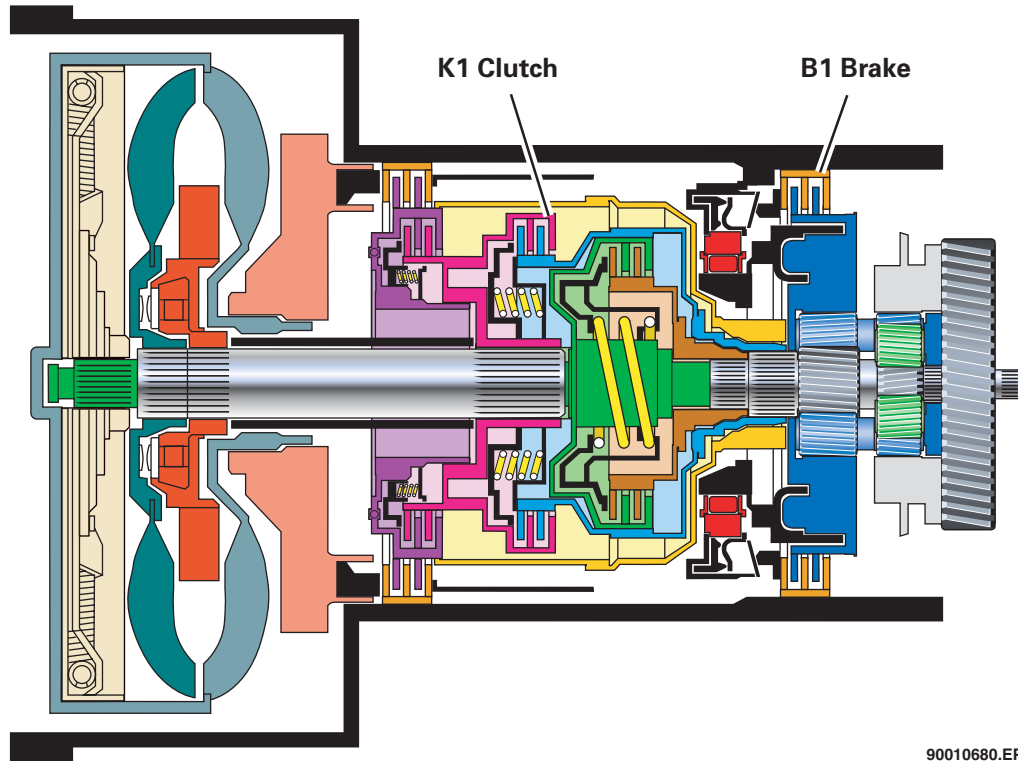

90010680.EPS

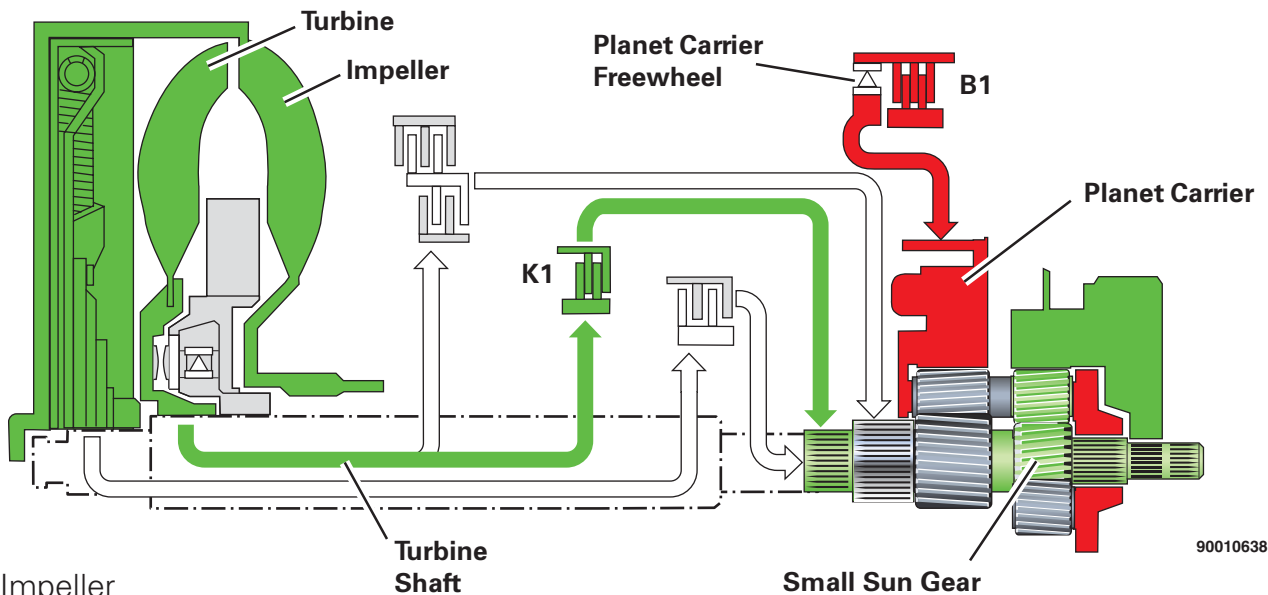

90010638.EPS

- Impeller
- Turbine
- Clutch K1 (solenoid valve N88) drives the small sun gear
- Brake B1 (engaged by the selector valve) holds the planet carrier

Mechanicals/Hydraulics

Phase 2 and Phase 2 ETA

The clutches and brakes are operated by the TCM through the solenoid valves in the valve body.


Beginning with Phase 2 transmissions, torque converter lockup is accomplished using the TCC within the torque converter.

Lockup is possible in all gears, but is limited by the TCM to 2nd, 3rd, and 4th.

Power flow through the planetary gearset remains the same, regardless of mechanical or hydraulic operation.

Clutches K1, K2, and K3 pass the power to the planetary gearset.

- Brake B2 holds the large sun gear
- Clutch K2 drives the large sun gear
- Clutch K1 drives the small sun gear
- Clutch K3 drives the planet carrier
- Brake B1 holds the planet carrier

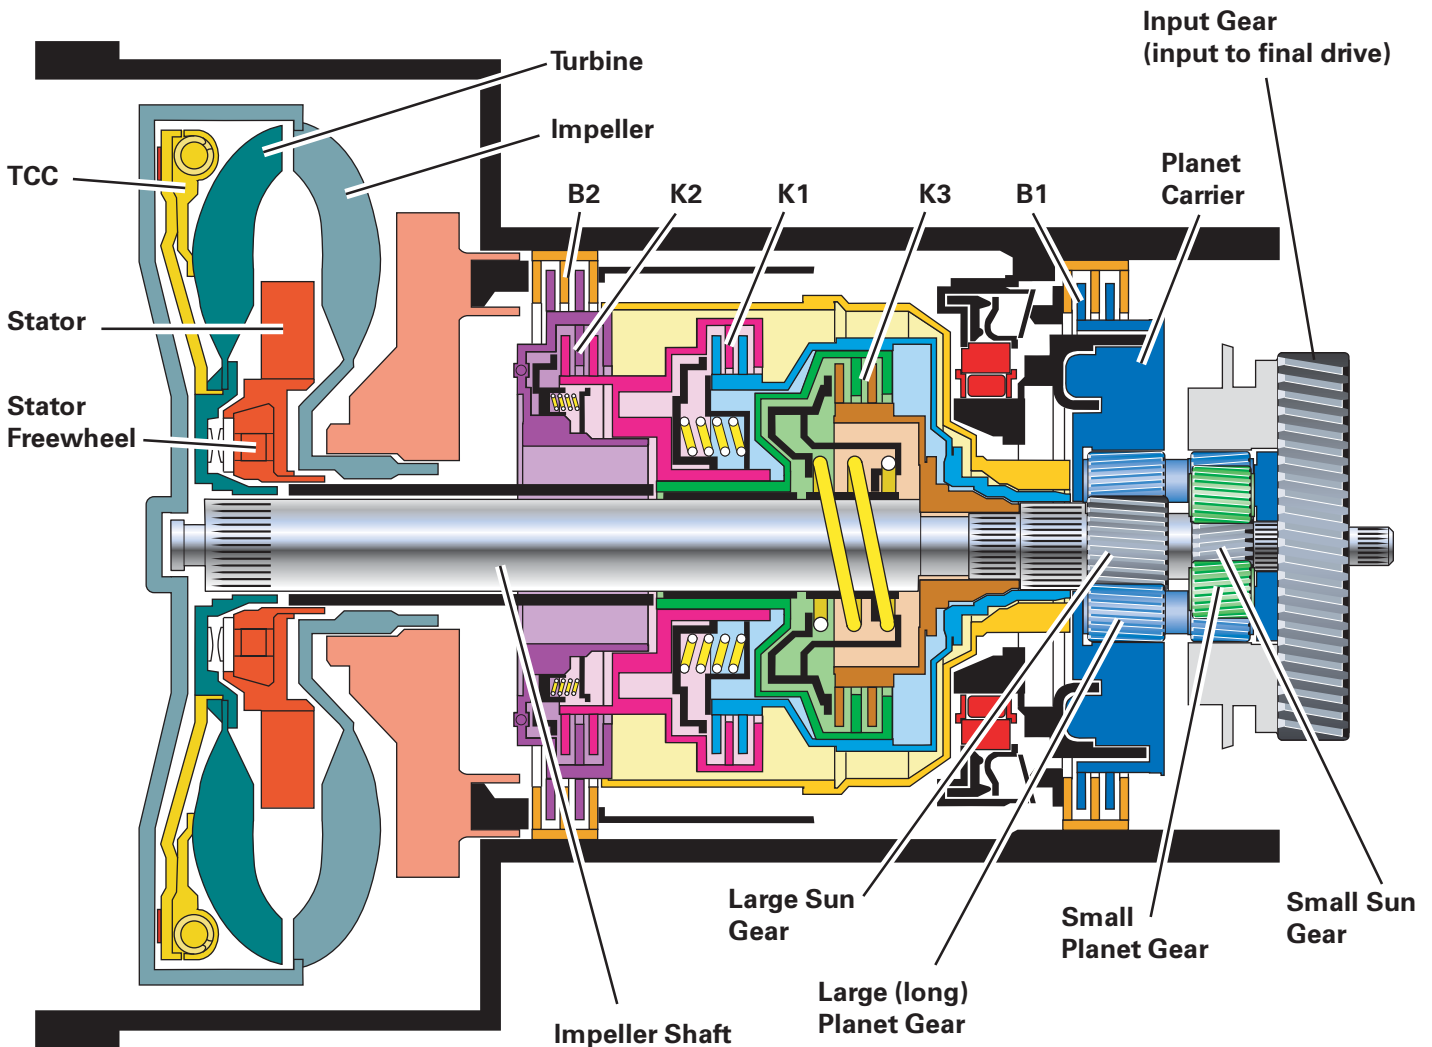

90010647.EPS


Mechanicals/Hydraulics

Power flows are illustrated using the same type of schematics used for the Phase 0 and Phase 1 transmissions.

Only the active components are 'called out'.





Gear ratios are given as examples only. Actual ratios vary with application. Always refer to current service information for the most accurate specifications.

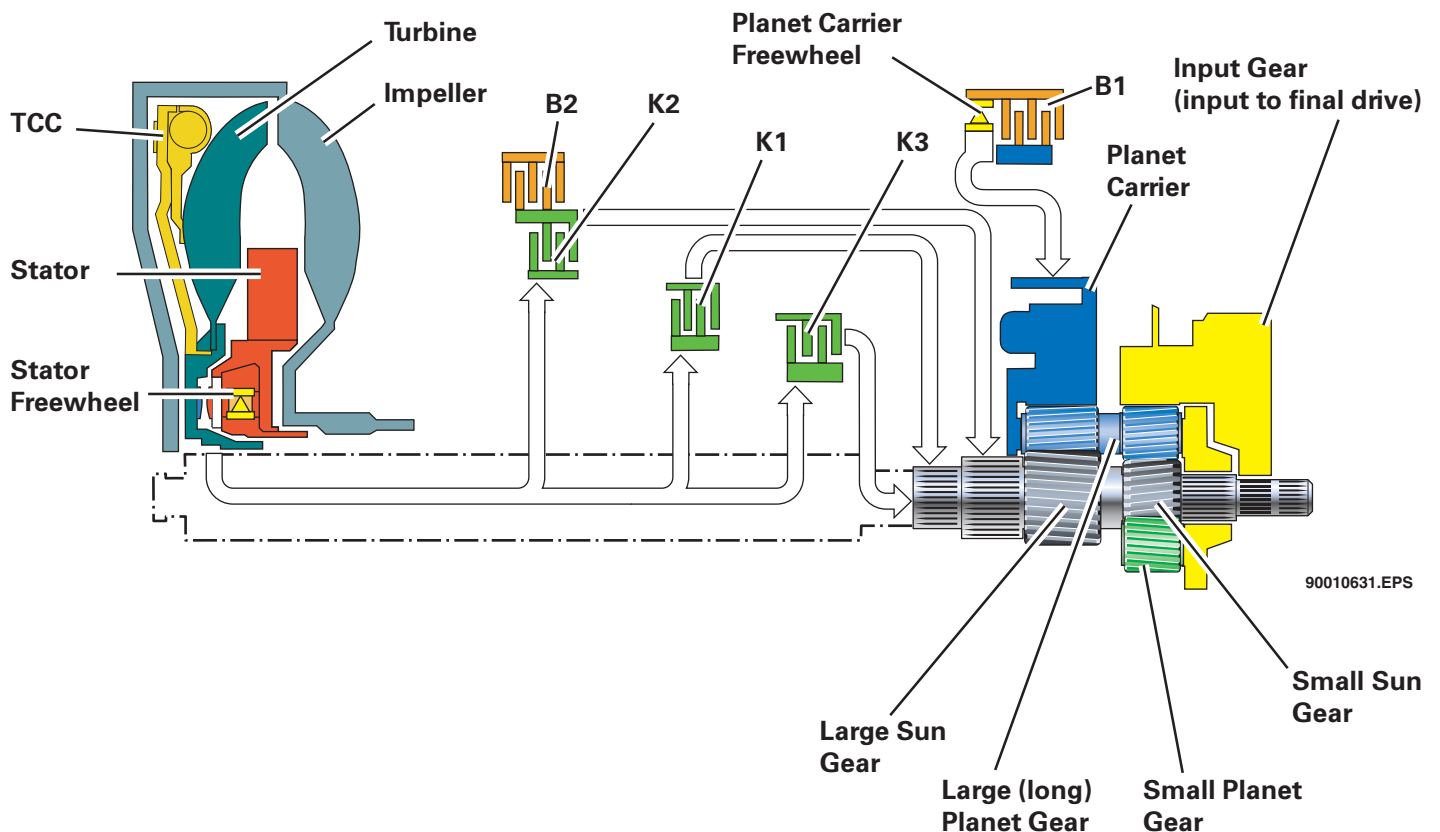

Mechanicals/Hydraulics

1st Gear Hydraulic, Phase 2 and Phase 2 ETA Selector Position "D"

Transmission ratio of 1st gear is 2.71:1
(example only).

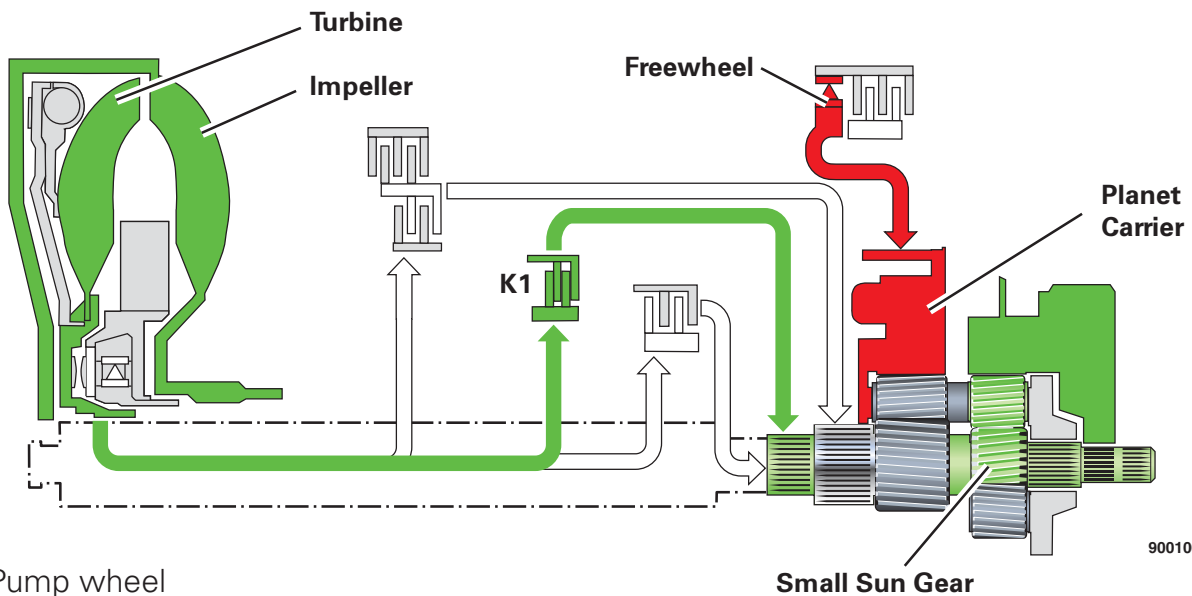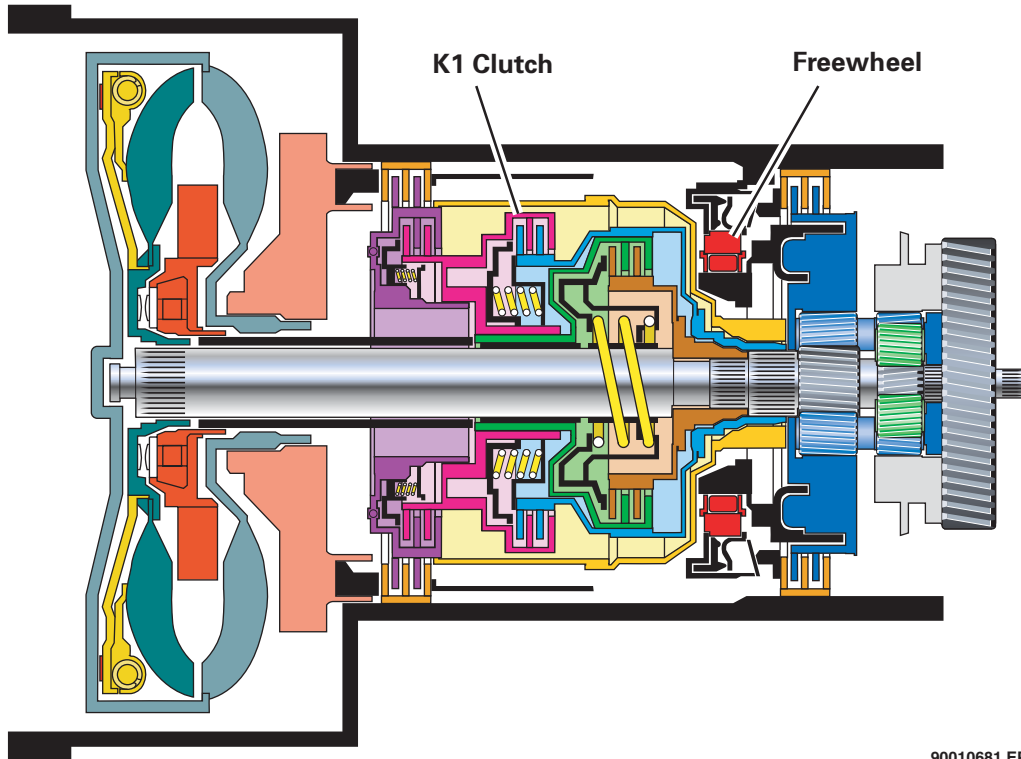


- Pump wheel
- Turbine Wheel
- Clutch K1 (solenoid valve N88)
- Drives the small sun wheel
- The planet carrier is held by the freewheel


Mechanicals/Hydraulics

2nd Gear Hydraulic, Phase 2 and Phase 2 ETA Selector Position "D"

Transmission ratio of 2nd gear is 1.44:1
(example only).

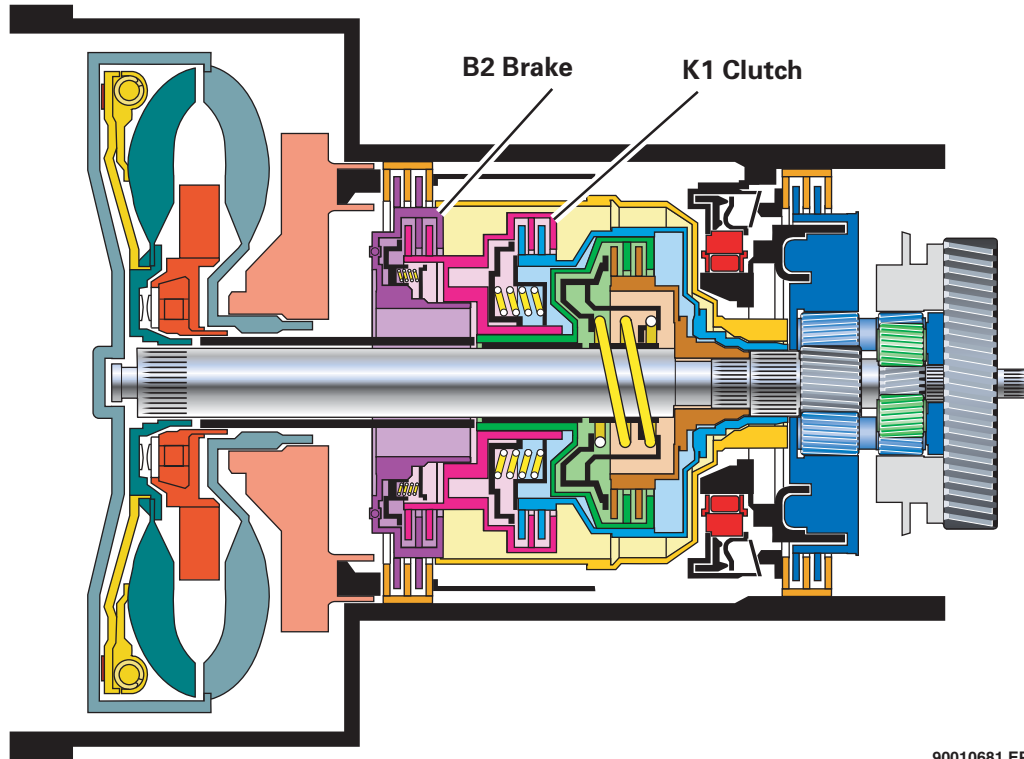

90010681.EPS

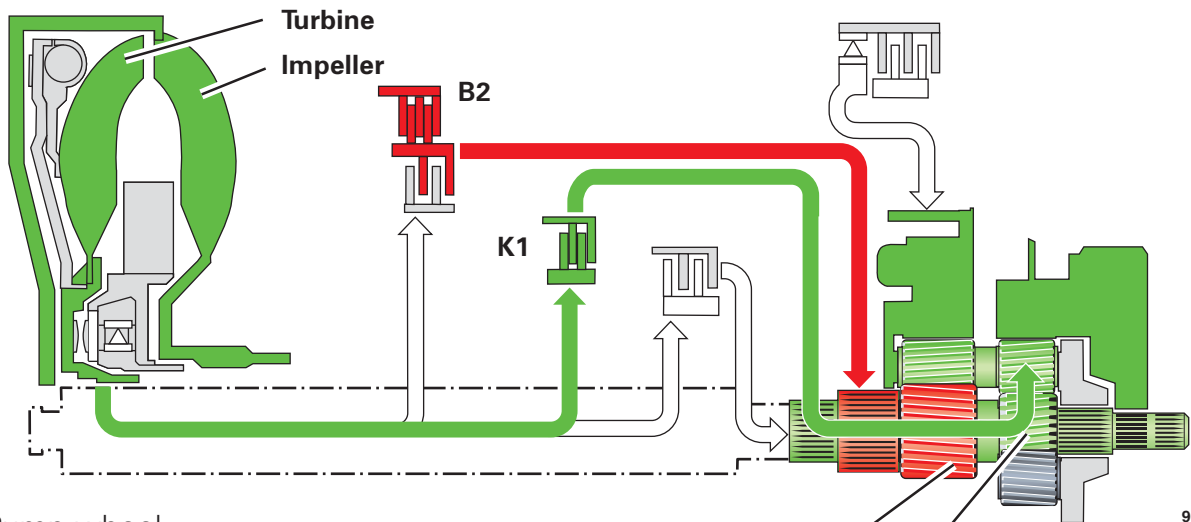

90010640.EPS

- Pump wheel
- ➔ Turbine wheel
- ➔ Clutch K1 (solenoid valve N88)
- ➔ Drives the small sun gear
- ➔ Brake B2 (solenoid valve N89)
- ➔ Holds the large sun gear


Large Sun Gear

Small Sun Gear


Mechanicals/Hydraulics

3rd Gear Hydraulic, Phase 2 and Phase 2 ETA Selector Position "D"

Transmission ratio of 3rd gear is 1.0:1
(example only).

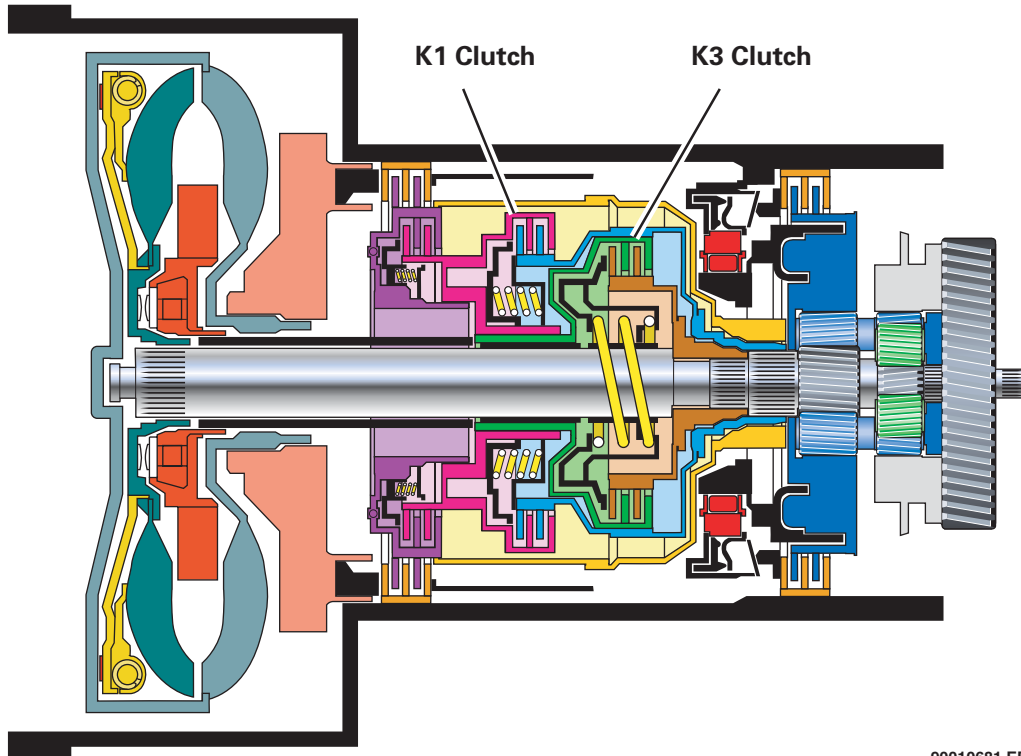

90010681.EPS

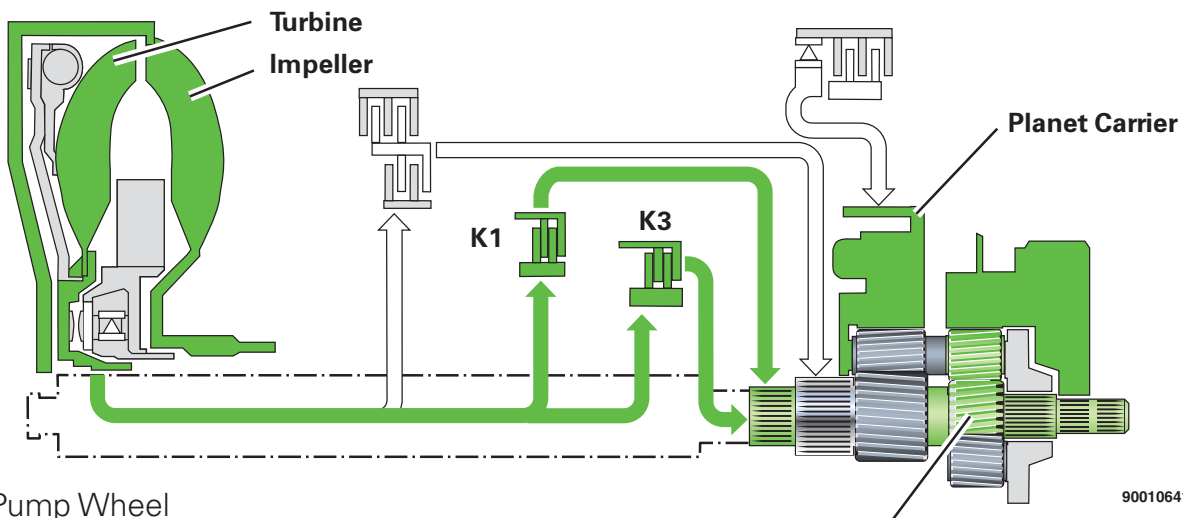

90010641.EPS



- Pump Wheel
- Turbine wheel
- Clutch K1 (solenoid valve N88)
- Small sun wheel
- Clutch K3 (solenoid valve N90)
- Planet carrier

As the small sun wheel and the planet carrier are driven, the entire planetary gearset rotates.

Mechanicals/Hydraulics

3rd Gear Mechanical, Phase 2 and Phase 2 ETA Selector Position "D"

Transmission ratio of 3rd gear is 1.0:1
(example only).

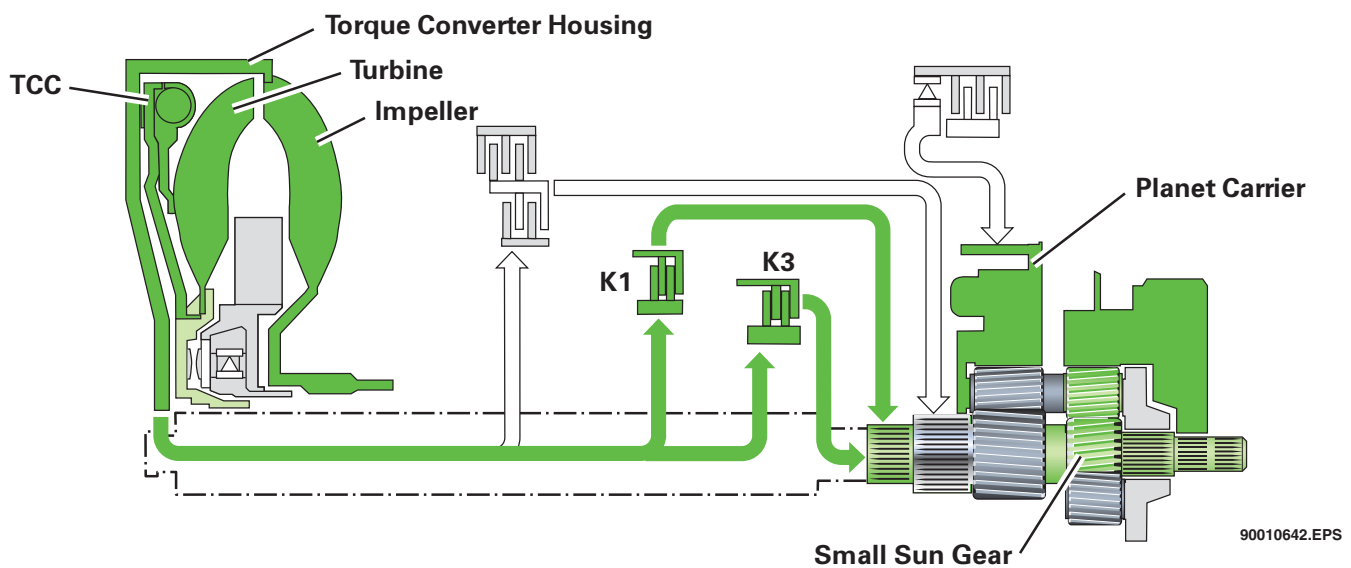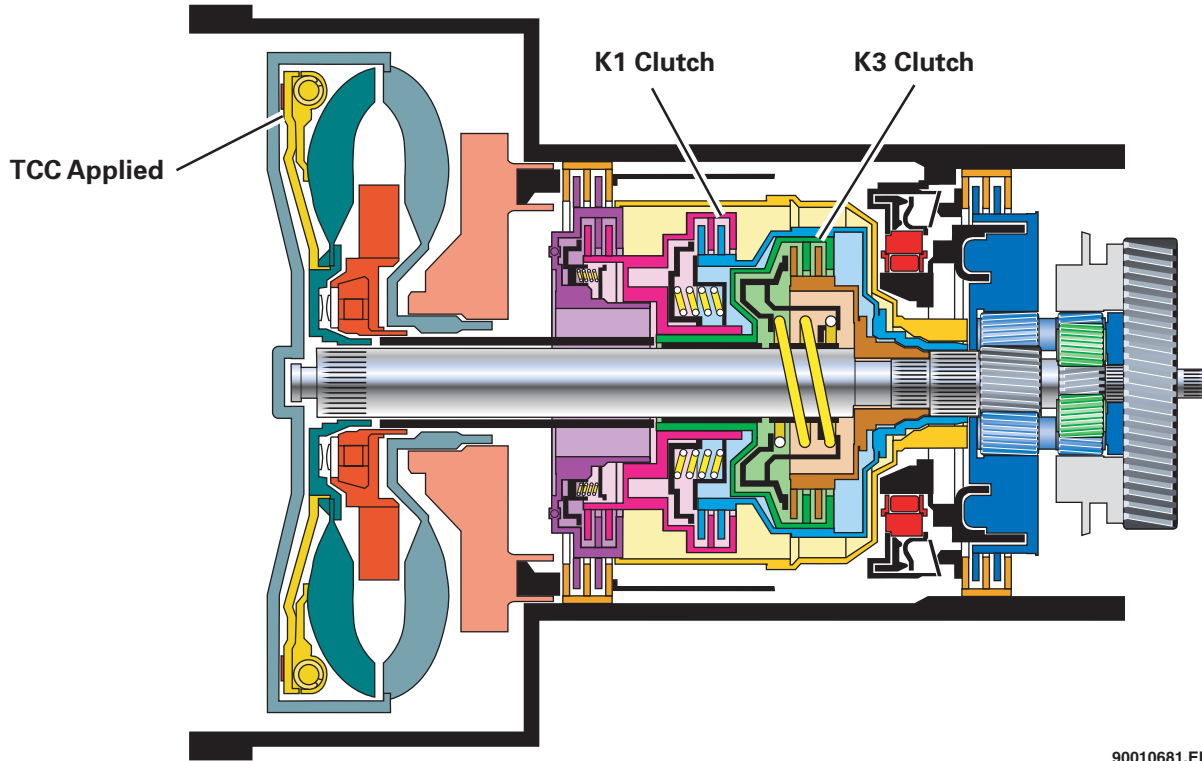


- Torque converter housing
- TCC (modulation valve N91)
- Remaining power transmission is identical to the hydraulic power flow for 3rd gear


Mechanicals/Hydraulics

4th Gear Hydraulic, Phase 2 and Phase 2 ETA Selector Position "D"

Transmission ratio of 4th gear is 0.74:1
(example only).

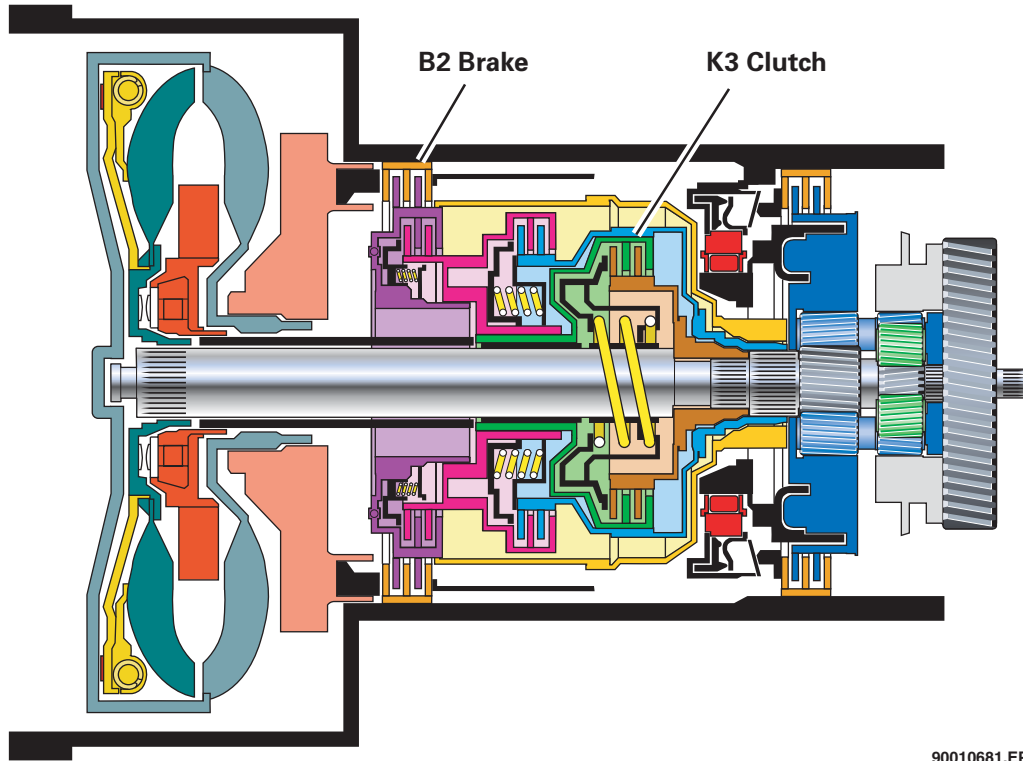

90010681.EPS

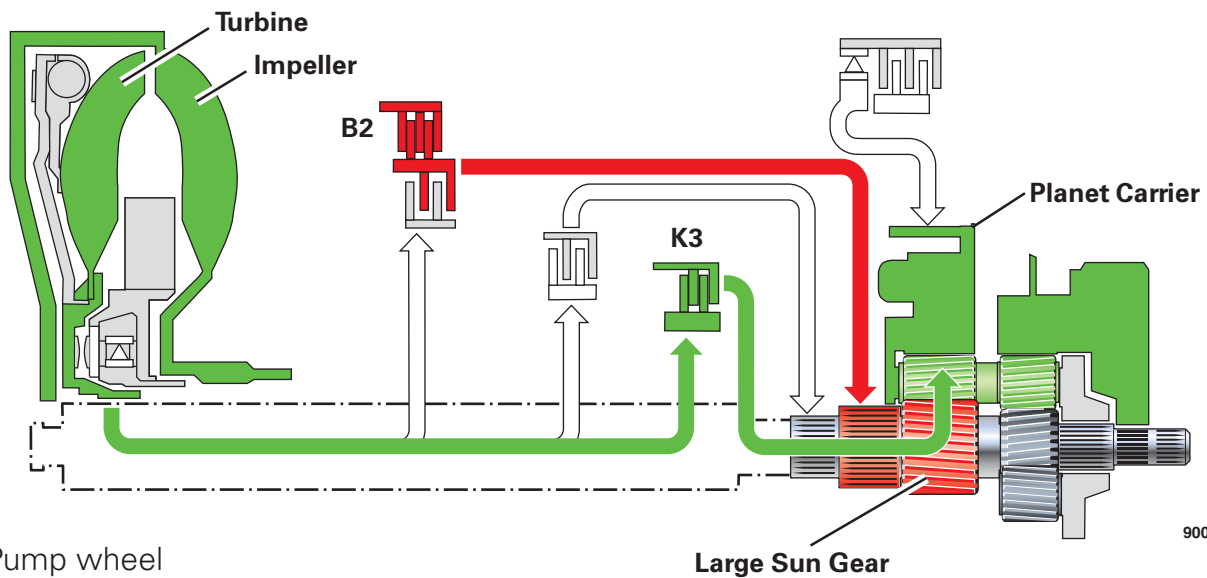

90010643.EPS



- Pump wheel
- Turbine wheel
- Brake B2 holds the large sun wheel (solenoid valve N89)
- Clutch K3 drives the planet carrier (solenoid valve N90)

The planetary gearset orbits around the large sun gear

Mechanicals/Hydraulics

4th Gear Mechanical, Phase 2 and Phase 2 ETA Selector Position "D"

Transmission ratio of 4th gear is 0.74:1 (example only).

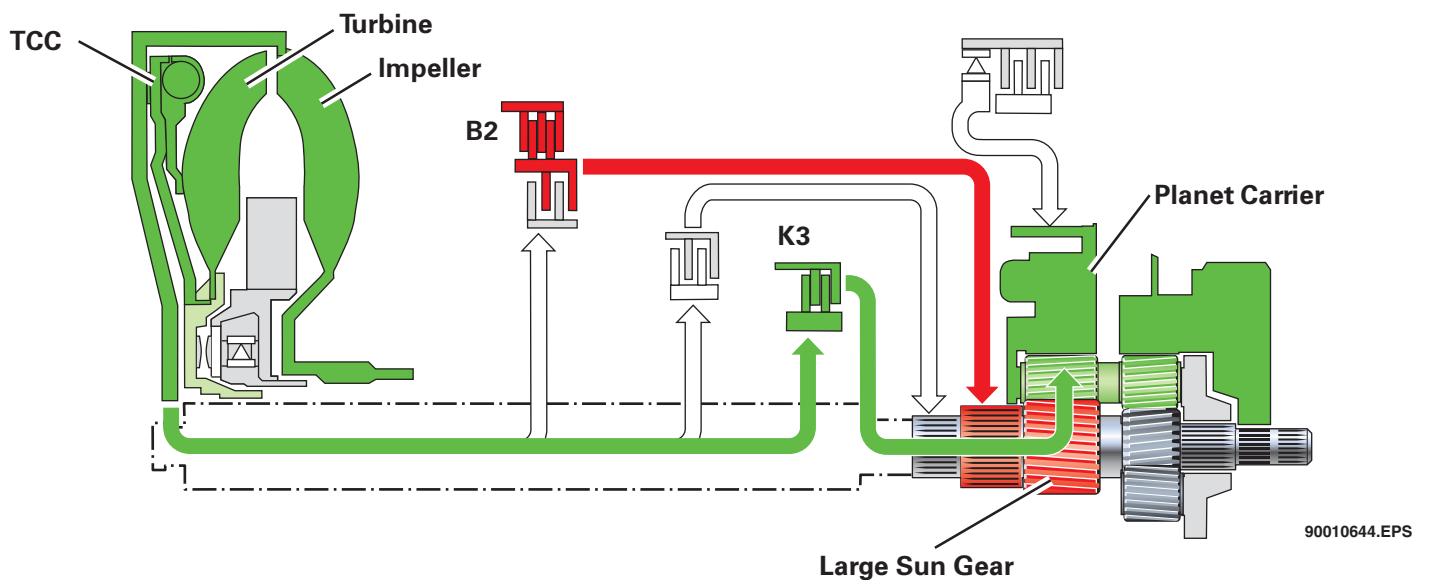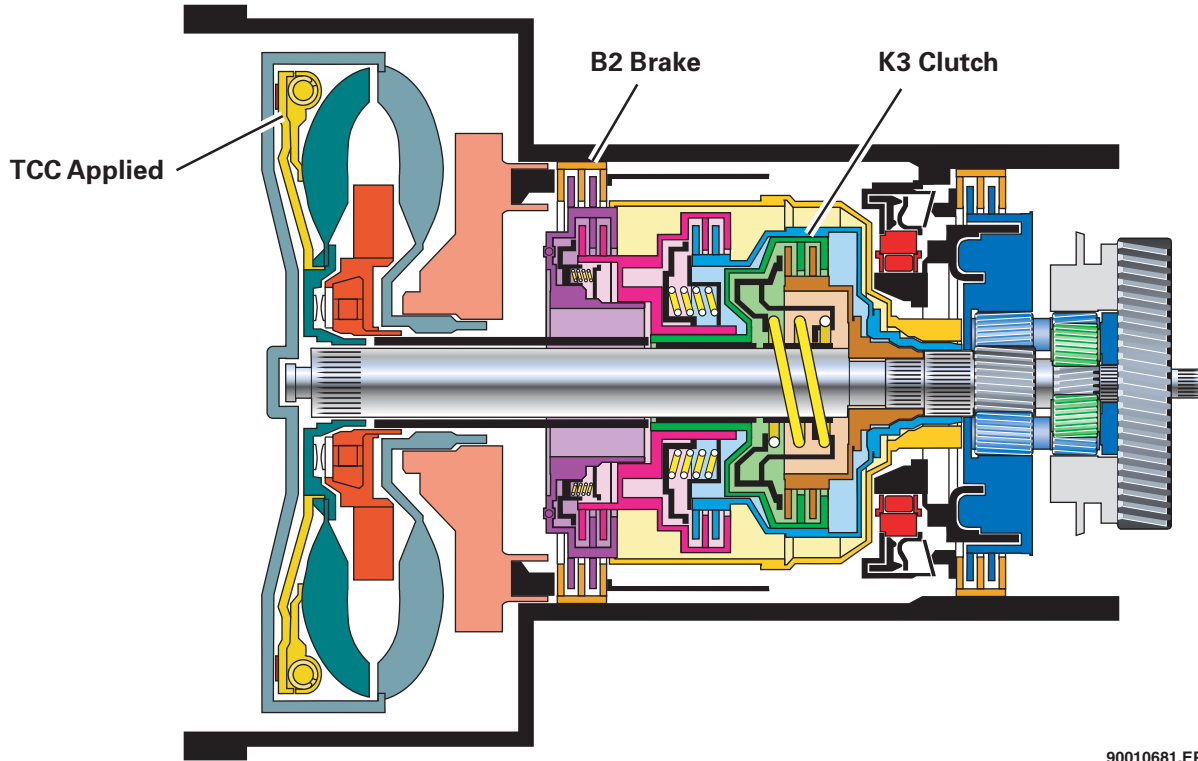


- └─ Torque converter housing
- └─ TCC (modulation valve N91)
- └─ Remaining power transmission is identical to the hydraulic power flow


Mechanicals/Hydraulics

Reverse Gear, Phase 2 and Phase 2 ETA

Transmission ratio of Reverse gear is 2.88:1 (example only).

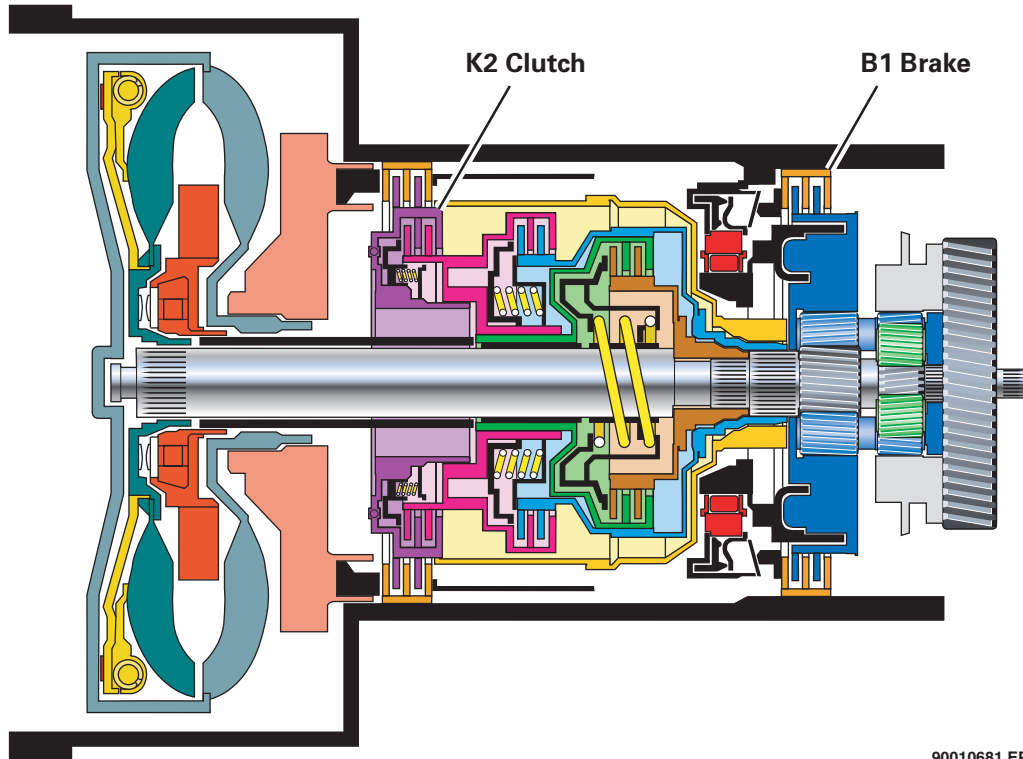

90010681.EPS

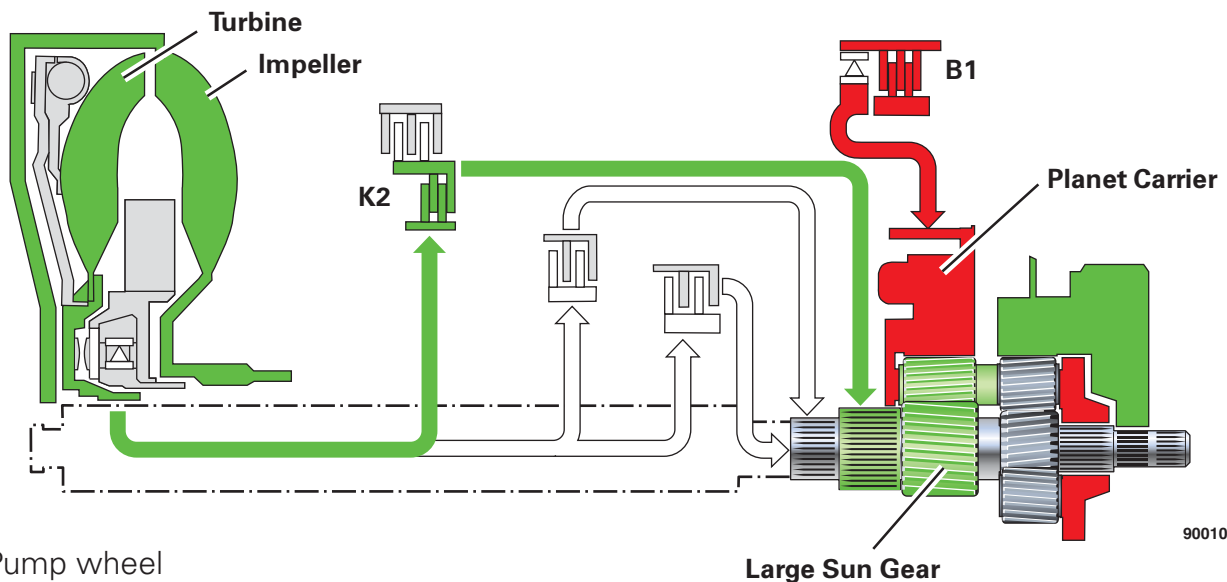


90010646.EPS

- Pump wheel
- Turbine wheel
- Brake B1 holds the planet carrier (solenoid valve N92)
- Clutch K2 is closed by the selector lever
- The large sun gear is driven


Mechanicals/Hydraulics

1st Gear Hydraulic, Phase 2 and Phase 2 ETA Selector Position Manual Low

Transmission ratio of 1st gear is 2.71:1
(example only).

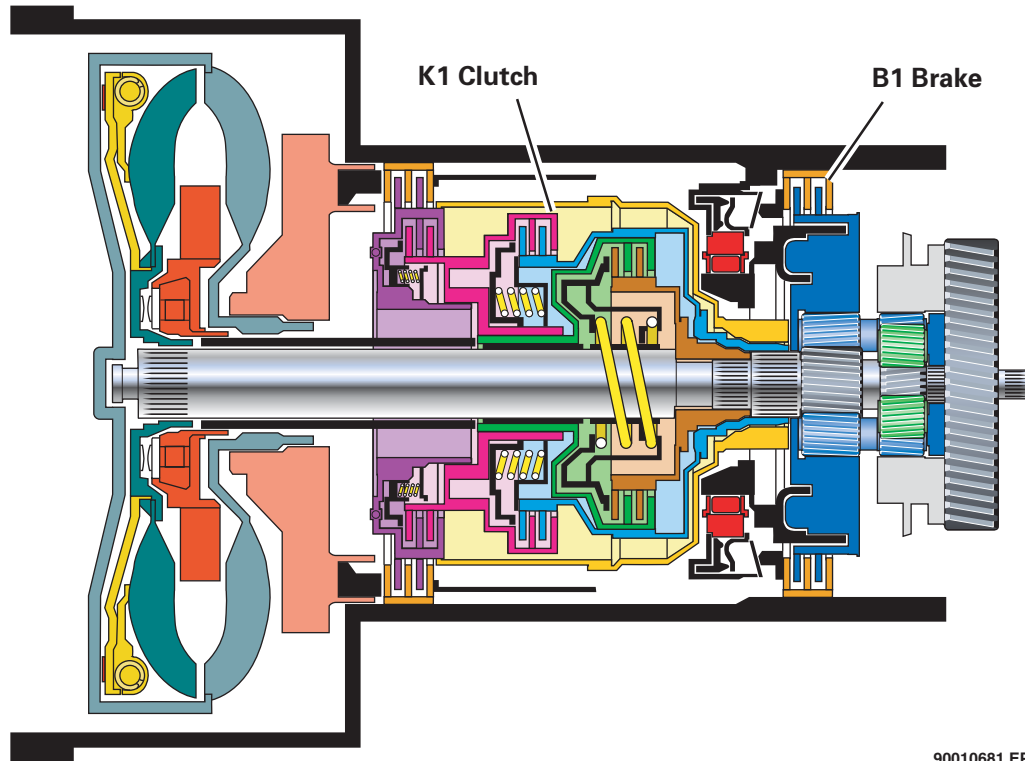

90010681.EPS

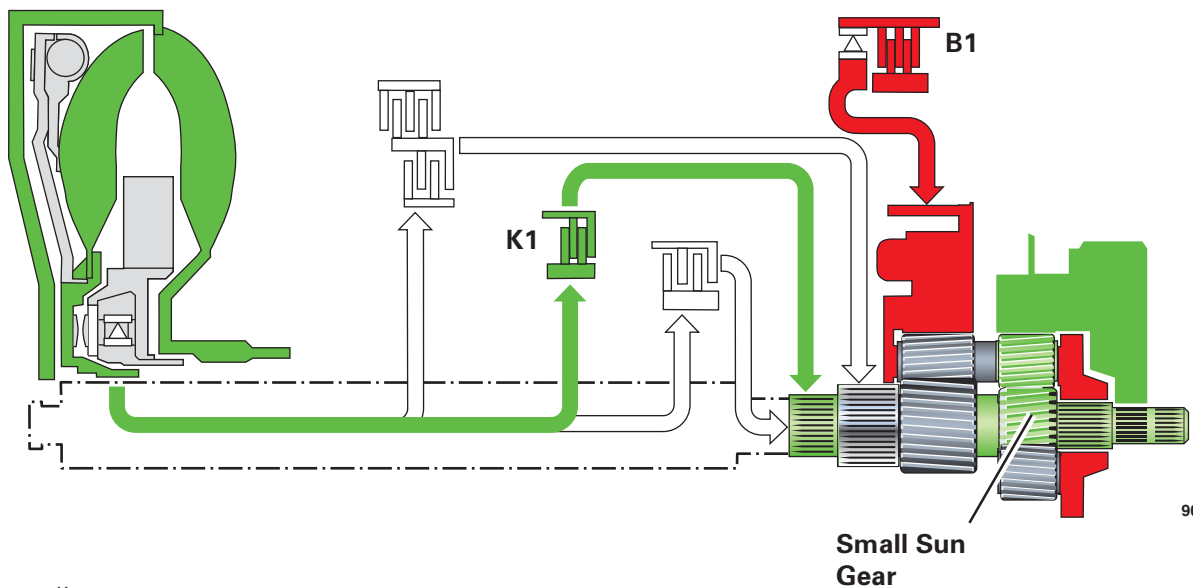


90010645.EPS

- Impeller
- Turbine
- Brake B1 holds the planet carrier (solenoid valve N92)
- Clutch K1 is closed by the selector lever and the large sun wheel is driven

Mechanicals/Hydraulics

Final Drive (all phases)

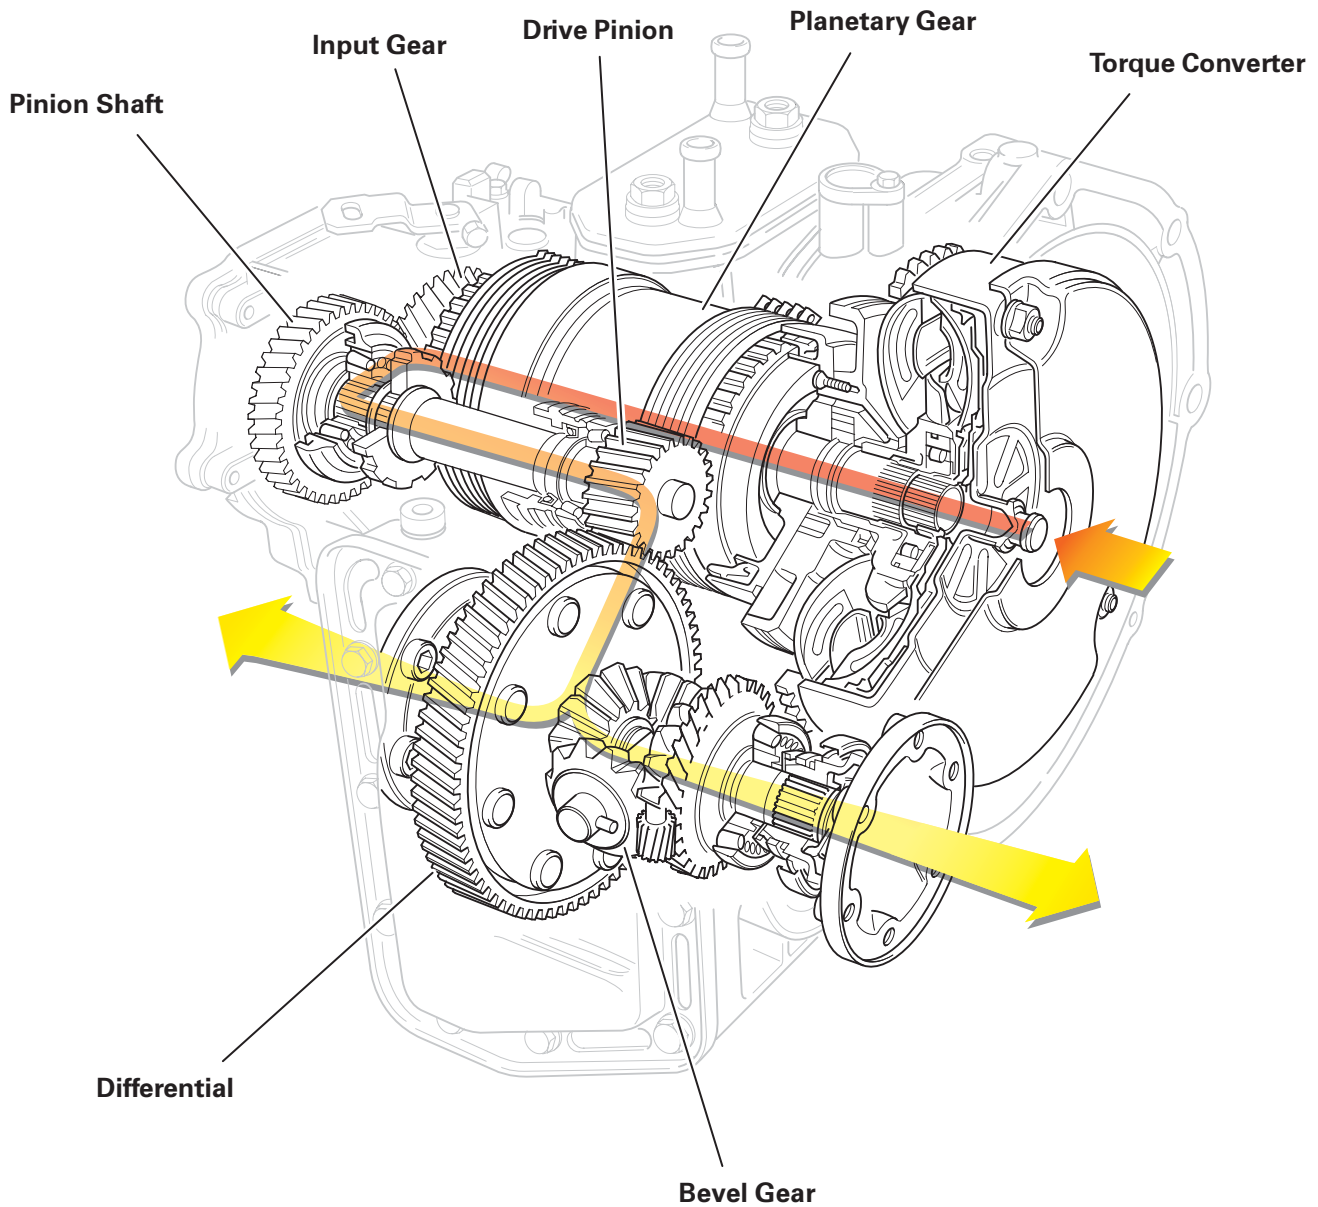

- └ Planetary gear
- └ Input gear (ring gear of planetary gearset)
- └ Pinion shaft
- └ Drive pinion
- └ Differential
- └ Axles

90010654.EPS

Notes:

[illegible]


Electronic Controls

Component Identification (example)

Sensors

Sensors and actuators shown are typical. Actual components will vary by application.

Throttle Position (TP) Sensor G69

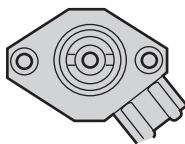


Transmission Vehicle Speed Sensor (VSS) G38
(Phase 2 Only)




Vehicle Speed Sensor (VSS) G68




Engine Control Module (ECM)
(engine speed)

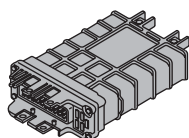


Multi-function Transmission Range (TR)
Switch F125

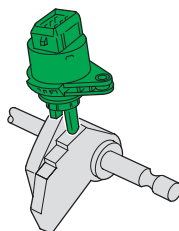


Brake Light Switch F





Kick Down Switch F8

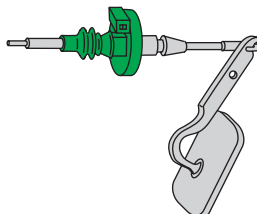

Transmission Fluid Temperature
Sensor G93

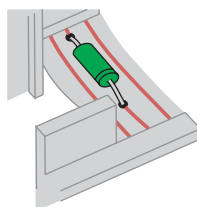


Transmission Control
Module (TCM) J217

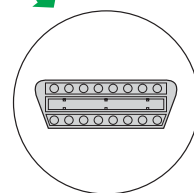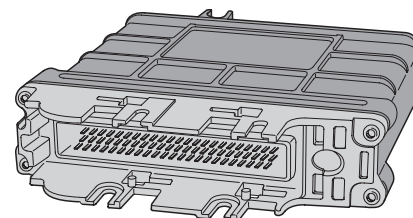

Data Link Connector (DLC)

Electronic Controls


Actuators

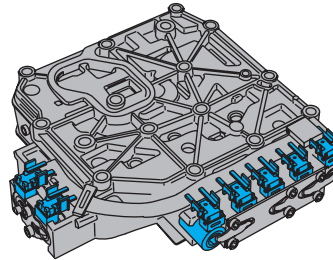


Valve Body with the Solenoid Valves N88-N94



Shift Lock Solenoid N110




Park/Neutral Position (PNP) Relay J226

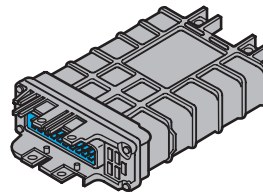


Additional Signals

Engine Control Module (ECM)

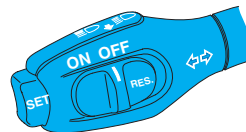

Cruise Control System

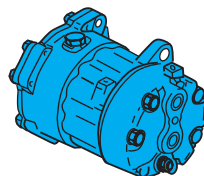


Air Conditioning



Selector Lever Display

90010611.EPS

Electronic Controls

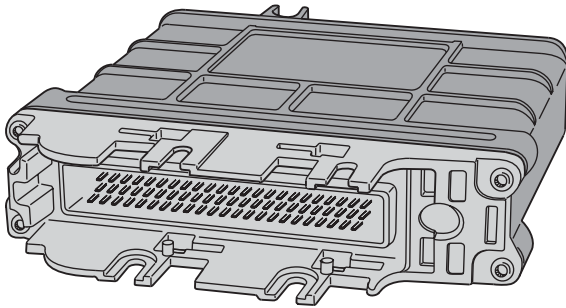

90010655.EPS

Transmission Control Module J217

The Transmission Control Module (TCM) J217 is the electronic command center of the four-speed automatic. It controls all the electrical, and thus all the hydraulic operations of the transmission.

The TCM also establishes driving programs based on an individual's driving style and driving situations. Determined by "fuzzy logic", shift points are moved to higher or lower engine rpm, based on the individual's driving style.

Various types of driving resistances such as climbing a hill, towing a trailer, driving into a stiff wind, as well as descending a hill are recognized and accounted for by the TCM's "fuzzy logic".

Self Diagnosis

The four-speed automatic computer systems include self-diagnostic capabilities. These self-diagnostics use the computer to examine many of the parameters in the system and identify problems.

The TCM can check the electrical system during normal operation and store codes in memory to identify any faults it encounters.

Emergency Running Mode

Failures in certain sensors and/or actuators can result in damage to the transmission. The TCM will recognize this and default to an emergency running mode. By operating the selector lever, the following gears engage mechanically in the valve body:

- 1st gear hydraulic
- 3rd gear hydraulic
- Reverse gear

When the selector lever is in the Drive position, the vehicle will start off in 3rd gear hydraulic. First gear hydraulic is available by moving the selector lever to "1".



90010601.EPS

Determining the Shift Point

Phase 0 and 1


In the Phase 0 transmission, gears are selected on the basis of shift maps. A shift characteristic curve is stored for each gear change based on the position of the accelerator pedal and the speed of the vehicle.

In 1990, the Phase 0 transmissions used an ECO/SPORT switch, which allowed the driver to choose between two shift maps:

- The ECO shift map provided early upshifting and late downshifting, for better fuel economy
- The Sport shift map provided shifting up and down at higher vehicle speed and rpm level, for higher performance

This selection was automated in 1993 and the switch between "ECO" and "SPORT" was based on the speed at which the accelerator pedal was operated. The manual switch was replaced by an electronic program switch in the TCM.

As with the previous system, this was still a strict decision between "ECO" or "SPORT".

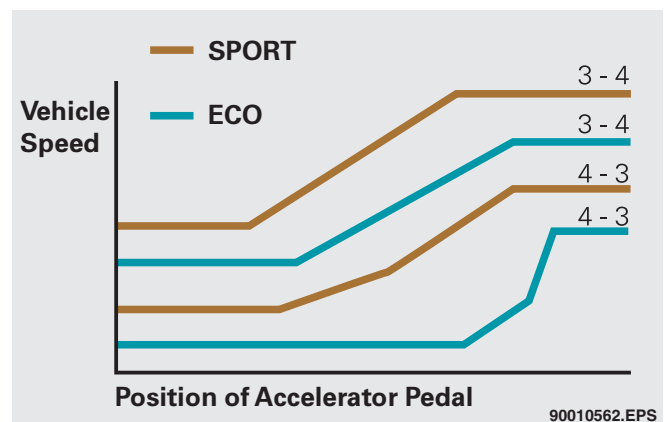

This diagram illustrates only the 3rd to 4th gearshift.

ECO = Shifting up early and shifting down late = low rpm level = good fuel economy

SPORT = With the same accelerator pedal position, shifting up and down at a higher vehicle speed = higher rpm level = greater performance

Electronic Controls


Model Year 95 to Current

The electronic program switch in the TCM has been replaced by a shift program based on the driver's style and the driving situation.

The driving resistance-based shift program recognizes driving resistances such as climbing or descending a hill, towing a trailer, and driving into the wind. The TCM calculates the driving resistance on the basis of the speed of the vehicle, the position of the throttle valve, the

engine speed, and the acceleration of the vehicle and uses this as the basis for specifying the shift points.

The calculation of the gearshift point based on the driver's style and driving situation is conducted on the basis of the "fuzzy logic" principle.

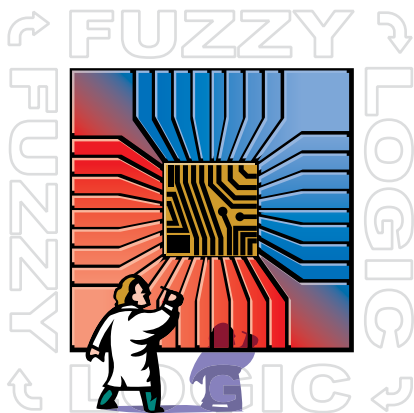

90010558.EPS

Fuzzy Logic

"Fuzzy logic" is defined as "A form of logic used in some artificial-intelligence applications in which variables can have degrees of truthfulness or falsehood represented by a range of values between 1 (yes) and 0 (no)." It forms the basis for programming designed to allow computers to mimic human intelligence.

When we make use of "fuzzy logic," we eliminate the classical hard operating states, and allow tolerance in assigning quantities.

Classical Division


The classical, rigid allocation of quantities in a computer **without** "fuzzy logic" results in only two choices: On or Yes (1) and Off or No (0). When provided with a fixed limit for comparison, the computer can distinguish only between hot and cold. Any measurement below the fixed limit is interpreted as cold, and measurements above are hot. This rigid classification does not allow the computer any tolerance in allocating quantities.

Fuzzy Logic

"Fuzzy logic" makes allowance for an intentional out-of-focus (fuzziness) which does not operate with two values, but instead with result quantities. What we then have is an infinite variety of intermediate values such as "almost cold", "cool", "lukewarm", or "too warm".


The upper limit of "hot" and the lower limit of "cold", as well as all the intermediate levels, are assigned to precise temperatures.

Consequently, 90% of the blue area is assigned to "cold" at a temperature of 10°C and 10% of the red area is assigned to "hot". The "fuzzy logic" recognizes "almost cold".

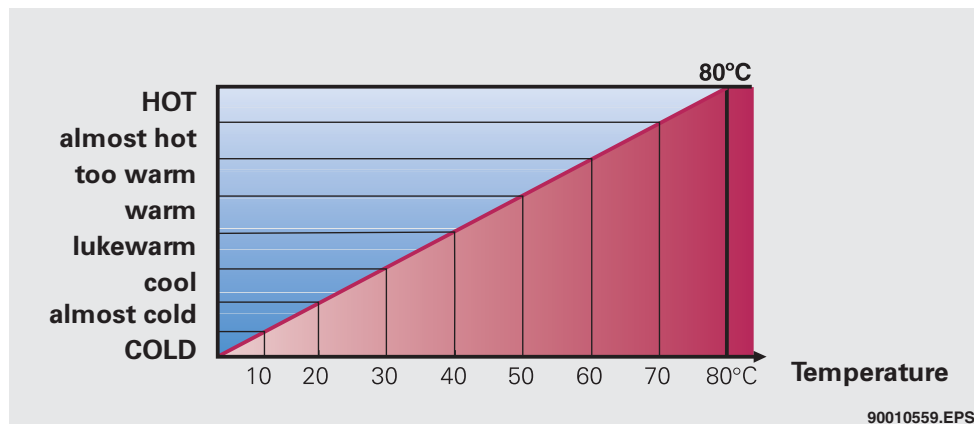

The speed at which the driver operates the accelerator pedal produces a sporty factor, which is determined with "fuzzy logic". This sporty factor is used to determine a floating gearshift point between a shift point design


oriented toward good fuel economy or performance. It is possible to have any number of shift points between the ECO and the SPORT shift characteristic, reacting much more responsively to the individual's driving style.

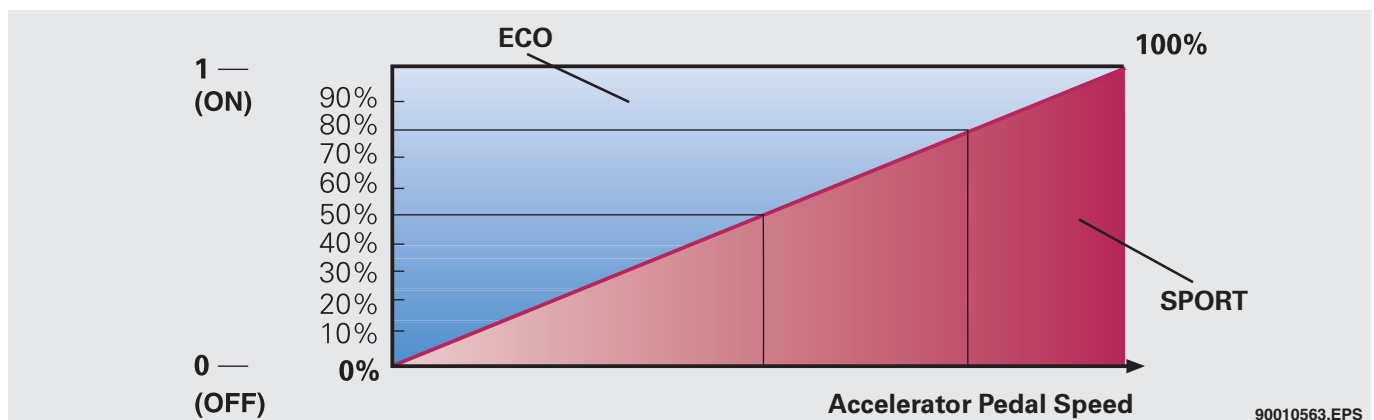

Sensors

Sensors are components that relay the transmission fluid temperature, transmission input speed, transmission output speed, and many other signals to the TCM.

The TCM interprets this information and uses it to control the actuators. The TCM also uses this information to make the correct shifts at the correct time, and to tailor the shift points to complement the individual habits of each driver.

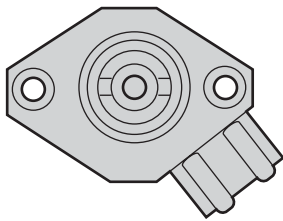

90010564.EPS

Throttle Position (TP) Sensors


The throttle valve position signal supplies information to the TCM regarding both the accelerator position (implied load), and the speed at which the accelerator pedal is operated.

TP Sensor G69

Vehicles using Motronic Engine Management 5.9, and earlier systems with a cable operated throttle, use TP Sensor G69 to sense throttle valve position. The signal goes to the ECM and is passed on to the TCM.



On some Phase 0 units, TP Sensor G69 contains two separate potentiometers, one each for the ECM and the TCM.

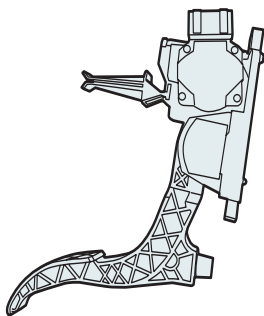

90006801.EPS

Accelerator Pedal Position Sensors

- TP Sensor G79
- Sender 2 for APP Sensor G185

Vehicles using Motronic Engine Management ME7 and Electronic Power Control (EPC) use APP Sensors G79 and G185, which are mounted in the accelerator pedal module. The ECM calculates engine torque and sends the information to the TCM through the Controller Area Network (CAN) data bus.

Use of Signal


In all versions, the signal is used to calculate the gearshift moment in-line with engine load and set the ATF pressure in-line with engine load and the gear selected.

In the Phase 2 and Phase 2 ETA units, the TCM determines the shift pressures required. The gearshift sequence is structured in such a way that the TCM first sends a signal to the ECM indicating that it wishes to execute a gearshift.

The ECM then retards ignition timing, reducing engine torque and allowing the TCM to close the clutches at low pressure. This results in soft, jolt-free gearshifts.

Effects of a Signal Failure


The control module assumes a moderate engine load for the gearshift points. This will result in harsher shifts, as the ATF pressure is set to full throttle pressure. The shift programs can no longer be performed by the control module.

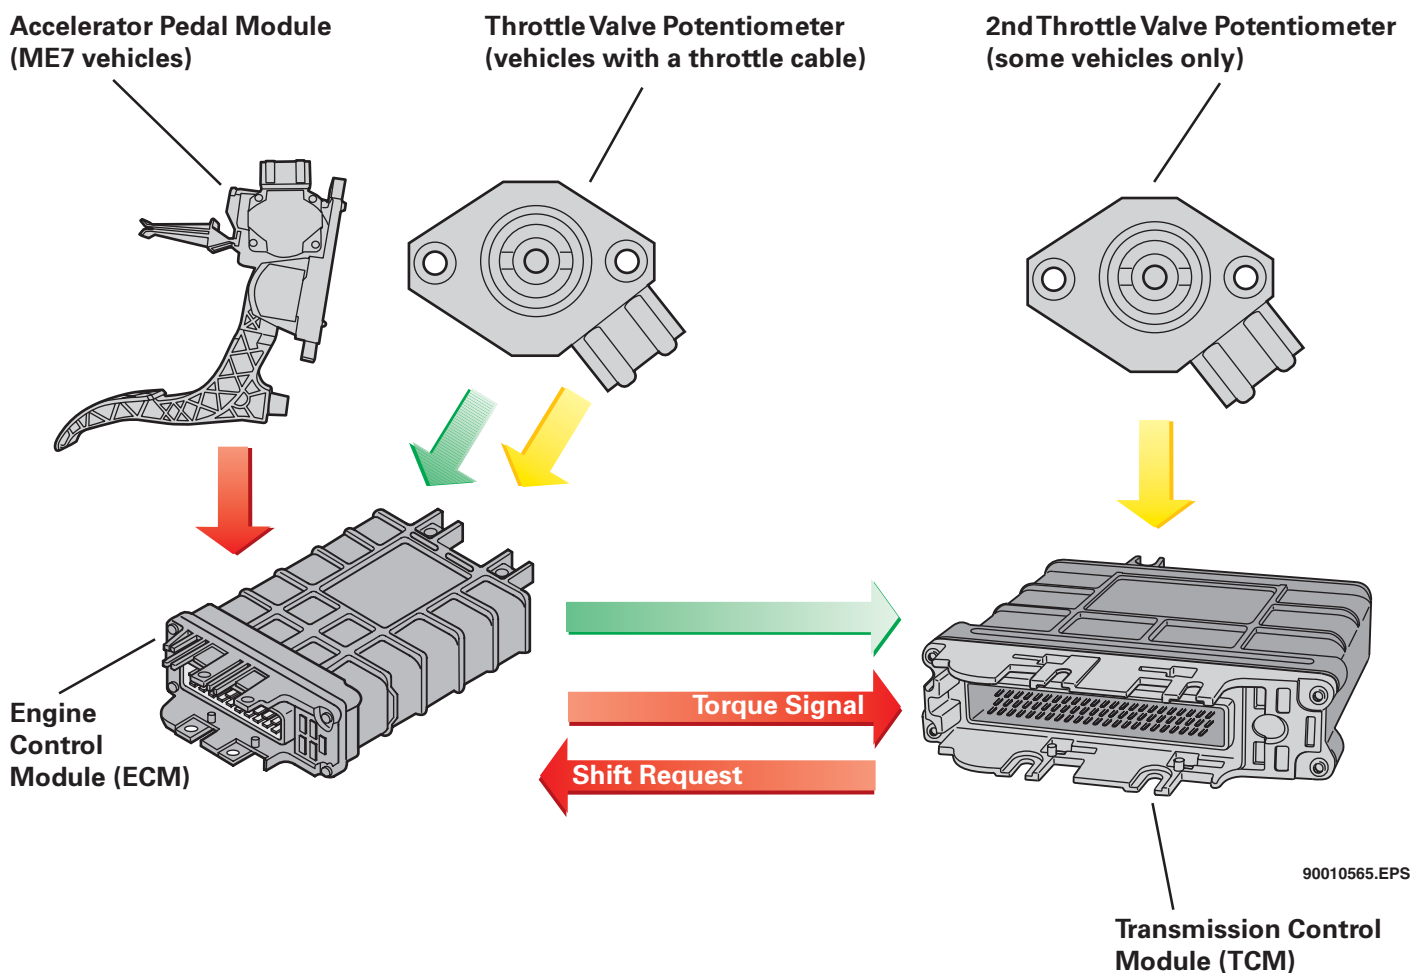

Sensors

Transmission Vehicle Speed Sensor (VSS) G38 (Phase 2 and Phase 2 ETA units only)

This inductive sensor is positioned in the transmission case. It detects the speed of the large sun wheel in the planetary gear.

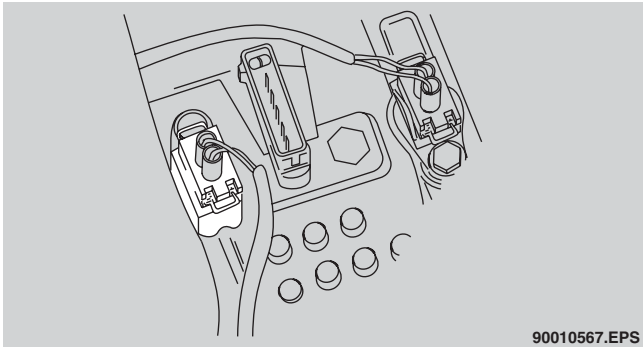

The connector is white.

Use of Signal


The speed of the large sun wheel enables the TCM to accurately recognize the moment at which the gearshift is performed.

The speed signal is used by the TCM to accurately calculate the following functions:

- A reduction in engine torque during the gearshift by retarding the ignition angle (timing)
- Controlling the speed of the gearshift (shift quality)


Effects of Signal Failure

The TCM moves into emergency running mode.

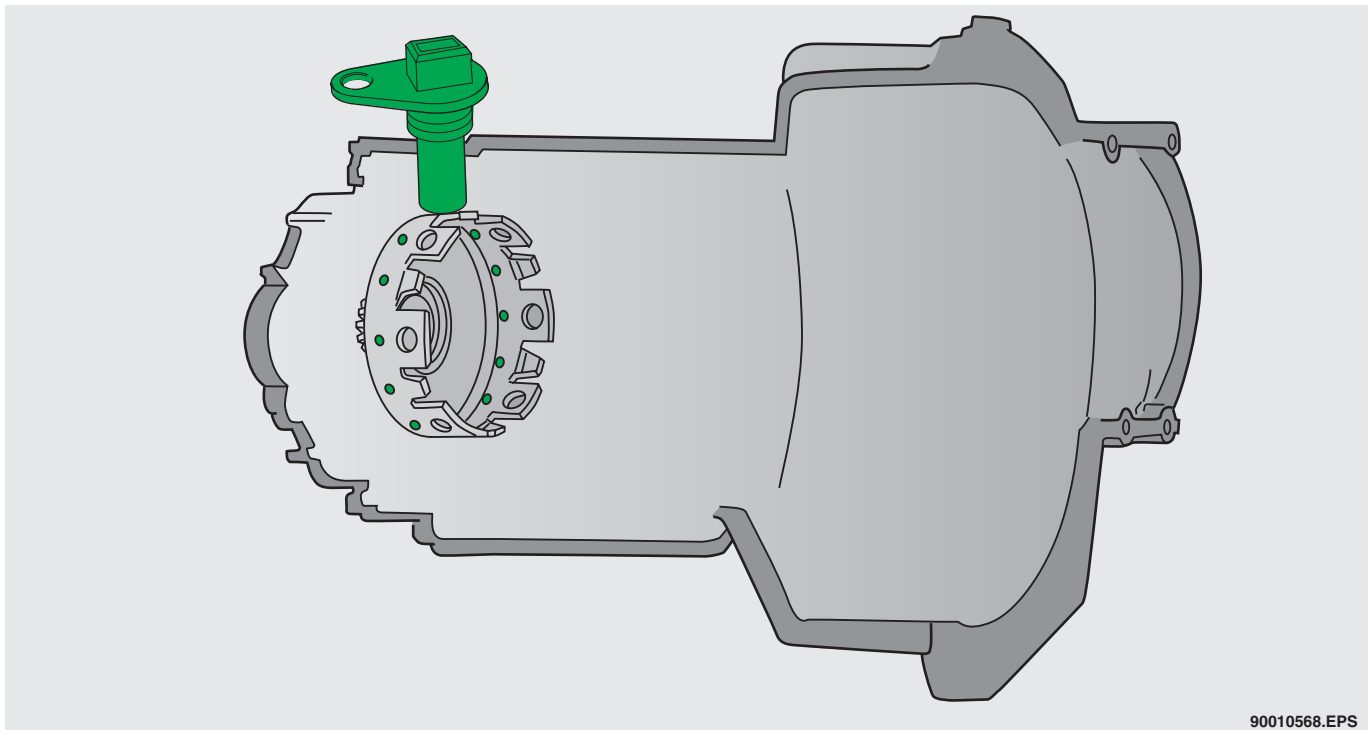

Vehicle Speed Sensor (VSS) G68

This inductive sensor is mounted in the transmission case. It calculates the output speed of the planetary gearset by measuring the speed of a pulse rotor mounted on the input gear to the final drive.

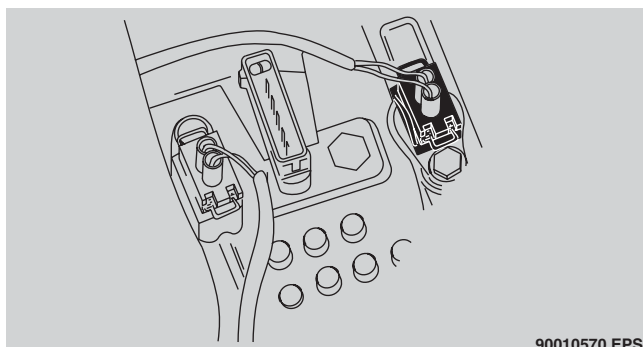

The connector is black.

Use of Signal


Information regarding vehicle speed is required for:

- The decision as to which gear should be engaged
- Cruise control system
- Torque converter slip control
- Shift quality

Effects of Signal Failure

- The control module uses the engine speed as a substitute signal
- The TCC is no longer closed
- Shift quality is no longer measured


Pulse Rotor at Final Drive
Input Gear

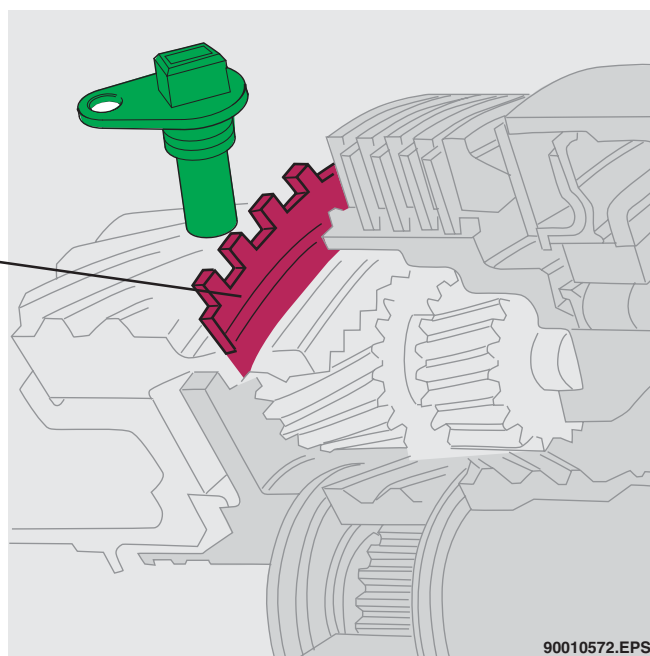

Sensors

Transmission Fluid Temperature Sender G93

This sensor, mounted on the printed conductor at the valve body, measures the temperature of the ATF.

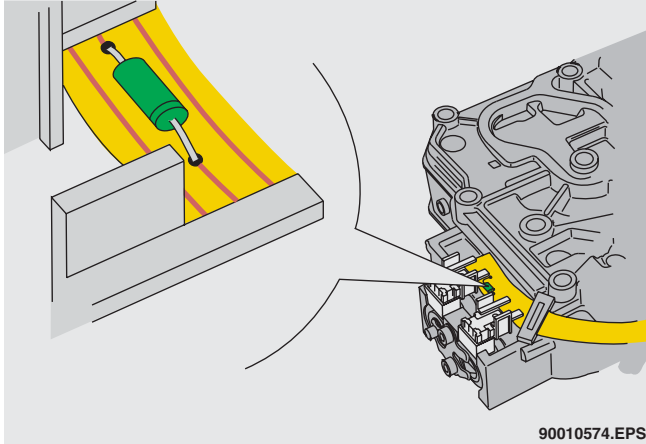

Use of Signal


The ATF Temperature Sender G93 is a Negative Temperature Coefficient (NTC) resistor. Its resistance drops as the fluid temperature rises.

If the ATF temperature reaches the limit of 148°C, the TCC is engaged. The stress on the torque converter is reduced, and the ATF cools down.

If engaging the TCC doesn't cool the ATF to an acceptable level, the TCM commands a downshift to further reduce stress within the transmission.


Effects of Signal Failure

- No substitute functions exist

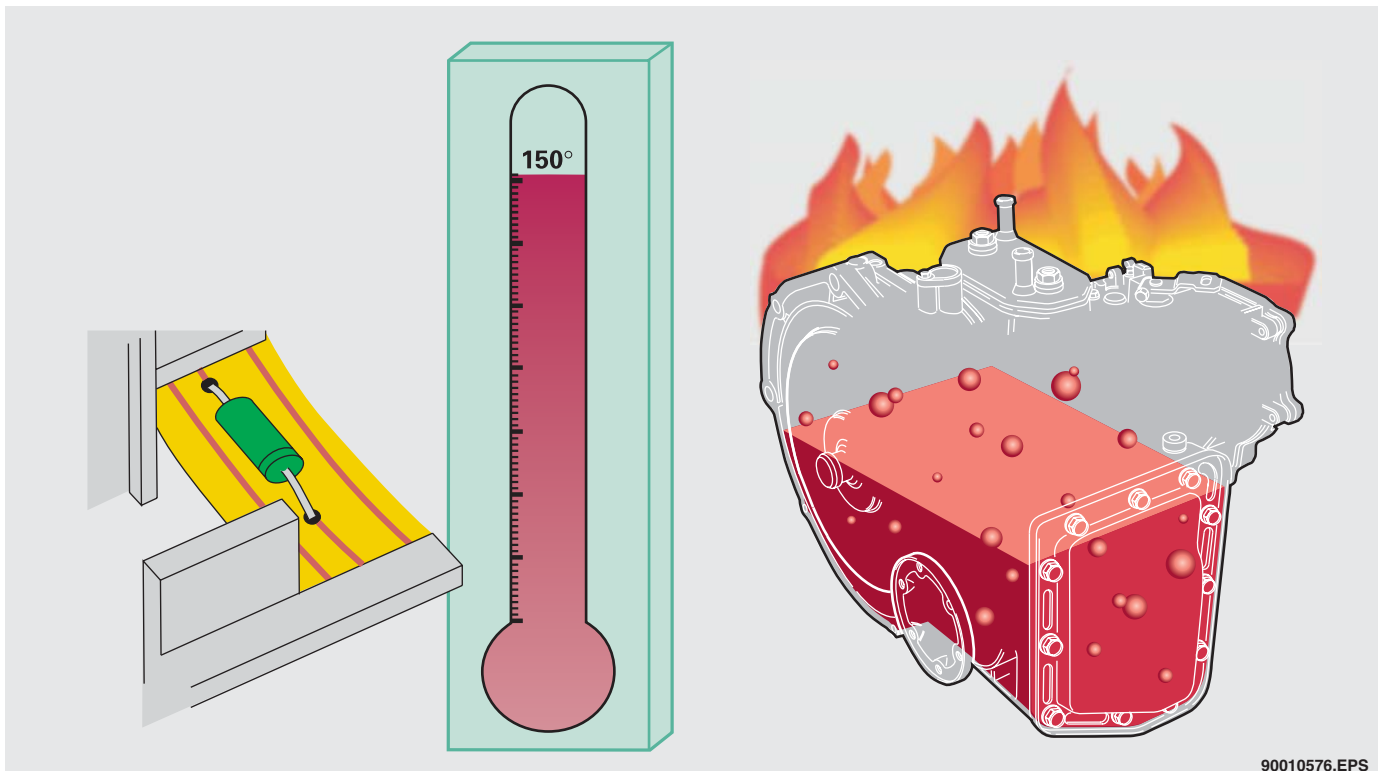

Engine Speed Sensor G28

The TCM uses the engine speed signal from the vehicle's ECM.

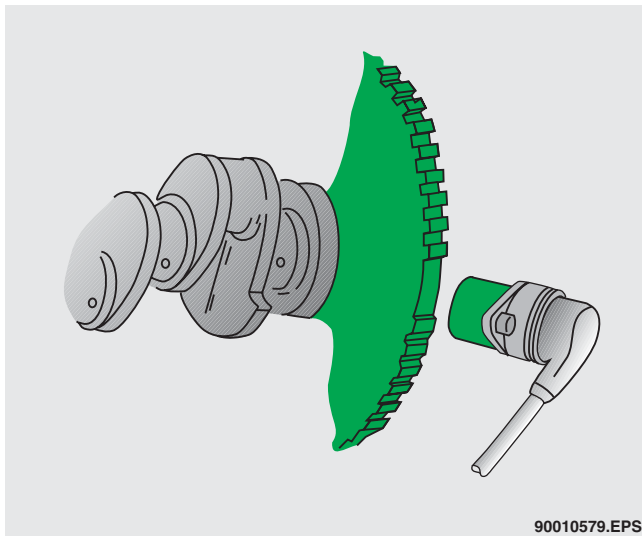

Use of Signal

The TCM compares the engine speed and the vehicle speed. The TCM then determines the amount of slip of the TCC based on the difference of the two signals. If the difference is significant (too much slip), the TCM increases the contact pressure of the TCC and thus reduces the slip.

The TCM also uses the signal of the engine speed sensor as a substitute parameter for the signal of the VSS.

Effects of Signal Failure

- The control module moves into emergency running mode.

Sensors

Kick Down Switch F8

The kick down switch detects the accelerator being depressed beyond the full throttle point.

On the TDI engine, the switch is incorporated in the APP Sensor.

On vehicles that are not equipped with ME7 engine control, the kick down switch is integrated into the accelerator cable. The switch is located in the engine compartment in front of the passenger compartment spray guard.


Use of Signal

When the switch is operated, the transmission shifts down immediately into the next lower gear (e.g. from 4th to 3rd gear). The TCM takes account of the engine speed. Upshifts will occur at higher engine speeds.


If a high power output is required from the engine in the kick down mode, the air conditioning system is switched off for up to 8 seconds.

Effects of Signal Failure


- The kick down shift point occurs when the accelerator pedal is depressed 95%.

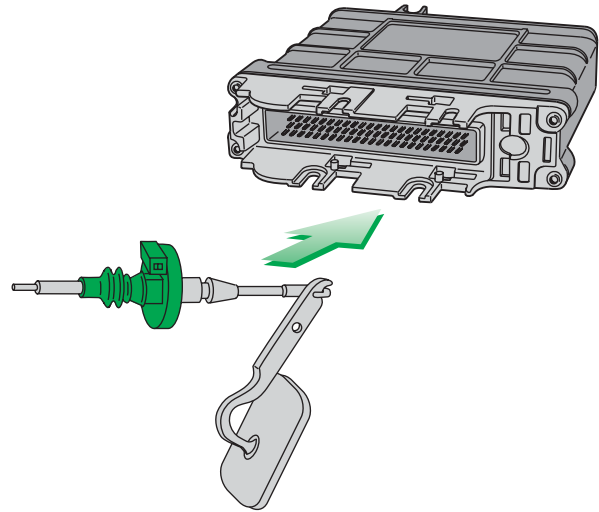

90010581.EPS

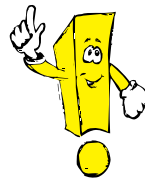

On vehicles with a throttle cable, make sure the cable is adjusted correctly. Incorrect adjustment can cause drivability concerns. Check current service information for the correct adjustment procedure.

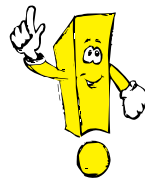

Vehicles with ME7 do not have a throttle cable. The ME7 kick down strategy is explained on the next page.

Motronic Kick Down Strategy



Vehicles with ME7 engine control do not have a throttle cable or kick down switch. These vehicles use an accelerator pedal module to determine the position of the accelerator pedal.

The accelerator pedal module consists of two independent potentiometers: G79 and G185. If one sensor fails, the other acts as a substitute.


Automatic transmission vehicles have a pressure element in place of the accelerator pedal stop. This pressure element generates a mechanical pressure point which gives the driver a kick down feeling.

When the driver pushes the throttle pedal to this point, the internal components of the accelerator pedal module will exceed the full-load voltage normally sent to the ECM. The ECM interprets this excessive voltage level as a kick down action and will transfer this information to the TCM.

The kick down switching point can only be tested using diagnostic testers.

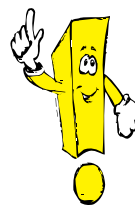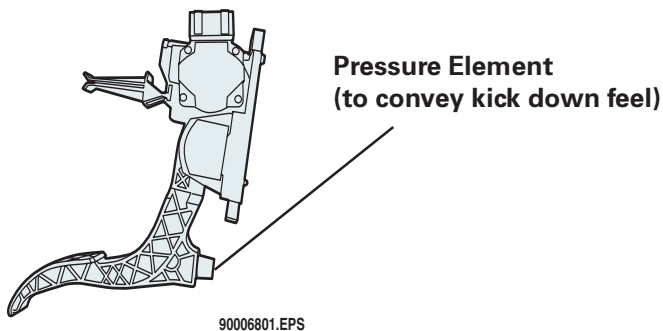


If the accelerator pedal module or ECM is changed, the throttle valve adaptation function must be performed using the VAS 5051/5052.

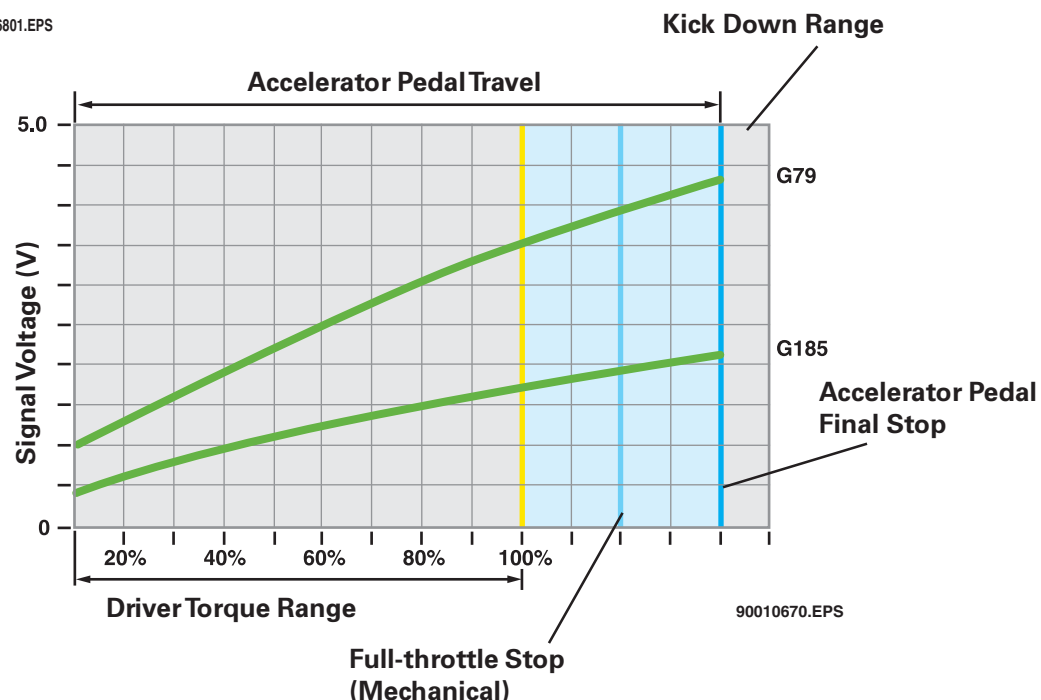

Sensors

Multi-function Transmission Range (TR) Switch F125

The multi-function switch is located in the transmission housing and is operated by the cable of the selector lever.



90010586.EPS


Use of Signal

Depending on the gear selected and the corresponding signal from the multi-function switch, the TCM initiates the following functions:

- Switches on the reversing lights
- Locks-out the starter if a position other than Park or Neutral is selected
- Provides information to block cruise control operation in Park, Neutral, Reverse, and at speeds below 24 mph

Effects of Signal Failure

- The TCM moves into emergency running mode
- The TCM assumes gearshift selector lever position "D"

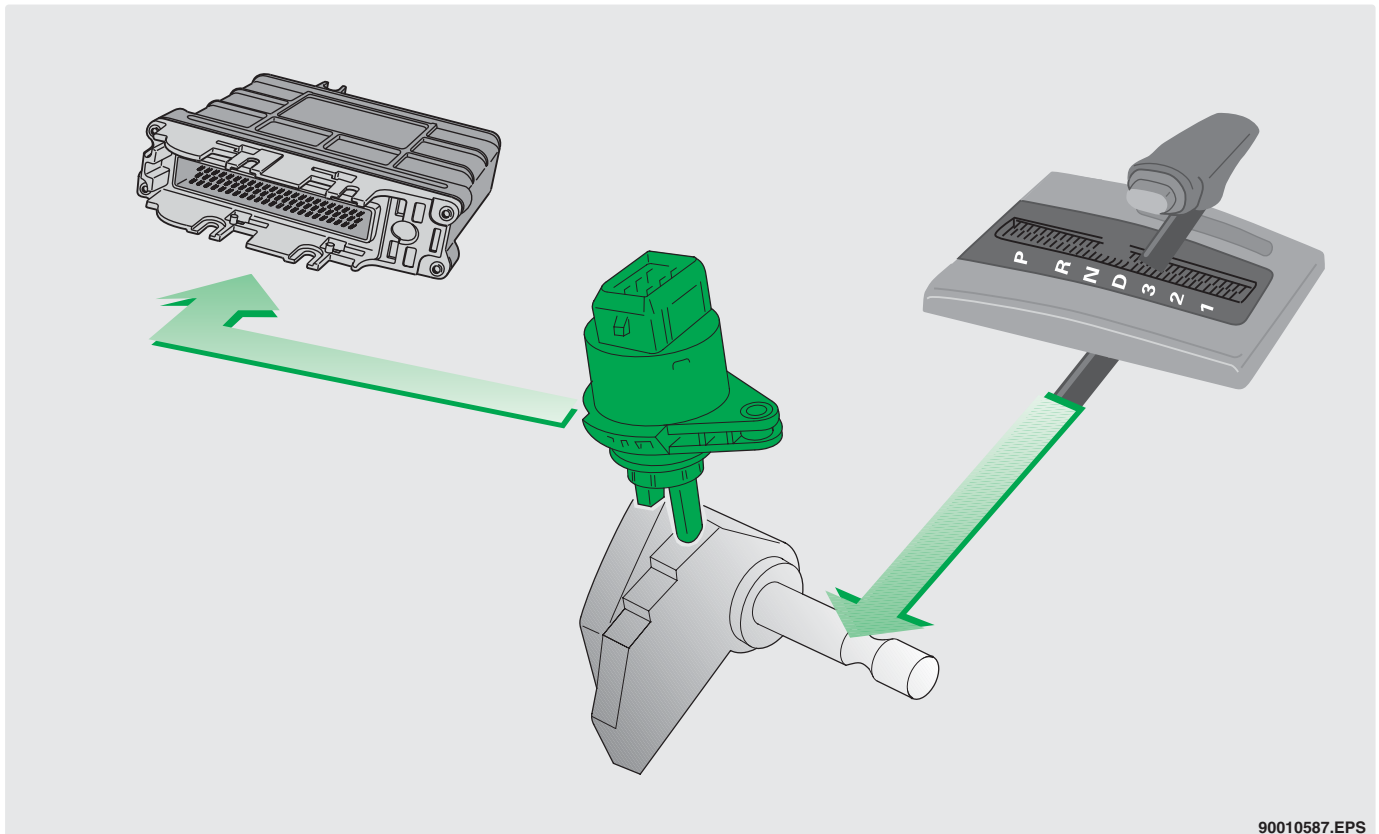

Brake Light Switch F


The brake light switch is installed at the pedal bracket. The TCM is supplied with the information "brake operated", through this switch.

Use of Signal

- The information of the brake light switch is required for the selector lever lock function
- The gearshift selector lever cannot be moved out of the Park or Neutral position when the vehicle is stationary, unless the brake pedal has been operated

Effects of Signal Failure

- If the contact is interrupted, the gearshift selector lever lock function is no longer performed
- The TCM moves into emergency running mode
 - The TCM assumes gearshift selector lever position "D"

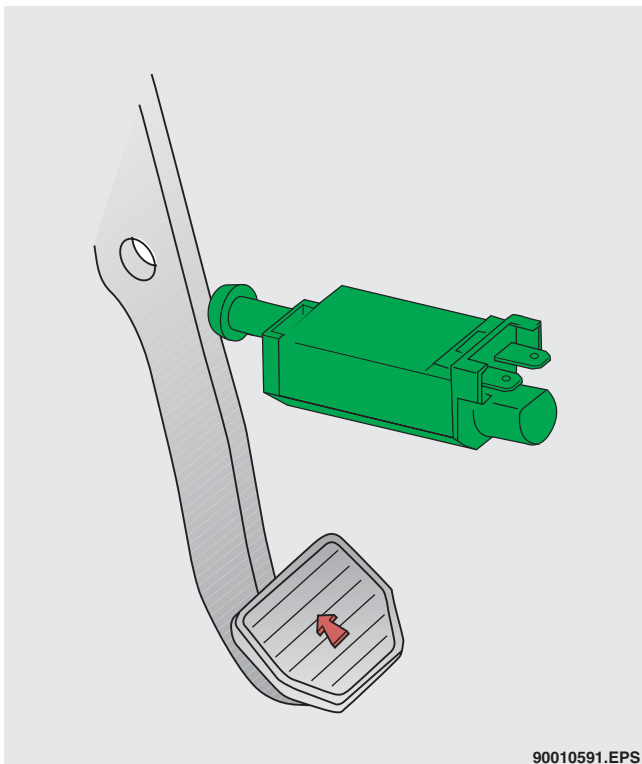

90010591.EPS

Cold Neutral Control (CNC)

The 2.0L 2002 and up and the 2003 Super Ultra Low Emission Vehicles (SULEV) with the four-speed automatic transmission are equipped with CNC. This control serves to lower emissions when the engine is first started by keeping the transmission in Neutral until the catalytic converter warms-up a little.

The function for CNC in Drive (and Reverse for SULEV) is as follows:

- Ignition "ON"
- ATF temperature below 40°C
- Brake pedal pressed (brake light switch activated)
- Throttle pedal = 0
- Speed = 0
- Shift lever in "D" for the first time after ignition "ON"
- CNC is activated



If one of the above conditions does not exist, CNC will not be active.

The CNC is activated only once after ignition "ON" as long as the ATF temperature is below 40°C.

The CNC is necessary only as long as the catalyst is cold; that is why CNC is needed only at the very beginning.

Actuators

The actuators are valve body solenoids, pressure control valves, shift lock solenoids, and many other components. They do the work and move when commanded.

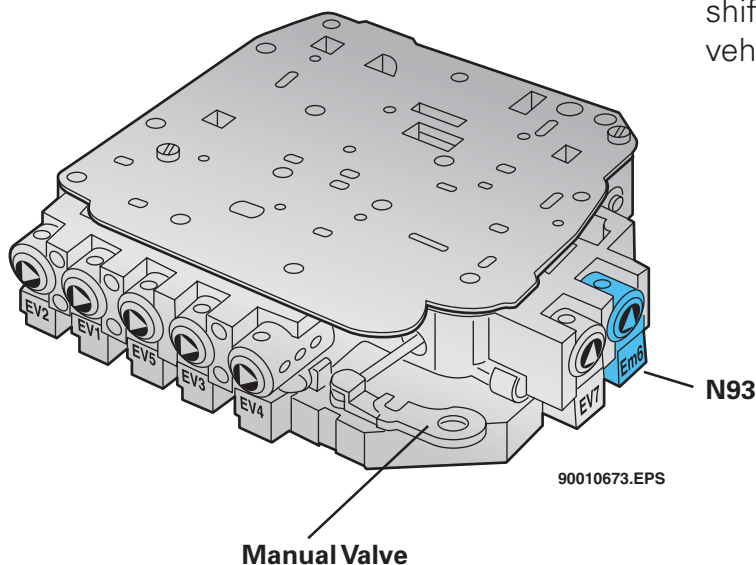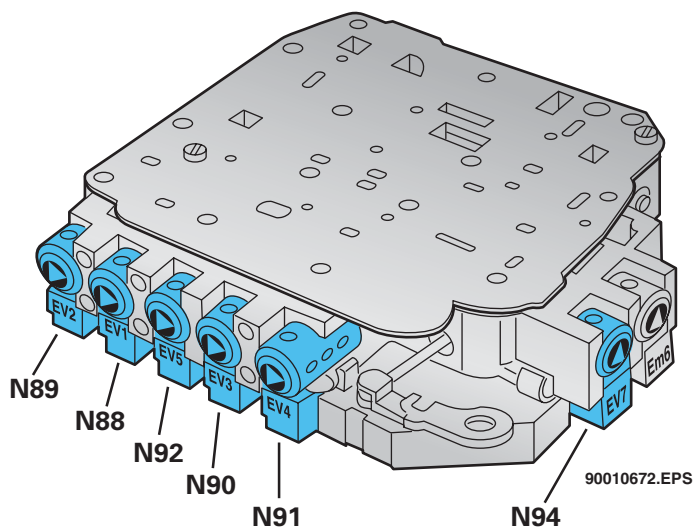

Solenoid Valves N88 to N94

The solenoid valves for all phases are located in the valve body, and are operated by the TCM. Two different types of solenoid valves are used:

- On/Off solenoid valves open or close an ATF port
- Modulation solenoid valves make it possible to set the level of the clutch pressure required
 - The TCM specifies the amperage
 - A low amperage means high pressure

Solenoid valves are assigned different functions based on the transmission phase.

Phase 0 and Phase 1

Solenoid valves N88, N89, N90, N91, N92 and N94 are On/Off valves.


- The gears specified by the TCM are engaged by valves N88, N89, N90, and N91
- The gearshift transition (smoothness) is influenced by valves N92 and N94

Solenoid valve N93 is a modulation valve. The main pressure is controlled by the electrical current in the valve, depending on the gear, the shift program ECO/SPORT, the load, and the vehicle speed.

Phase 2 and Phase 2 ETA

Solenoid valves N88, N89, N90, N92, and N94 are On/Off valves.

- The gears specified by the TCM are engaged by valves N88, N89, and N90
- The smoothness of the gearshift is influenced by valves N92 and N94
 - In Phase 2, N94 changes position of the diverter valve for the B2 brake and K3 clutch
 - In Phase 2 ETA, N94 changes position of the K1 diverter valve to relieve oil pressure rapidly in the K1 during 3rd to 4th gear shift

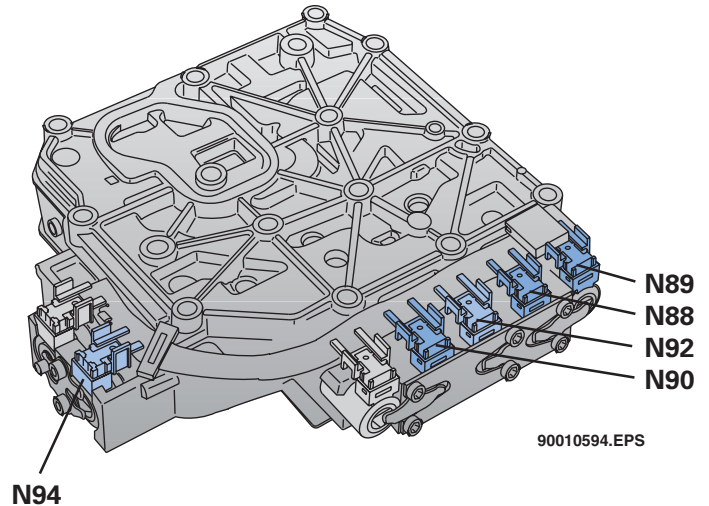

Solenoid valves N91 and N93 are modulation valves.


- Solenoid valve N91 controls the clutch pressure for the TCC
- Solenoid valve N93 controls the pressure of the multi-plate clutches and multi-plate brakes

Effects of Signal Failure

If a solenoid valve fails, the TCM moves into emergency running mode.



The printed conductor can be replaced separately. Please use special tool 3373 for this operation.

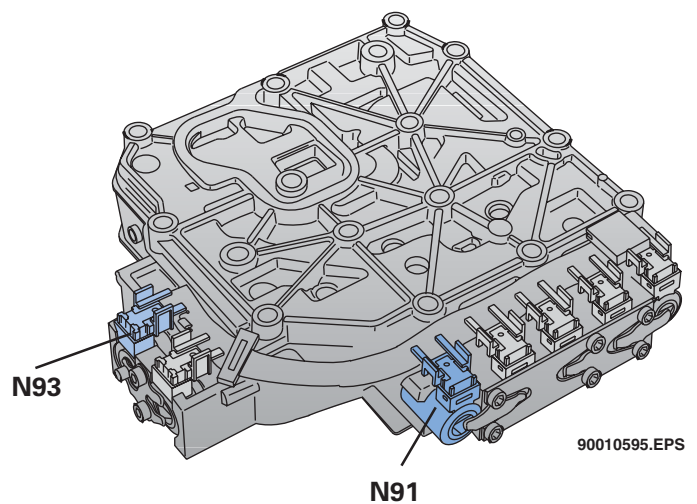

Actuators

Phase 0 Clutch and Brake Apply Chart

Gear	B1	B2	K1	K2	K3	F
Man Low	•		•			
Reverse	•			•		
Dr. 1H			•			•
Dr. 2H		•	•			
Dr. 3H			•	•		
Dr. 3LT1			•		•	
Dr. 3M			•	•	•	
Dr. 3LT2				•	•	
Dr. 4M		•			•	

Phase 1 Clutch and Brake Apply Chart

Gear	B1	B2	K1	K2	K3	F
Man Low	•		•			
Reverse	•			•		
Dr. 1H			•			•
Dr. 2H		•	•			
Dr. 3H			•	•		
Dr. 4M		•			•	

Key

- = Clutch, Brake, or Freewheel Applied
- H = Hydraulic*
- M = Mechanical*
- LT1 = Load Splitting**
- LT2 = Load Splitting**

* Hydraulic and Mechanical refer to the state of the K3 Clutch (Phase 0 and Phase 1) or the TCC (Phase 2 and Phase 2 ETA).

** LT1 and LT2 are used in the Phase 0 transmissions to help smooth the shift into mechanical gear ranges.

Clutch and Brake Apply Charts

These charts show which clutches and brakes are applied for each of the gear ranges.

Problems in one gear can be diagnosed by having an understanding of which clutches and brakes are in use at that time. Also, comparing when other gears are using the same clutches, and using the solenoid charts on the next pages, can help pinpoint the source of a concern.

If there is a clutch problem, the ATF is likely to be burned, especially if the transmission feels like it is trying to engage.

If the transmission does not respond to gearshift commands at all, the problem may be in a solenoid, valve, or valve body – not a clutch.

Phase 2 and Phase 2 ETA Clutch and Brake Apply Chart

Gear	B1	B2	K1	K2	K3	F	LC
Man Low	•		•				
Reverse	•			•			
Dr. 1H			•			•	
Dr. 1M			•			•	•
Dr. 2H		•	•				
Dr. 2M		•	•				•
Dr. 3H			•		•		
Dr. 3M			•		•		•
Dr. 4H		•			•		
Dr. 4M		•			•		•

Part	Name	Purpose	Gear Range			Controls
			Phase 0	Phase 1	Phase 2/ETA	
B1	Reverse Brake	Holds planet carrier	R, Man Low	R, Man Low	R, Man Low	Manual Valve
B2	2 nd /4 th Gear Brake	Holds large sun gear	2, 4	2, 4	2, 4	EV2-N89 applies when energized
K1	1 st to 3 rd Gear Clutch	Drives small sun gear	1, 2, 3	1, 2, 3	1, 2, 3	Manual valve EV1-N88 blocks apply when energized in 4 th
K2	Reverse Clutch	Drives large sun gear	R, 3H, 3M	R, 3M	R	Manual valve: Phase 0 and 1 only EV4-N91 blocks apply in 1, 2, 4 when energized
K3	3 rd /4 th Clutch	Drives planet carrier	3M, 4M	4M	3, 4	Phase 0/1, EV3-N90 applies when energized. Phase 2/ETA manual valve EV3-N90 blocks apply when energized in P, R, N, 1, 2
LC	TCC	Holds turbine to torque converter housing	N/A	N/A	Possible in all forward gears	Phase 2/ETA only. EV4-N91 apply (pulse width modulated)
F	One Way Clutch	Prevents planet carrier from turning backwards	Drive 1 – all phases			

Actuators

Solenoid Apply Charts

The solenoid application charts show which solenoids are energized for each gear.

If a solenoid is inoperative electrically, a code will set and the system will go into emergency running mode. If a solenoid fails mechanically, the computer may not set a code and shifting problems will occur.

By analyzing the information provided by the solenoid and clutch application charts, you can focus your road test and improve your diagnostic accuracy.

Phase 0 Solenoid Chart

Gear Selection	Gear Range	Solenoid Pattern						
		1	2	3	4	5	6	7
Park	0	•			•		•	
Reverse	R						•	
Neutral	0	•			•		•	
Dr. 1	1				•		•	
Dr. 2	2		•		•		•	
Dr. 3	3						•	
Dr. 4	4M	•	•	•	•		•	

Phase 1 Solenoid Chart

Gear Selection	Gear Range	Solenoid Pattern						
		1	2	3	4	5	6	7
Park	0	•			•		•	
Reverse	R						•	
Neutral	0	•			•		•	
Dr. 1H	1				•		•	
Dr. 2H	2		•		•		•	
Dr. 3H	3H						•	
Dr. 3M	3M			•			•	
Dr. 4M	4M	•	•	•	•		•	

Phase 2 Solenoid Chart

Gear Selection	Gear Range	Solenoid Pattern						
		1	2	3	4	5	6	7
Park	0	•		•			•	
Reverse	R			•			•	
Neutral	0	•		•			•	
Dr. 1H	1H			•			•	
Dr. 1M	1M			•	•		•	
Dr. 2H	2H		•	•			•	
Dr. 2M	2M		•	•	•		•	
Dr. 3H	3H						•	•
Dr. 3M	3M				•		•	•
Dr. 4H	4H	•	•				•	•
Dr. 4M	4M	•	•		•		•	•



Phase 2 ETA Solenoid Chart

Gear Selection	Gear Range	Solenoid Pattern						
		1	2	3	4	5	6	7
Park	0	•		•			•	
Reverse	R			•			•	
Neutral	0	•		•			•	
Dr. 1H	1H			•			•	
Dr. 1M	1M			•	•		•	
Dr. 2H	2H		•	•			•	
Dr. 2M	2M		•	•	•		•	
Dr. 3H	3H						•	
Dr. 3M	3M				•		•	
Dr. 4H	4H	•	•				•	•
Dr. 4M	4M	•	•		•		•	•

Actuators

Solenoid	Purpose	Gear Range			
		Phase 0	Phase 1	Phase 2	Phase 2 ETA
EV1-N88	Blocks pressure to K1	P, R, 4	P, R, 4	P, R, 4	P, R, 4
EV2-N89	Applies B2	2, 4	2, 4	2, 4	2, 4
EV3-N90	Phases 0/1 applies K3 Phases 2/ETA blocks K3	3M, 4M	4M	P, R, N, 1, 2	P, R, N, 1, 2
EV4-N91	Phases 0/1 blocks K2 (on/off) Phases 2/ETA applies TCC (pulse width modulated)	P, R, N, 1, 2, 4	P, R, N, 1, 2, 4	P, R, N, 1, 2, 4	P, R, N, 1, 2, 4
EV5-N92	On/Off shift comfort valve	All phases ON in 1st when stopped Flashes between all gear shifts except Phases 0/1 3-4 up-shift			
EV6-N93	Electronic pressure control (pulse width modulated)	Regulates main line pressure in valve body by duty cycle signal, based on shift program, throttle position (load), and vehicle speed			
EV7-N94	On/Off shift comfort valve * See Note	Flashes between 3-4 up-shift and down-shift		Flashes on 2-3 up-shift and down- shift; On in 3rd and 4th	On in 4th
* Note:	In Phase 2, N94 changes position of the diverter valve for the B2 brake and K3 clutch. In Phase 2 ETA, N94 changes postion of K1 diverter valve to relieve oil pressure rapidly in the K1 during 3rd to 4th gear shift.				

Actuators

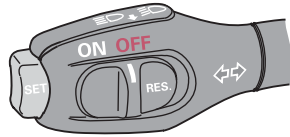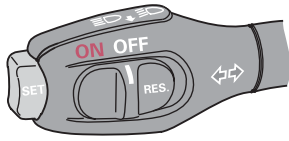

90010598.EPS

Cruise Control System

The power for the cruise control system is supplied by the TCM.

The TCM will make power available to the cruise control system when the system is switched on and the vehicle speed is greater than 30 km/h (about 19 mph). The cruise control system operates in selector lever positions D, 3, and 2.

The TCM interrupts the power supply if the selector lever is shifted into P, R, N, or 1.



90010601.EPS

Shift Lock Solenoid N110

The gearshift selector lever lock is located on the selector lever.


The solenoid is switched on with the ignition and prevents a drive position being engaged. The lock is overridden by derepressing the brake pedal. The selector lever then can be moved into a Drive position.

Park/Neutral Position (PNP) Relay J226

This is a combination relay and is integrated in the electrical center. This relay:

- Prevents the engine from starting when a Drive position is engaged
- Supplies power to the reversing lights when Reverse gear is selected

The relay is activated by a signal from the multi-function switch F125.

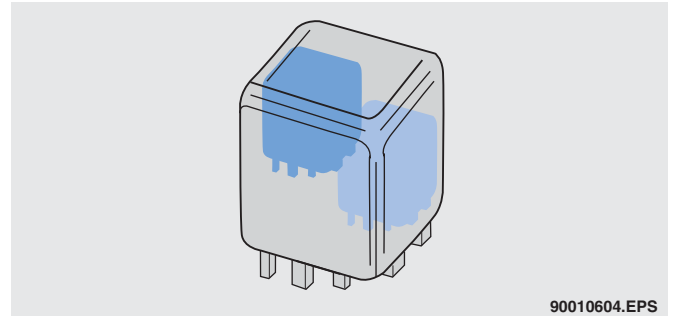


Selector Lever Display

A selector lever display is integrated in the dash panel insert, indicating the position of the selector lever at that moment.

If a fault is stored in the fault memory that is not covered by a substitute function, all the range indicator lights in the selector lever display will be illuminated.



Function Diagram (example)

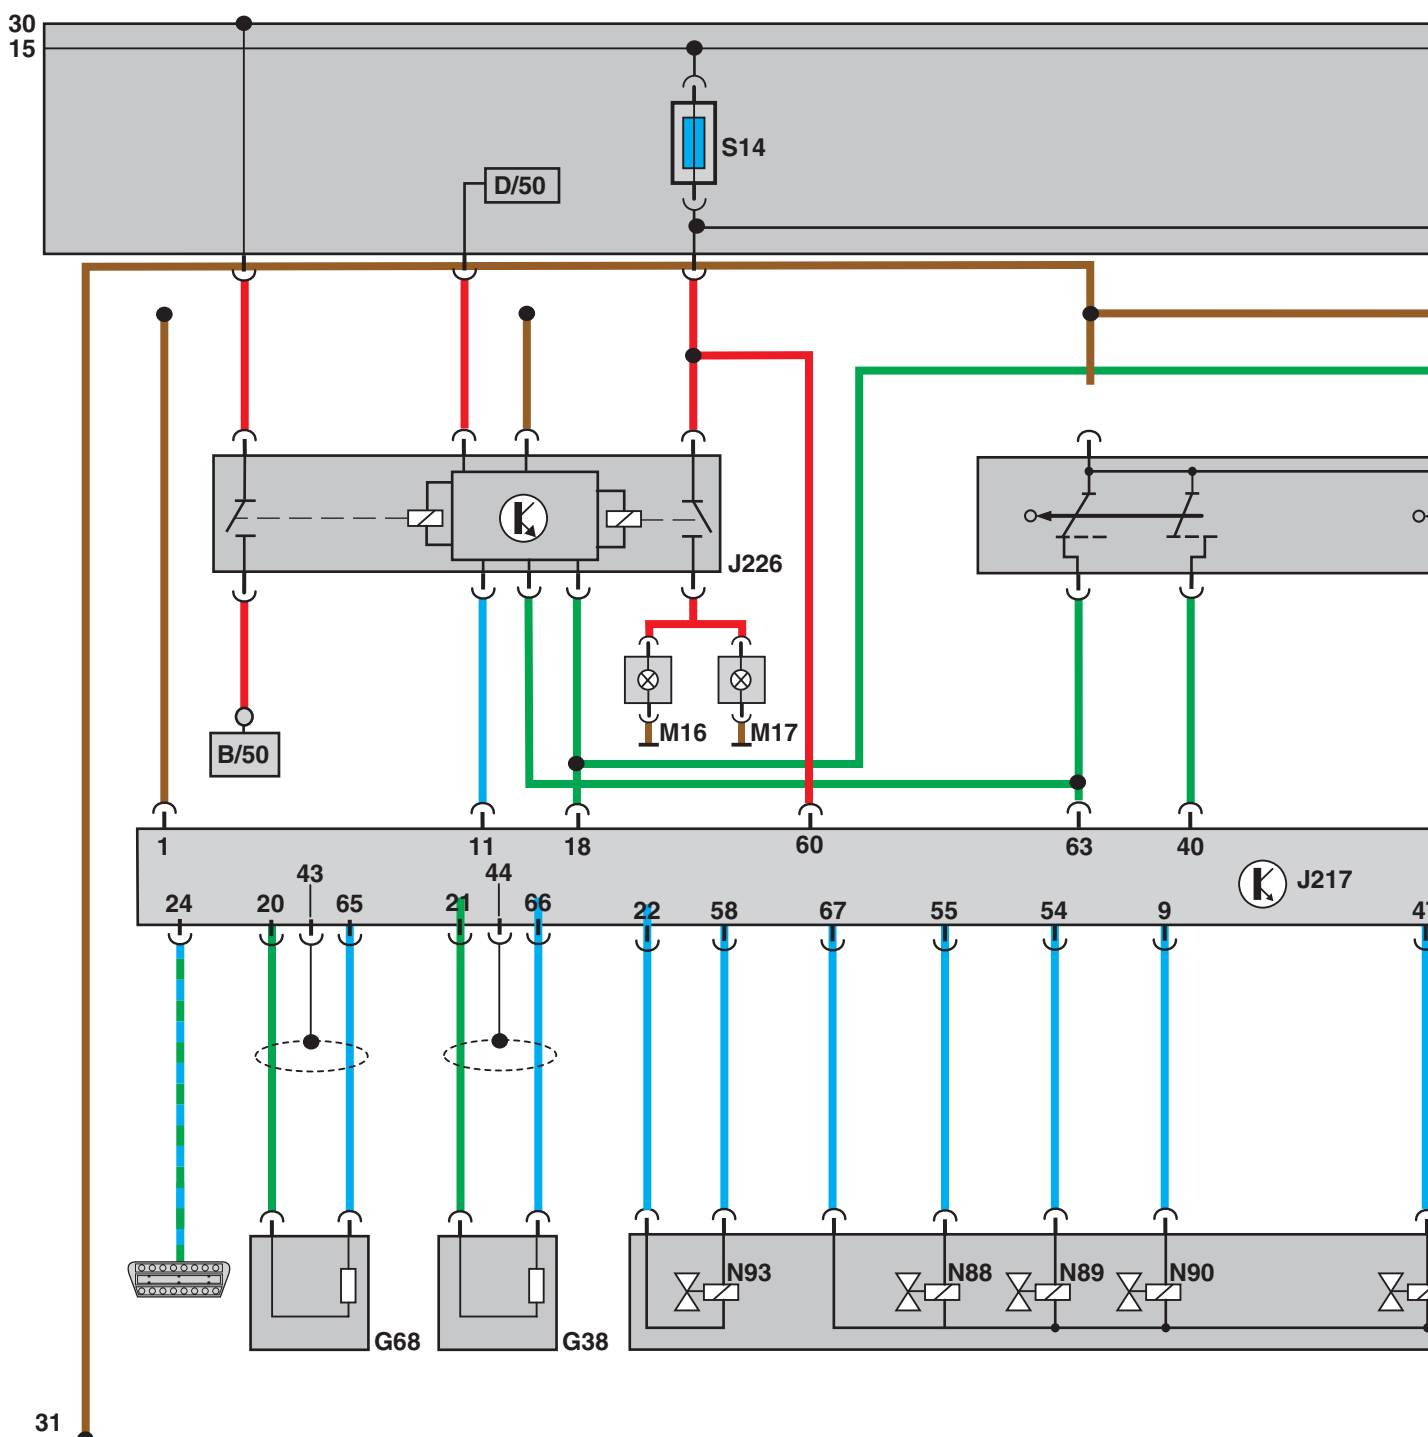


Components

B/50	Starter (terminal 50)
D/50	Ignition/Starter Switch (terminal 50)
F	Brake Light Switch
F8	Kick Down Switch
F125	Multi-function Transmission Range (TR)
Switch	
G28	Engine Speed Sensor
G38	Transmission Vehicle Speed Sensor (VSS)

G68	Vehicle Speed Sensor (VSS)
G69	Throttle Position (TP) Sensor
G93	Transmission Fluid Temperature Sensor
J226	Park/Neutral Position (PNP) Relay
J	Engine Control Module (ECM)
J217	Transmission Control Module (TCM)
L19	Automatic Transmission Console Light
M16-17	Left and Right Back-up Lights
M9-10	Left and Right Brake Lights

Function Diagram

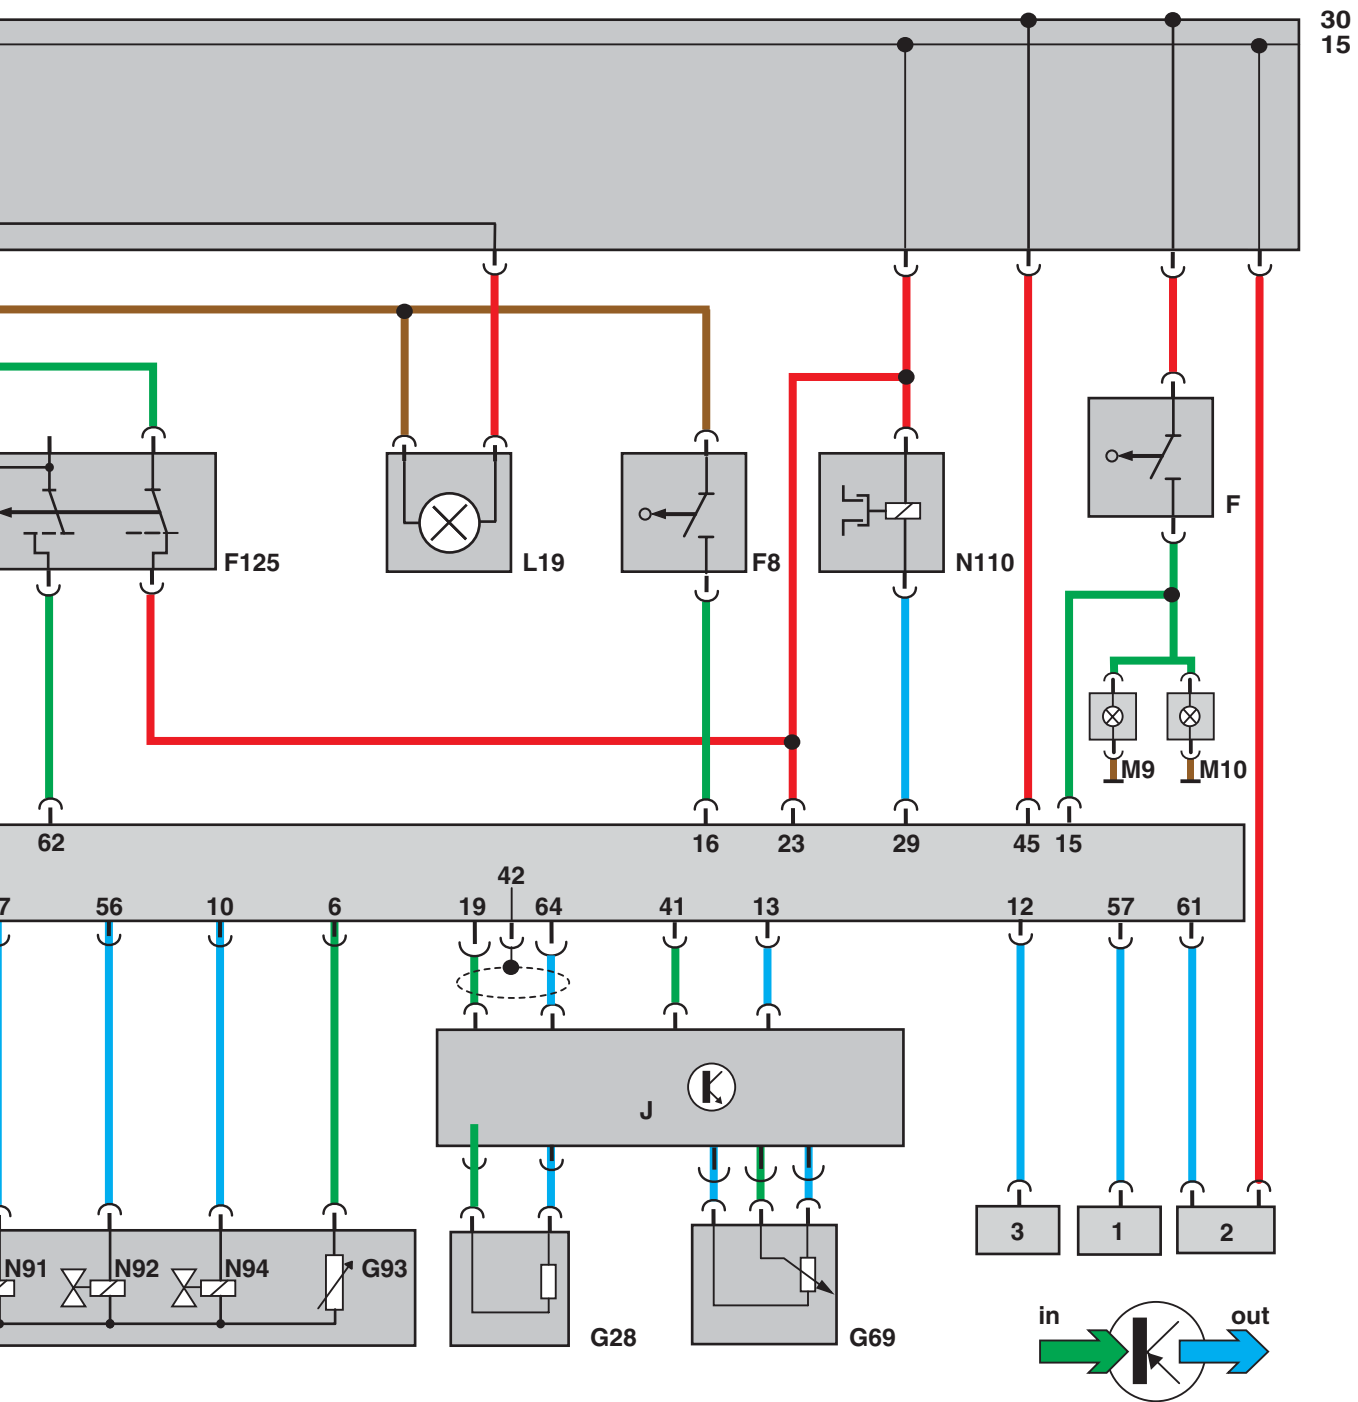

31 90010554.EPS

- N88 Solenoid Valve 1
- N89 Solenoid Valve 2
- N90 Solenoid Valve 3
- N91 Solenoid Valve 4
- N92 Solenoid Valve 5
- N93 Solenoid Valve 6
- N94 Solenoid Valve 7
- N110 Shift Lock Solenoid
- S14 Fuse



Additional Signals

- 1 Selector Lever Display
- 2 Cruise Control System
- 3 Air Conditioning

Color Codes

- Input Signal
- Output Signal
- Positive
- Ground

On-Board Diagnosis

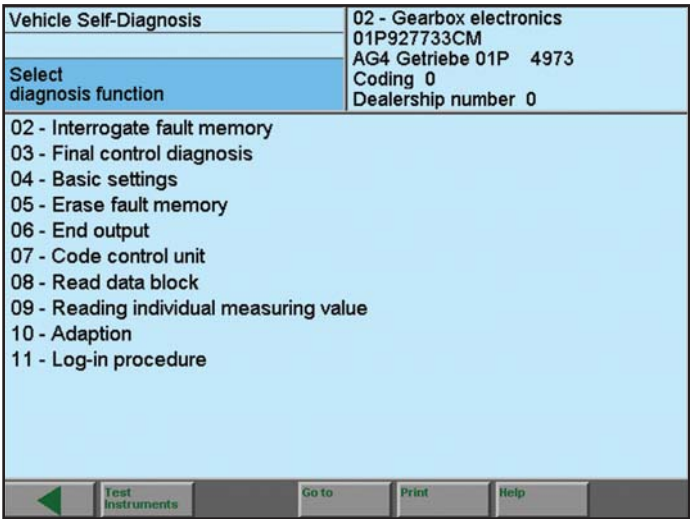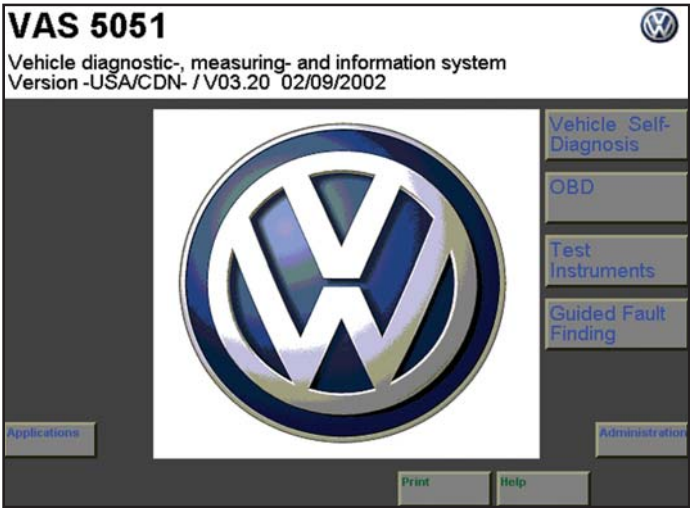

The on-board diagnosis function monitors the signals of the sensors, the **electrical** (not **mechanical**) operation of the actuators, and performs a self-test of the TCM.

If a fault occurs, substitute functions are utilized and fault descriptions are stored in the non-volatile memory of the TCM. The faults are stored in memory even if the battery and TCM are disconnected.

When faults are stored, the TCM distinguishes between static and sporadic faults. If a fault occurs only once within several driving cycles, it is stored as a sporadic fault.

Sporadic malfunctions are stored in the memory and are displayed as “sporadic malfunctions” when retrieved by the VAS 5051 scan tool. “Sporadic” appears on the display in such cases. If the printer is switched on, sporadic malfunctions are printed out after the malfunction is addressed.

If the fault is no longer recognized over a distance of about 1000 km (625 miles) or 20 hours, it is automatically erased from memory. If the fault continues to exist within the stored drive cycles, it is stored as a static fault.

Inoperative CAN-Bus signals will be detected by the control module on vehicles equipped with CAN-Bus. Faulty CAN-Bus wiring e.g. open circuits, can be directly detected. Conclusions cannot be drawn as to where the CAN-Bus wiring is faulty until all control module DTC memories have been interrogated.


VAS 5051/5052

The following functions are available by selecting **02 Gearbox Electronics**:

- 02** Interrogating fault memory
- 04** Starting basic setting
- 05** Erasing fault memory
- 06** Ending output
- 08** Reading measured value block

Function 02, Interrogating Fault Memory

The sensor/actuators in color are monitored by the TCM.

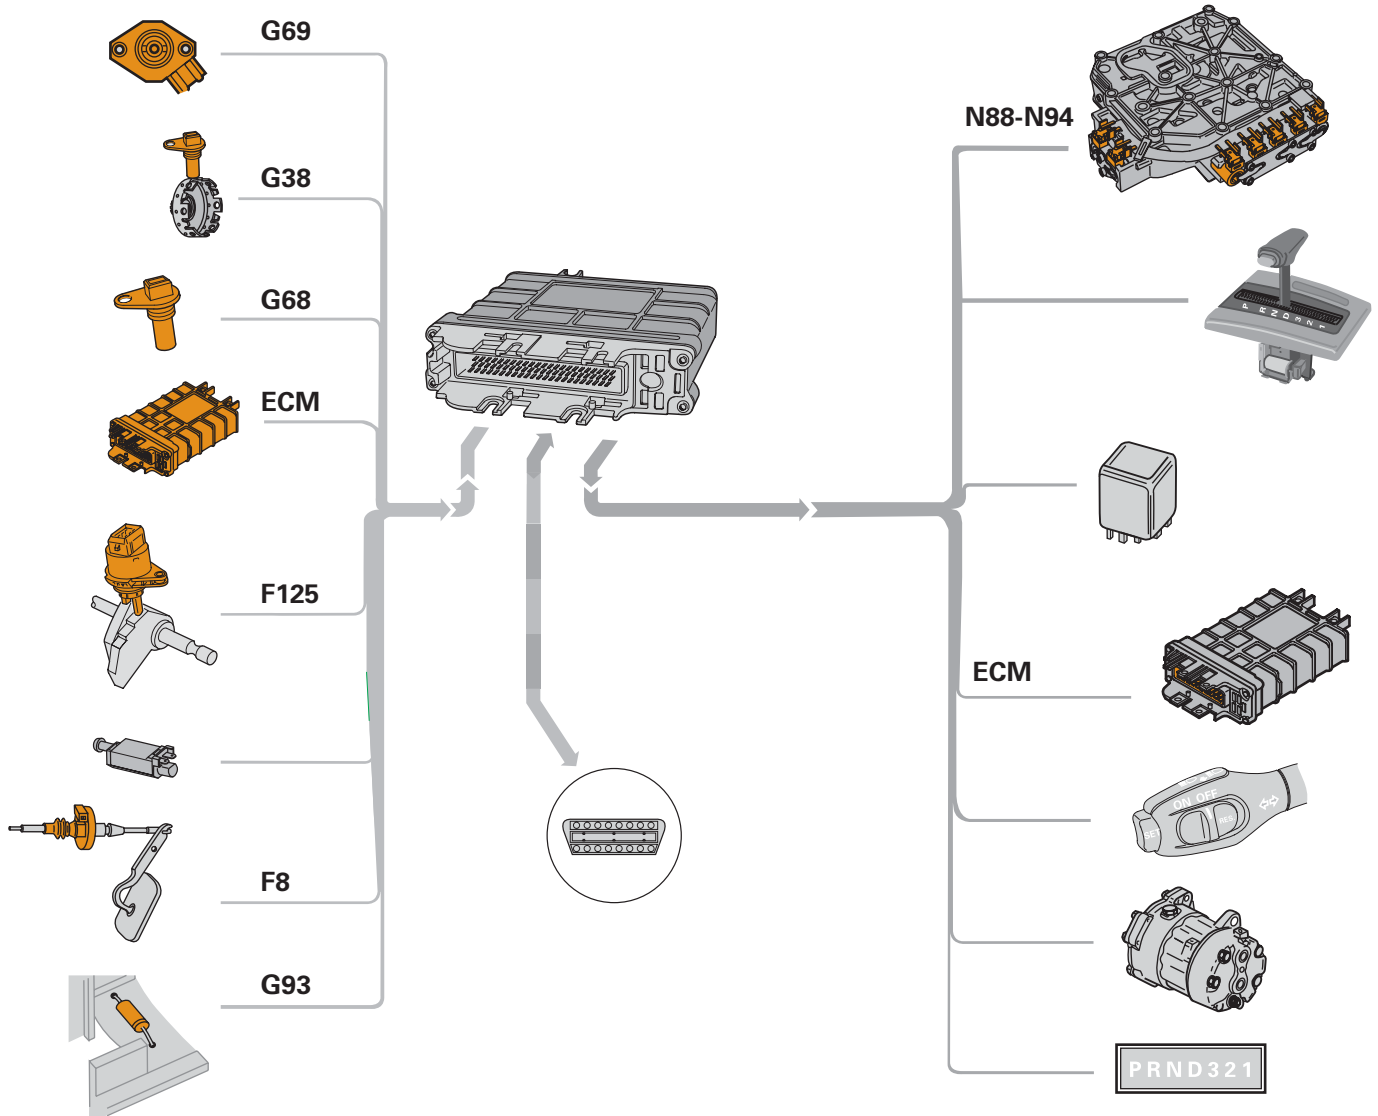

On-Board Diagnosis

Function 04, Basic Settings Display Group 0

After performing certain repairs to the transmission or to the engine, it is necessary to erase the adaptive-shifting values. An example would be after replacing the throttle valve control module, transmission hardware, software, or TCM.



Always refer to current service information for the exact procedure of when and how to initiate the Basic Settings.

Vehicle Self-Diagnosis	02 - Gearbox electronics 01P927733CM AG4 Getriebe 01P 4973 Coding 0 Dealership number 0
Select diagnosis function	
02 - Interrogate fault memory	
03 - Final control diagnosis	
04 - Basic settings	
05 - Erase fault memory	
06 - End output	
07 - Code control unit	
08 - Read data block	
09 - Reading individual measuring value	
10 - Adaption	
11 - Log-in procedure	


Test Instruments Go to Print Help

Vehicle Self-Diagnosis	02 - Gearbox electronics 01P927733CM AG4 Getriebe 01P 4973 Coding 0 Dealership number 0
04 - Basic settings	
Read data block	
Basic settings	

Test Instruments Go to Print Help

Function 08, Reading Measured Value Blocks

The signals of the components shown in color can be tested in Function 08, Reading Measured Value Blocks.

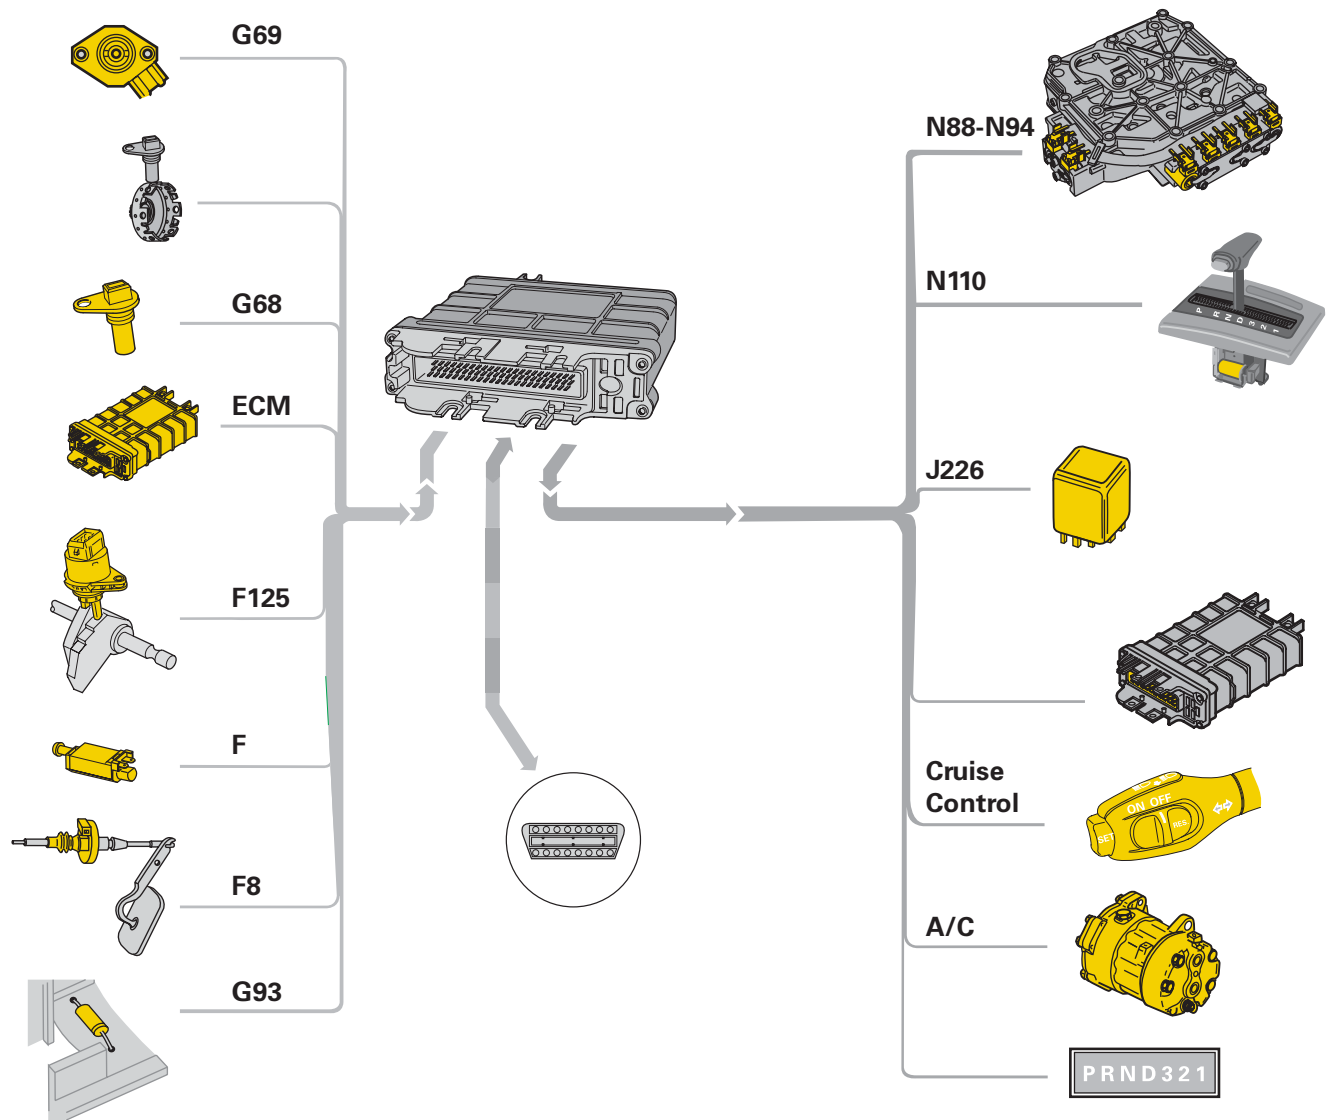

90010610.EPS

Notes

[illegible]

Knowledge Assessment

An on-line Knowledge Assessment (exam) is available for this Self-Study Program.

The Knowledge Assessment may or may not be required for Certification.

You can find this Knowledge Assessment at:

www.vwwebservice.com

From the vwwebservice.com Homepage, do the following:

- Click on the Certification tab
- Type the course number in the Search box
- Click “Go!” and wait until the screen refreshes
- Click “Start” to begin the Assessment

For Assistance, please call:

Certification Program Headquarters

1 - 877 - CU4 - CERT

(1 - 877 - 284 - 2378)

(8:00 a.m. to 8:00 p.m. EST)

Or, E-Mail:

Comments@VWCertification.com

Four-Speed Automatic Transmissions

Volkswagen of America, Inc.
3800 Hamlin Road
Auburn Hills, MI 48326
Printed in U.S.A.
October, 2003